




Ignition Coil-On-Plug (18.20.44)


Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the engine cover. For additional information, refer to [Engine Cover - 4.4L \(12.30.50\)](#) (Section 501-05)


3. Remove the ignition coil cover.
 - ▶ Release from the 2 clips.

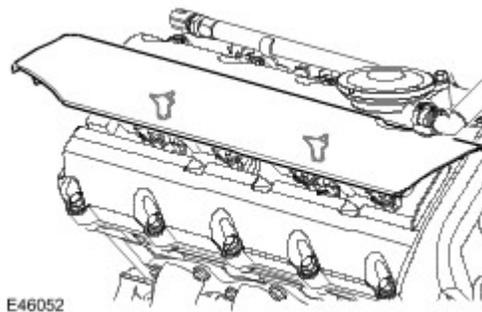

4. Disconnect the ignition coil-on-plug electrical connector.

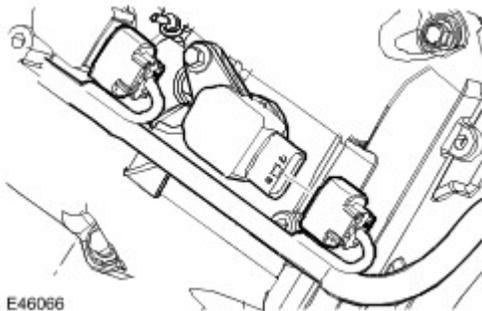

5. Remove the ignition coil-on-plug.
 - ▶ Remove the bolt.
 - ▶ Remove and discard the seal.

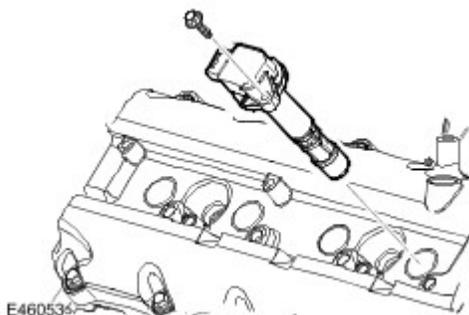

Installation

1. To install, reverse the removal procedure.
 - ▶ Tighten the bolt to 6 Nm (4 lb.ft).