

PUBLISHED: 18-NOV-2019
2020.0 DEFENDER (LE), 501-10


SEATING

THIRD ROW SEAT (G2410325)

REMOVAL

 **WARNINGS:**

- To avoid accidental deployment, the Restraints Control Module (RCM) backup power supply must be depleted. Wait at least 1 minute after disconnecting the startup battery ground cable(s) before doing any repair or adjustment to the Supplementary Restraint System (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.
- Do not probe Supplementary Restraint System (SRS) electrical connectors.

 **NOTES:**

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Make the Supplementary Restraint System (SRS) safe.


Refer to: [Supplementary Restraint System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.




Remove the loadspace floor trim.

4.

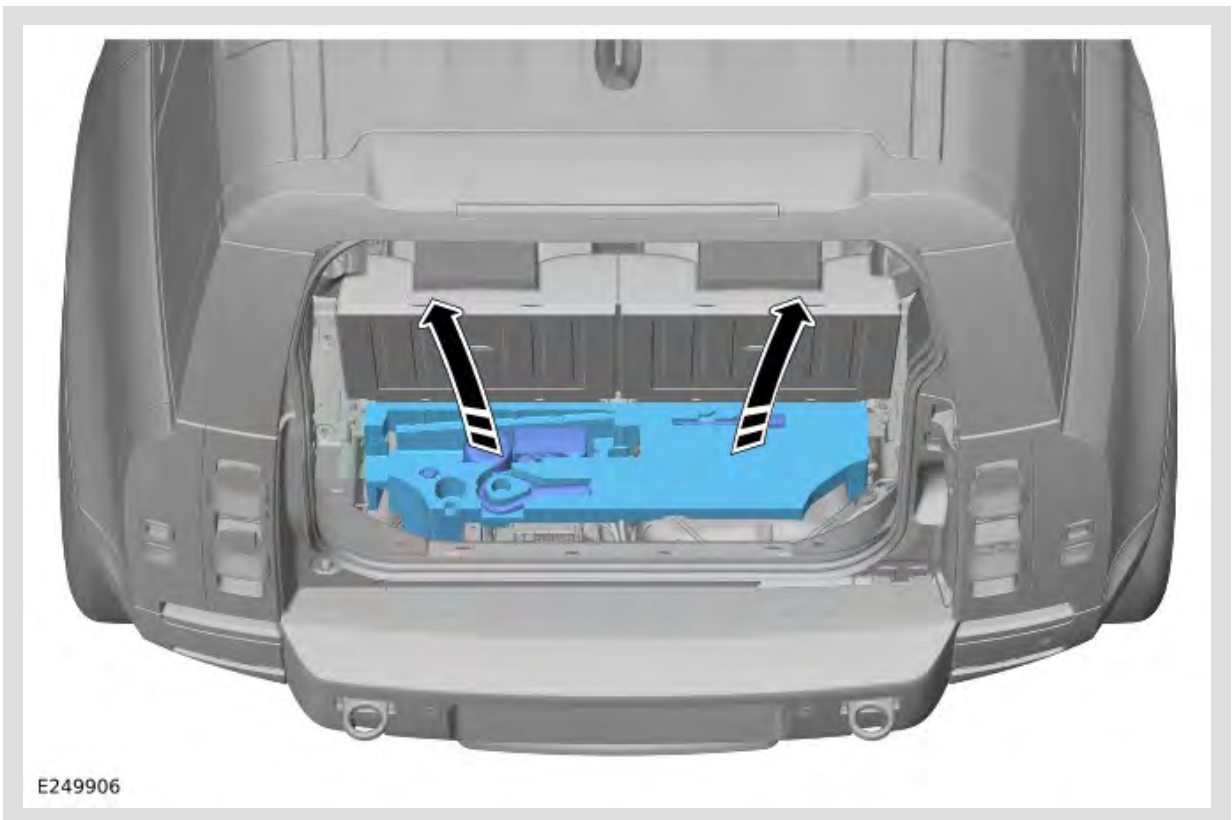


Remove the loadspace liner tray.

5.


 **NOTE:**

This step needs to be completed both sides.

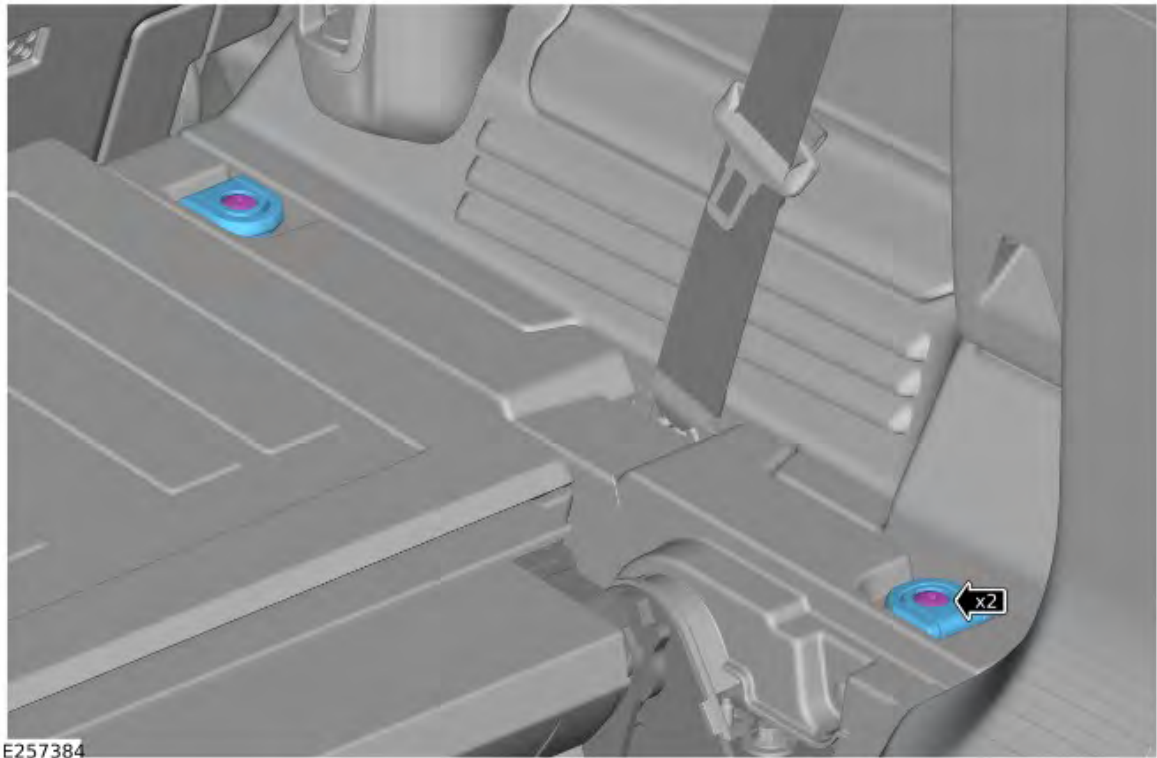


- Remove the 2 bolts.
- Remove the 2 fixed anchor points.

6.


 **NOTE:**

This step needs to be completed both sides.

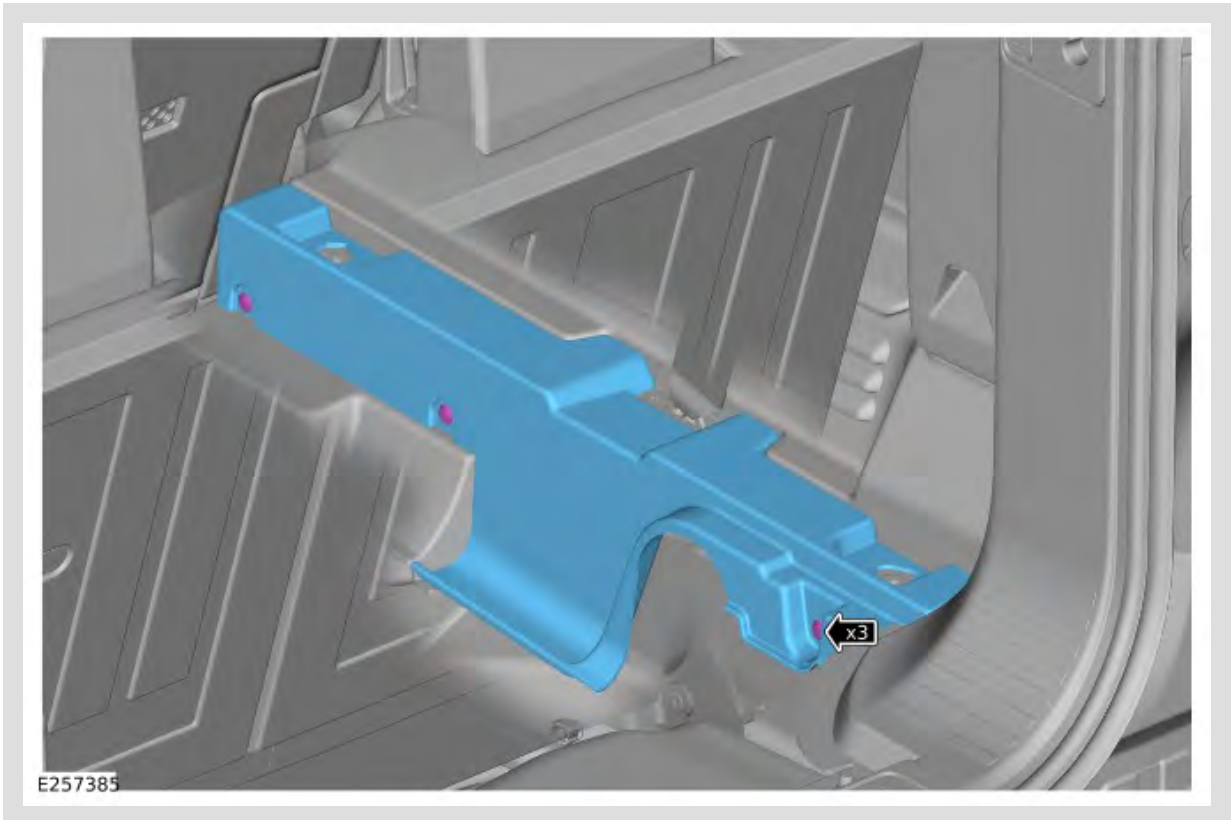


- Remove the 3 clips.
- Remove the loadspace lower side trim.

7.

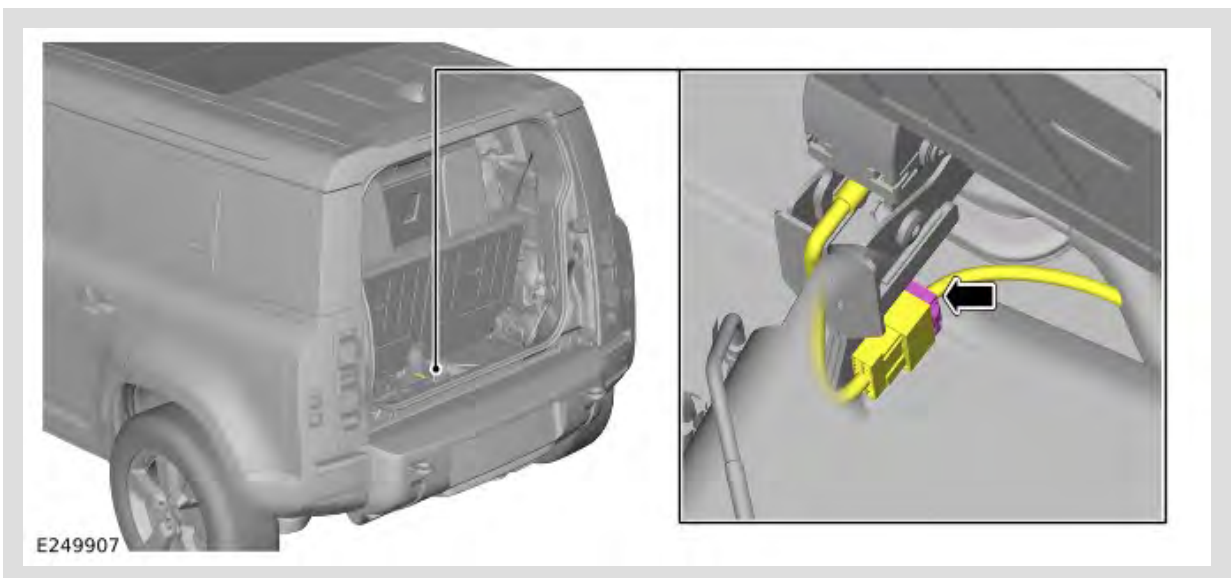


Disconnect the third row seat electrical connector.

8.

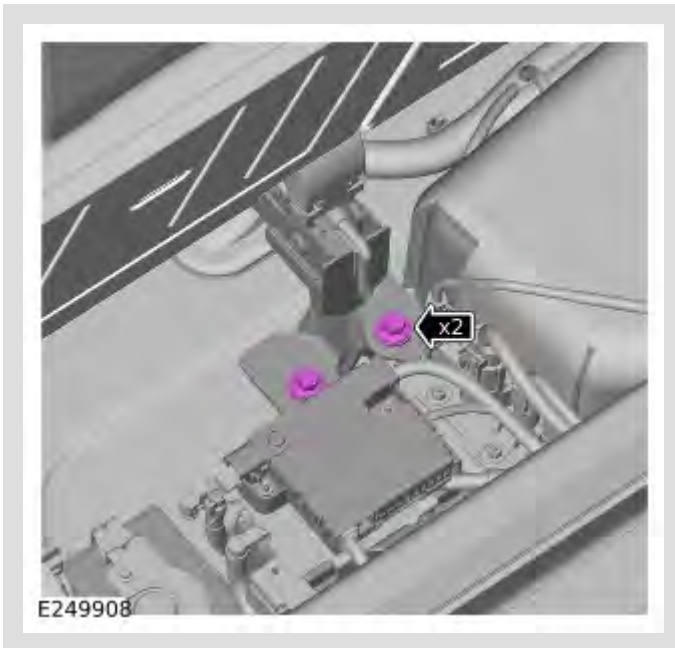


Remove the 2 rear seat track bolts.

9.

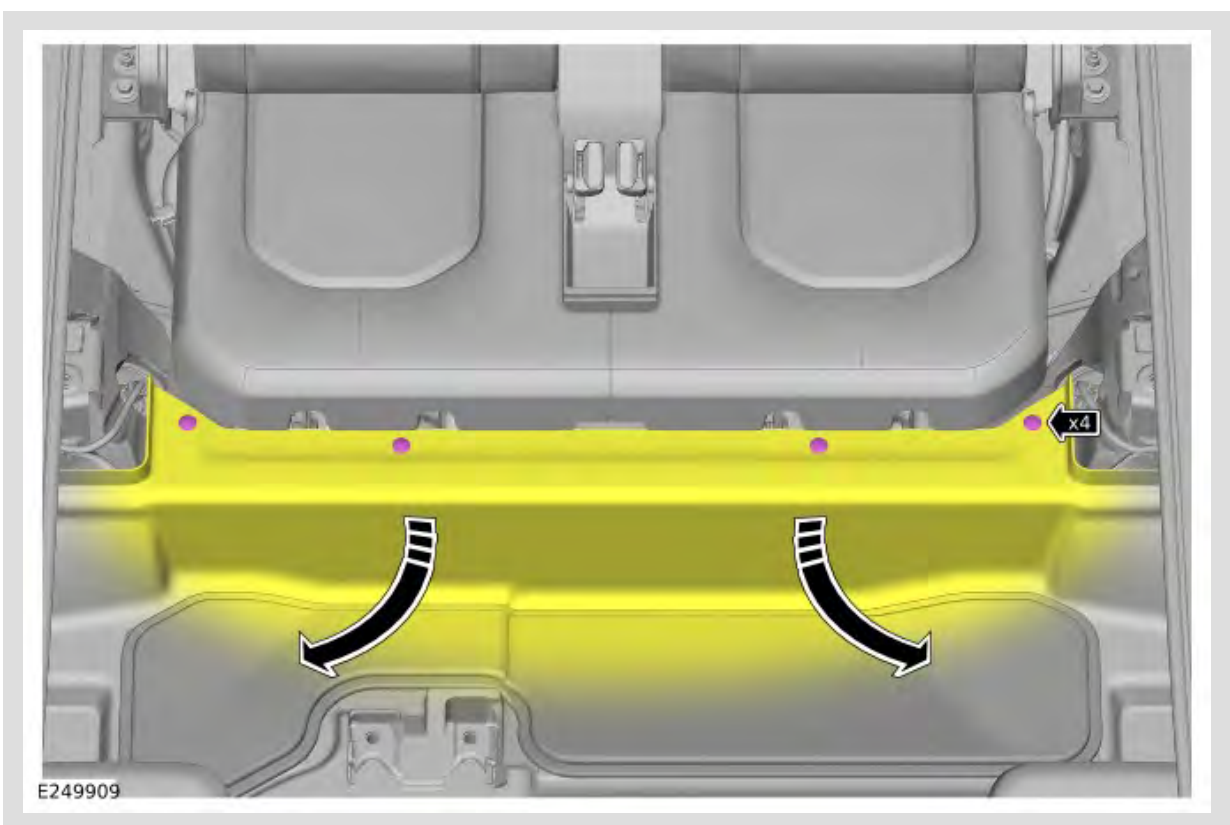


- Remove the 4 clips.
- Reposition the rear floor carpet.

10.

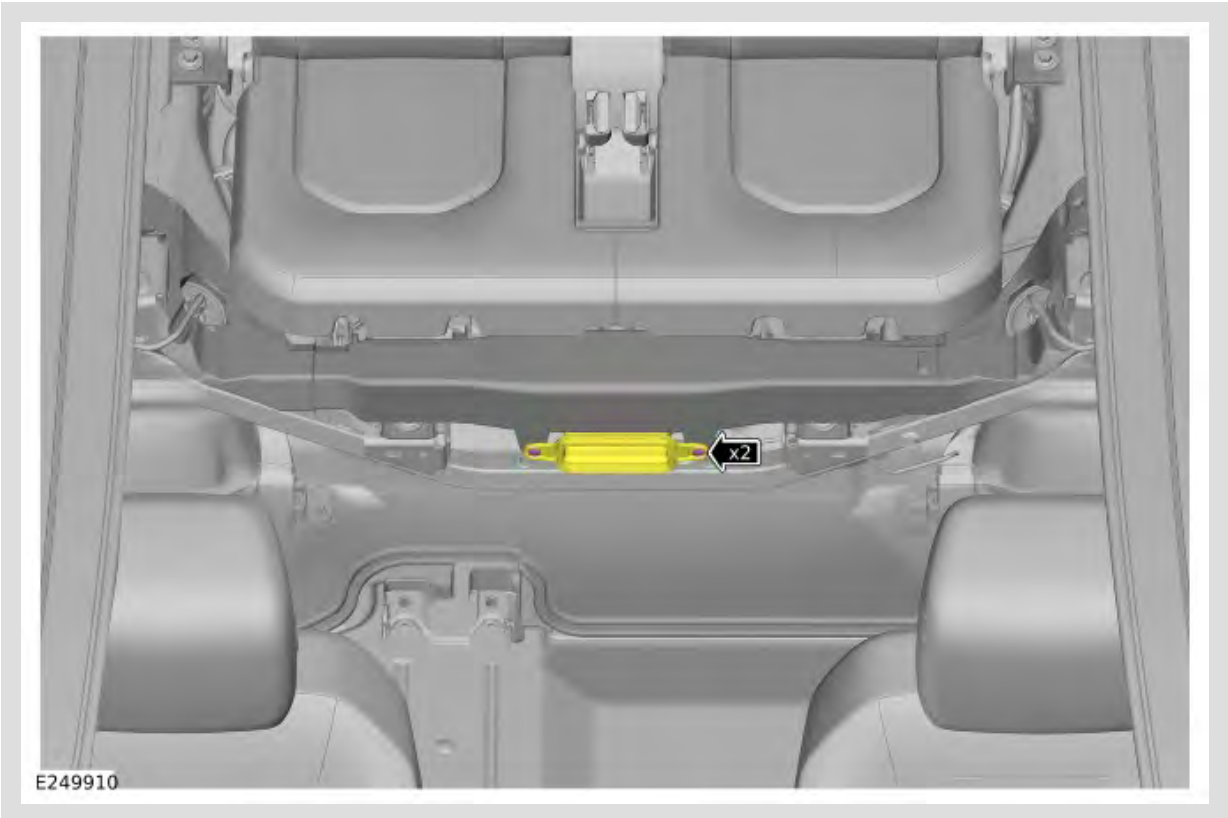


Remove the 2 Mild Hybrid Electric Vehicle (MHEV) battery cooling duct clips.

11.

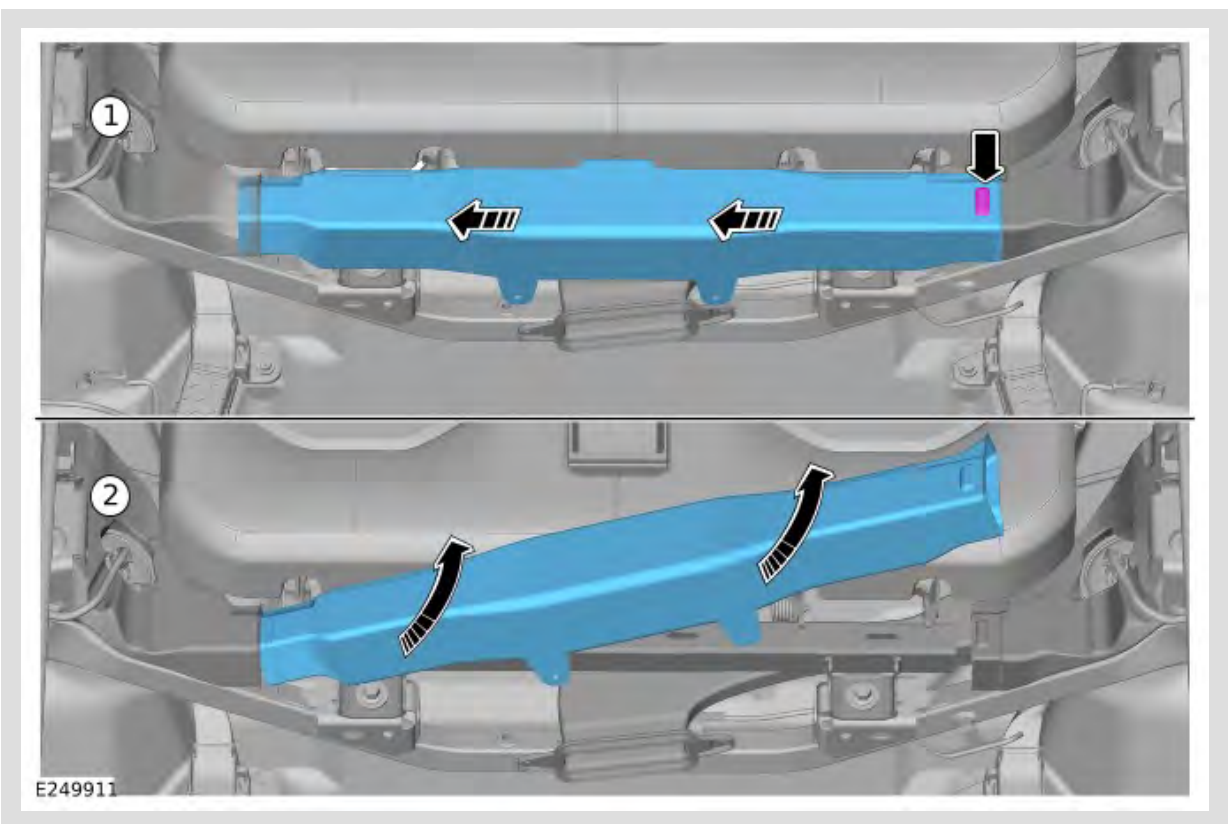


Release and remove the third row seat footwell air duct as illustrated.

12.

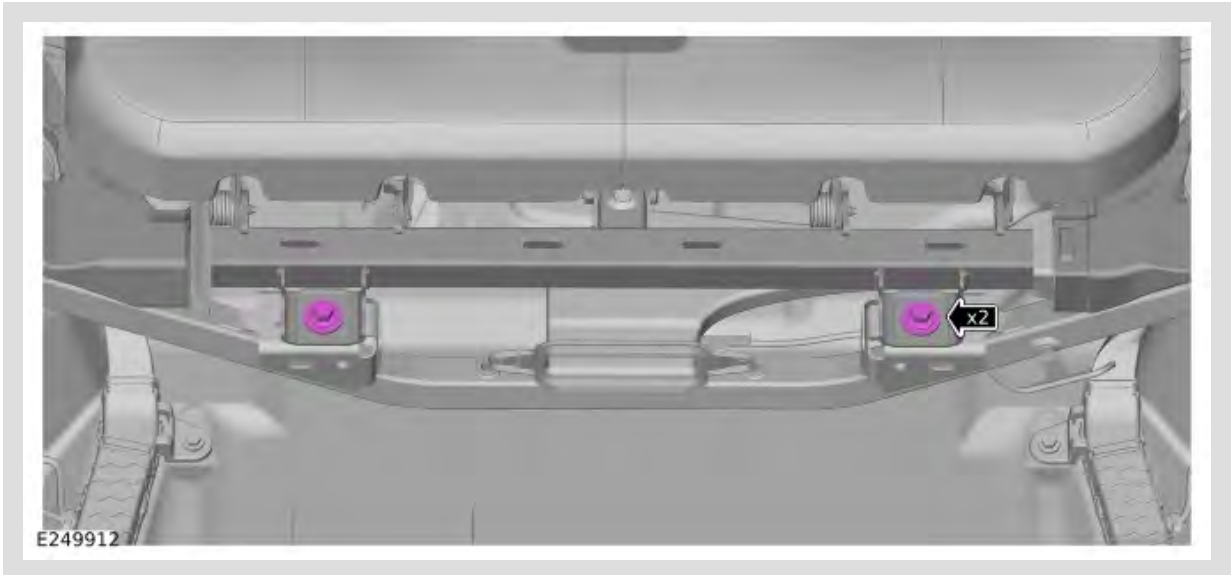

Remove the 2 front seat track bolts.

13.

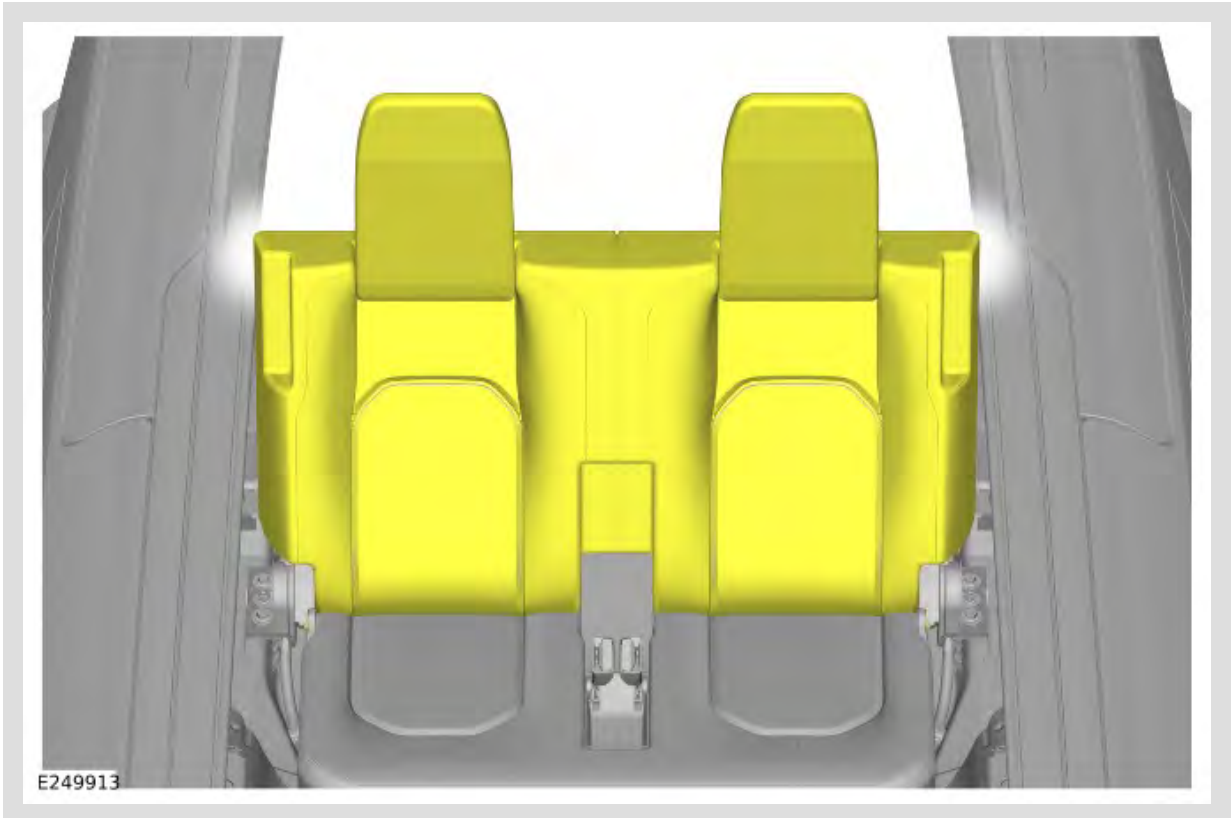

Fold the left and right third row seat backrest.

14.




Remove the third row seat 4 side bolts.

⚠ WARNING:

The components may be heavy or awkward to handle. The assistance of another technician will be required.

ⓘ CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

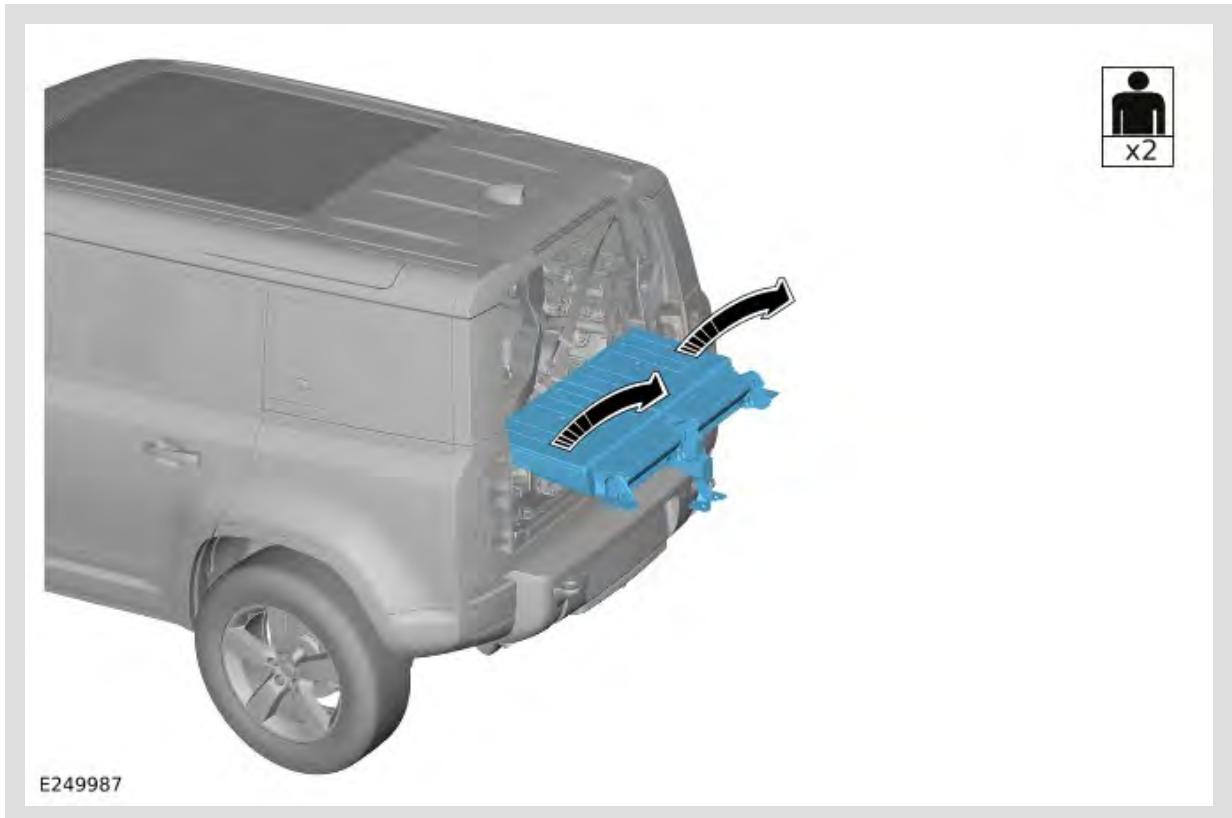

With assistance, remove the third row seat assembly.

INSTALLATION

1.



WARNING:

The components may be heavy or awkward to handle. The assistance of another technician will be required.



CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

With assistance, install the third row seat assembly.

2.

- Install and tighten the third row seat 4 side bolts.

Torque: 40Nm

3.

Fold the left and right third row seat backrest.

4.

- Install and tighten the 2 front seat track bolts.

Torque: 40Nm

5.

Install the third row seat footwell air duct.

6.

Install the 2 Mild Hybrid Electric Vehicle (MHEV) battery cooling duct clips.

7.

- Reposition the rear floor carpet.
- Install the 4 clips.

8.


- Install and tighten the 2 rear seat track bolts.

Torque: 50Nm

9.

Connect the third row seat electrical connector.

10.

 **NOTE:**

This step needs to be completed both sides.

- Install the loadspace lower side trim.
- Install the 3 clips.

11.

 **NOTE:**

This step needs to be completed both sides.

- Install the 2 fixed anchor points.
- Install and tighten the 2 bolts.

Torque: 24Nm

12. Install the loadspace liner tray.

13. Install the loadspace floor trim.

14. Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).