

PUBLISHED: 20-APR-2020
2020.0 DEFENDER (LE), 206-00

BRAKE SYSTEM - GENERAL INFORMATION

INTEGRATED POWER BRAKE ASSEMBLY MODE

[G2651033]

GENERAL PROCEDURES

85.70.06	INTEGRATED POWER BRAKE ASSEMBLY MODE - ENABLE / DISABLE	ALL DERIVATIVES	0.20	USED WITHINS
-----------------	--	----------------------------	-------------	---------------------

GENERAL EQUIPMENT

EQUIPMENT NAME
Jaguar Land Rover approved diagnostic equipment

ACTIVATION

1. Connect the Jaguar Land Rover (JLR) diagnostic equipment and start a new session.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)

2.
 - Navigate to control computer (ECU) diagnostics
 - Select " Anti-Lock Brake System Control Module (ABS)" from the list
 - Select "Set Assembly Mode"
 - Select "Enable" from within the application.

3.
 - Save the session and disconnect the JLR diagnostic equipment.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)
 - Set the ignition to the OFF position.

DEACTIVATION

1. Connect the JLR diagnostic equipment and enter the saved session.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)

2.
 - Navigate to ECU diagnostics
 - Select " ABS" from the list
 - Select "Set Assembly Mode"
 - Select "Disable" from within the application.

3.
 - Exit the session and disconnect the JLR diagnostic equipment.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)
 - Assess the brake pedal both statically and dynamically.