




WINDSCREEN WIPER AND WASHER OPERATION

The illustration below locates and identifies the main components of the windscreen and washer system which is operated by a multi-switch on the right hand side of the steering column.

All functions of the system are described in the following paragraphs.

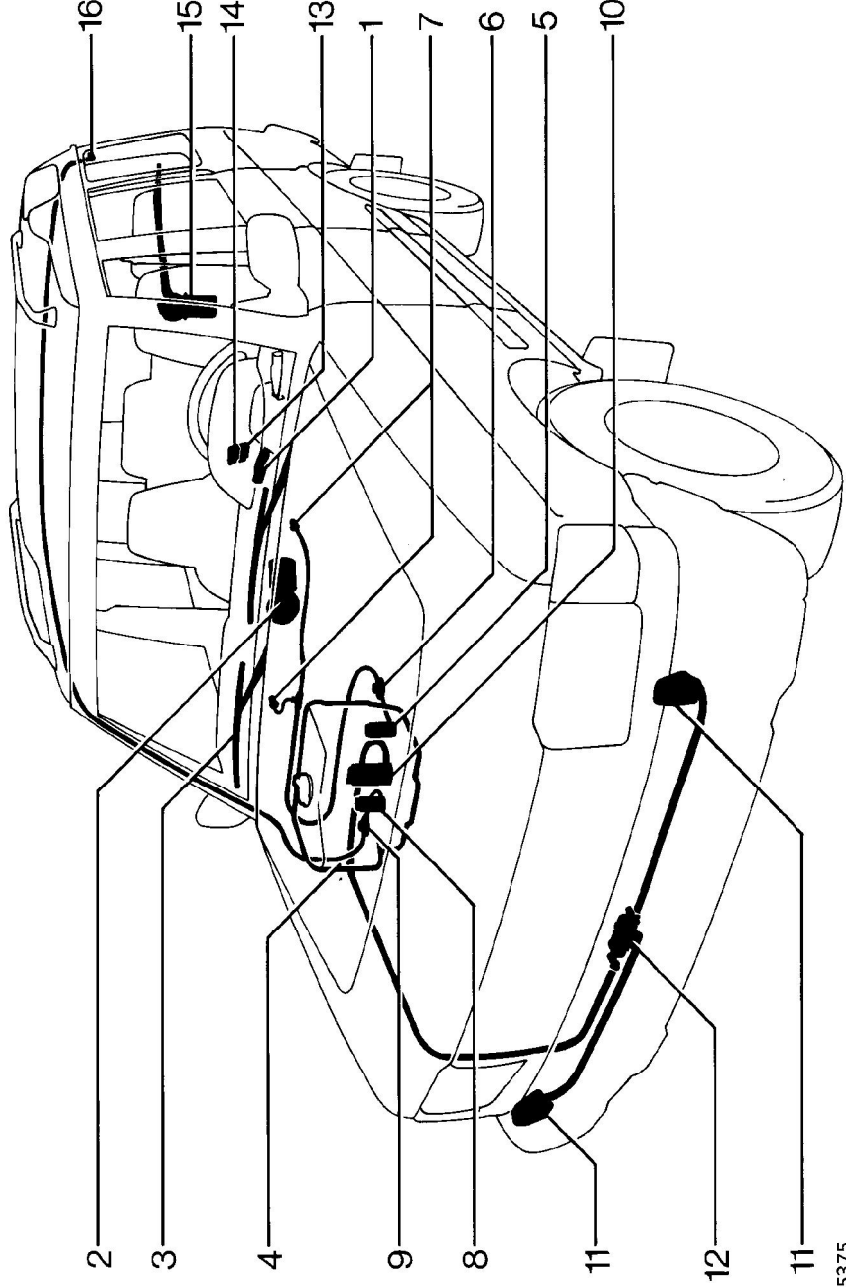

J5375

- | | |
|----------------------------------|--|
| 1. Multi-switch | 10. Headlamp power wash motor/pump |
| 2. Wiper motor | 11. Headlamp power washer jet |
| 3. Wiper arm/blade | 12. Non return valve |
| 4. Washer reservoir | 13. Rear window wiper switch |
| 5. Windscreen washer motor/pump | 14. Rear window washer switch |
| 6. Non return valve | 15. Rear window wiper motor, arm and blade |
| 7. Washer jet | 16. Washer jet |
| 8. Rear window washer motor pump | |
| 9. Non return valve | |

84 WIPERS AND WASHERS

Wash wipe function

With the ignition switched on, power is supplied via a fuse to the multi-switch, a control unit and a park switch which is driven by the wiper motor.

Single wipe A


Pull the lever down and release immediately.



NOTE: With the lever held down, the wipers will continue operating at high speed until it is released.

Intermittent wipe B

Turn switch to second position. **D**

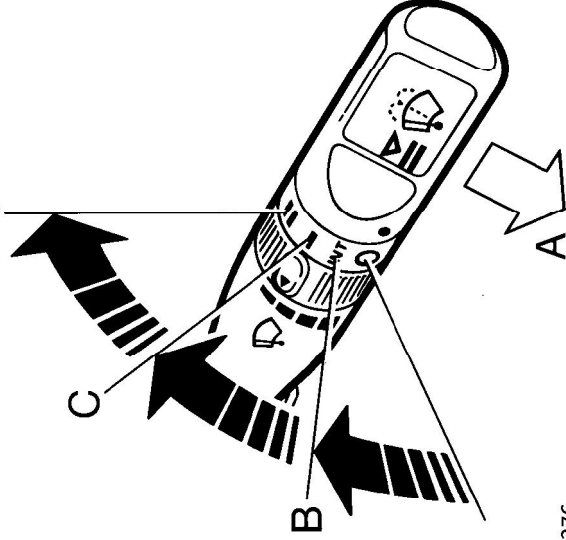

J5376

Normal speed wipe C

Turn switch to second position.

Fast speed wide D


Turn switch to third position.

Variable delay (intermittent wipe)

Rotate the switch to vary the delay between wipes.

Windscreen washer E

Pull the lever towards the steering wheel. The windscreen washers will operate in conjunction with the wipers for as long as the lever is held in this position.

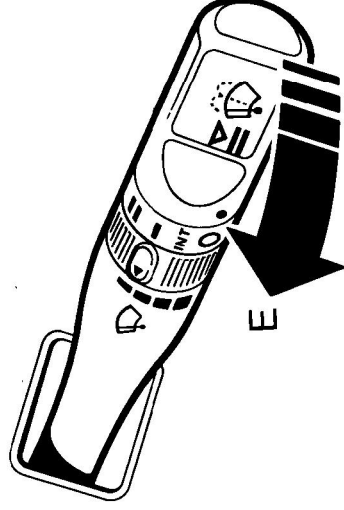

J5377

Headlamp washers


The headlamp washers operate automatically whenever the windscreen washers are operated, provided the headlamps are illuminated and switched to dipped beam. For continuous washing, hold the windscreen washer control in the washposition E.

REAR WINDOW WIPER AND WASHER OPERATION

The illustration J5375 also locates and identifies the main components of the rear window wiper and washer system which is operated by two switches mounted on the right hand side of the instrument binnacle.

Rear window wipe A

Press the switch to operate: after continuously wiping 3 or 4 times, the wiper operates intermittently (approx once every 6 seconds) until switched off.

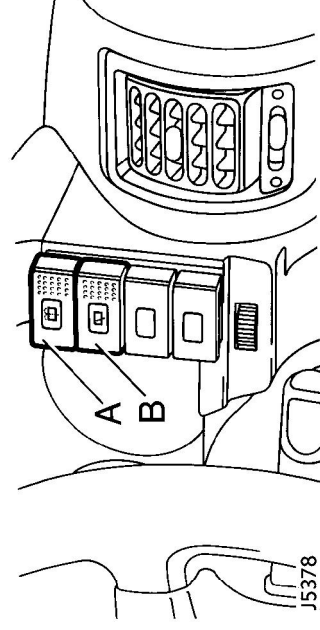

J5378

Rear window washer B

Press and hold the switch for the required duration of rear screen washing. The wiper operates automatically during washing and continues for a further 3 wipes after the switch is released.