





WASHER RESERVOIR

Service repair no - 84.10.03.

Remove

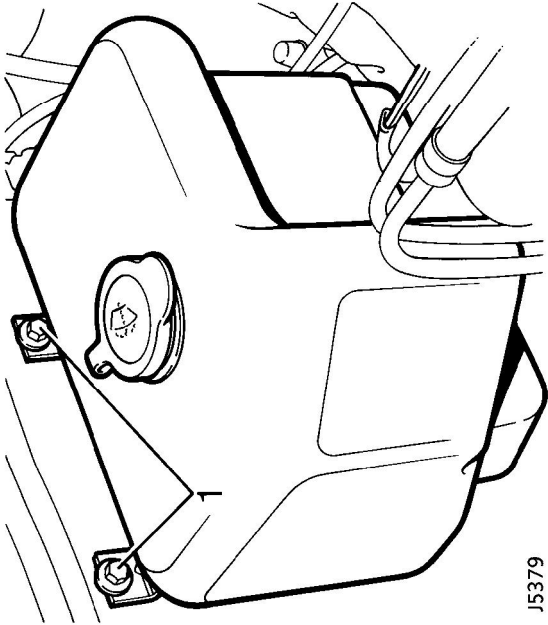

1. Remove two bolts securing top of reservoir.

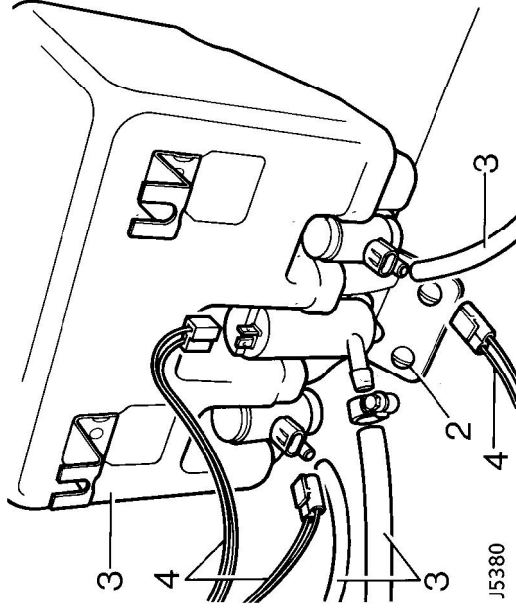

2. From underneath the wheelarch remove two bolts securing base of reservoir.
3. Withdraw reservoir and disconnect tubing from washer pumps and power wash.
4. Disconnect electrical leads from pumps.


Refit

5. Reverse removal procedure. 1 to 4.

WASHER PUMP - WINDSCREEN, REAR WINDOW OR POWER WASH

Service repair no - 84.20.21.

Remove

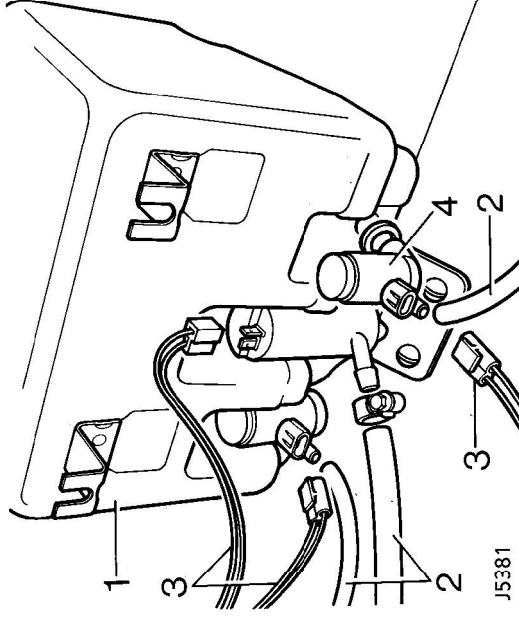

1. Remove washer reservoir. **See Washer reservoir**
2. Disconnect washer tubing from pump.
3. Disconnect electrical leads from pump.
4. Pull top of pump away from its location in reservoir and remove pump.
Note position of sealing gasket in reservoir.

Refit

5. Reverse removal procedure. 1 to 4.