

# Locks & alarm

---

## KEY AND HANDSET NUMBERS

You have been supplied with two identical remote control handsets and a pair of identical keys which operate all locks, including the rear door and petrol flap.

The key number is stamped on a tag attached to the key ring. Check that the key number has been entered in the space provided on your Security Information card.

If the key or handset is lost, contact a Land Rover dealer, who can supply a replacement or additional keys and handsets.

## WARNING

***Keep the Security Information card, key tag, spare key and handset in a safe place - NOT IN THE VEHICLE!***

---

## LOCKING USING THE KEY

### Front doors

Turn the key towards the front of the vehicle to lock and towards the rear to unlock.

***NOTE:*** *Turning the key also arms and disarms the anti-theft alarm.*

### Rear door

Turn the key towards the right side of the vehicle to lock and to the left to unlock.

## Locking the doors without activating the alarm

By turning the key to the lock position and then holding it in that position for at least five seconds, the doors will be locked but the alarm will remain inactive.

### Central locking

By turning the key in the driver's door, or operating the locking button on the driver's door (from inside the vehicle), all the door locks can be operated simultaneously.

### Door sill locking buttons

From inside the vehicle, each door can be individually locked by depressing the appropriate button.

***NOTE:*** *As a precaution against accidentally locking your keys inside, it is not possible to use the locking buttons to lock the front doors when you are leaving the vehicle - THE KEY OR HANDSET MUST BE USED!*