
Bulb replacement

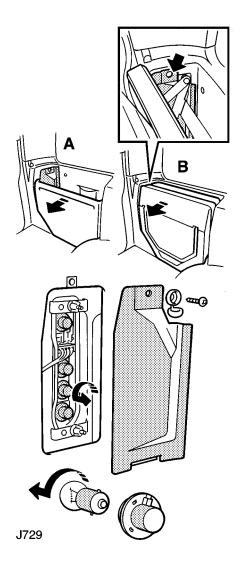

REAR LIGHT CLUSTER

(Stop/tail, reverse, direction indicator & fog guard lights)

To gain access to the light cluster, either: remove the side pocket cover (picture 'A') or, half pull out the inward facing seat (picture 'B'), as applicable. Use a small screwdriver to lever the fastener cover free (the fastener is located by the arrow in the inset) and then unscrew the fastener to remove the access panel (as shown in the lower illustration).

Twist and remove the appropriate bulb holder, then push and twist to release the bulb.