




**BRAKE AND CLUTCH PEDAL SWITCHES/VENT VALVES**


Service repair no - 19.75.34 - Clutch Switch  
 Service repair no - 19.75.35 - Brake Switch

**Remove**

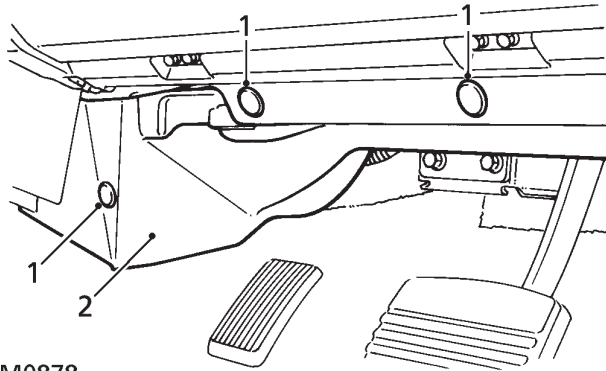

19M0878

1. Remove 3 studs securing driver's side fascia closing panel.
2. Release and move closing panel aside.

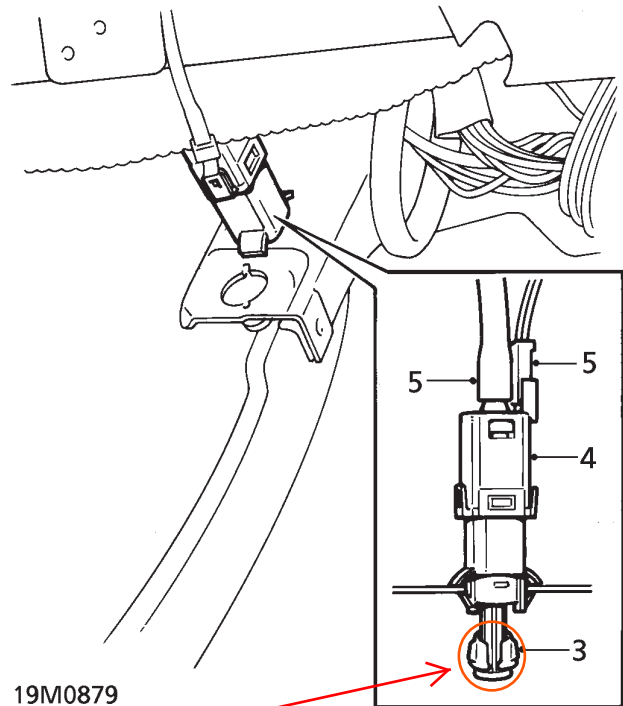

19M0879

what position should this sleeve be in during normal operation?

3. Locate and release locking sleeve.
4. Release switch/vent valve from pedal bracket.
5. Disconnect vacuum hose and harness connector from switch.
6. Remove switch.

**Refit**

7. Reverse removal procedure.

**NOTE: Ensure locking sleeve is correctly positioned.**