



## FUSE BOX - INTERIOR

### Right Hand Drive shown

The interior fusebox is fitted below the steering column, behind the trim panel. It comprises of three integral units. 'A' Main fusebox, 'B' Satellite 2, 'C' Satellite 1.  
A label in the fusebox cover shows the circuits protected, the fuse rating and their locations. Access is by releasing the fixing screws and lowering the panel.

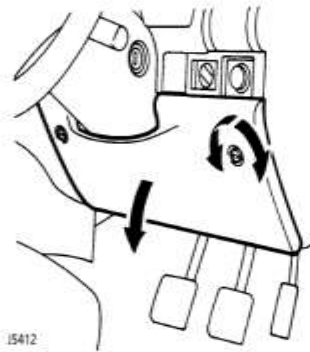

IS412

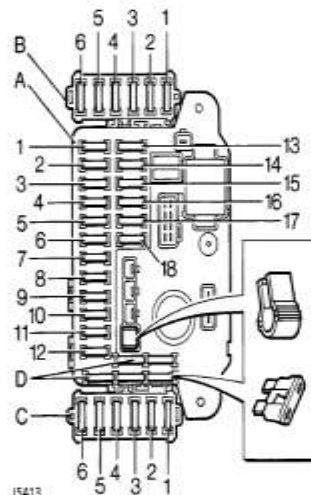

IS413

#### 'A' Main fusebox

1. Stop lights, direction indicators
2. LH side light
3. Radio/cassette/CD player
4. RH headlight main beam
5. LH headlight main beam
6. Cigar lighter
7. Airbag SRS
8. RH side lights
9. Rear fog guard lights
10. RH headlight dipped beam
11. LH headlight dipped beam
12. Multi-function unit
13. Ignition feed for Multi-function unit
14. Instruments, reversing lights
15. Air conditioning, windows
16. Washers & wipers - front
17. Starter, glow plug
18. Wash/wipe - rear, mirrors, cruise control

#### 'B' Satellite 2

1. Electric windows - front
2. Electric windows - rear
3. Anti-lock braking
4. Central door locking
5. Electric sun roof
6. Trailer lights

#### 'C' Satellite 1

1. Anti-theft alarm
2. Headlight washers
3. Engine management
4. Anti-lock brakes
5. Anti-theft alarm
6. Rear air conditioning, heater

#### 'D' Spare fuses (5 off)