


FUSE BOX - ENGINE COMPARTMENT

The fusebox is located on the right side of the engine compartment. The circuits protected and their locations are shown on the inside of the fusebox cover. To change a main circuit fuse prise off protective cover A and remove retaining screws.

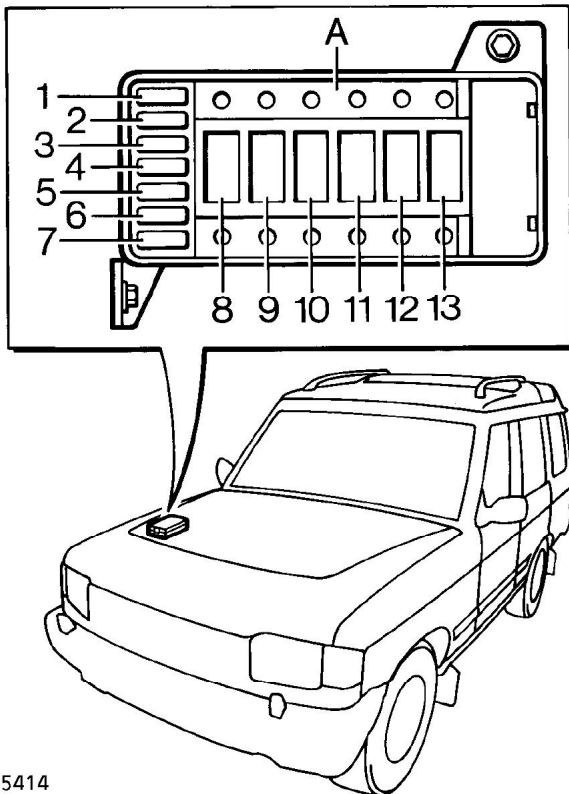

Fuses

1. Heated rear window
2. Sidelights
3. Air conditioning
4. Hazard warning lights, horn
5. ABS valve
6. Fuel pump
7. Fuel injectors

A Main circuit fuses

8. ABS pump
9. Ignition circuits
10. Lighting
11. Window lift, central door locking, rear blower
12. Heater, air conditioning
13. Generator

J5414