 


Warning lights



Battery charging - RED

The light illuminates as a bulb check when the starter switch is turned to position 'II' and extinguishes when the engine is running. If it remains on, or illuminates whilst driving, a fault is indicated. Seek qualified assistance urgently.



Check engine - AMBER

The engine management system on your Land Rover is controlled by a sophisticated engine control module which maintains optimum control of engine running and emission levels and monitors the operation of the sub systems and components.

The 'Check engine' indicator illuminates as a system check when the starter switch is turned to position II and should extinguish when the engine is started.

If an engine operation or emissions problem is registered by the engine control module while the vehicle is being operated, the 'Check engine' indicator will illuminate.

NOTE: An incorrectly fitted fuel filler cap may cause the Check Engine light to illuminate.

The 'Check engine' indicator is illuminated, and the vehicle drives normally:

Contact your Land Rover dealer to schedule a service appointment at your earliest convenience - YOU MAY STILL DRIVE THE VEHICLE.

The 'Check engine' indicator is flashing and/or the vehicle does not drive normally:

Avoid high speeds and seek immediate assistance from your Land Rover dealer.



Emission maintenance reminder - AMBER

Illuminates when the vehicle reaches approximately 50,000 miles (80,000 kilometres). When this occurs take the vehicle to your Land Rover dealer for a special emission related service to be carried out.

Brief illumination (3 seconds) will also occur as a bulb check when the starter switch is turned to position 'II'.

IMPORTANT INFORMATION

AUDIBLE WARNINGS

Driver's seat belt reminder

A chime will sound for up to 6 seconds if the starter switch is turned to position 'II' when the driver's seat belt is unfastened.

Starter key warning

A chime will sound if the key is left in the starter switch when the driver's door is opened.

Lights on warning

A chime will sound if the lights are left on after the starter switch is turned off.

Transfer box warning (automatics only)

A warning chime will sound whenever the transfer box gear lever is in the neutral position.