

DISCOVERY

ETM Y5

 

Ground Distribution

GROUND AND SPLICE INDEX


Ground	Page	Splice	Page
E100	Y5-2, 3	S217	Y5-22
E101	Y5-4	S238/HJ3	Y5-16
E148	Y5-2	S244	Y5-20
E103 MFI-V8	Y5-5	S248	Y5-32
E103 MFI-T16	Y5-6, 7	S253/HJ8	Y5-23
E103 300Tdi without EDC	Y5-8	S255/HJ8	Y5-24
E103 300Tdi with EDC	Y5-9, 10	S266	Y5-13
E104	Y5-11	S268	Y5-9
E105	Y5-11	S272	Y5-34, 35
E106	Y5-11	S277	Y5-22
E107	Y5-5	S288/HJ11	Y5-28
E108	Y5-11	S289	Y5-5
E109	Y5-2	S290/HJ7	Y5-3
E110	Y5-11	S294	Y5-3
E200	Y5-12, 13, 14, 15, 16, 17, 18, 19, 20, 21	S2003/HJ10	Y5-20
E201	Y5-22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35	S2005/HJ2	Y5-15
E203	Y5-36	S2015/HJ10	Y5-21
E204	Y5-36	S2016/HJ10	Y5-19
E303	Y5-37	S2023/HJ11	Y5-31
E400	Y5-38, 39, 40	S2024	Y5-33
E401	Y5-41, 42	S2025/HJ5	Y5-17
E404	Y5-39	S2031/HJ5	Y5-17
Splice	Page	S2032/HJ3	Y5-16
S112	Y5-6, 8	S2044/HJ11	Y5-28
S122	Y5-13	S2050	Y5-12
S132	Y5-36	S2051	Y5-36
S203/HJ3	Y5-16	S307	Y5-12
S204/HJ3	Y5-16	S343	Y5-26, 27
S207	Y5-24	S401	Y5-40
S216	Y5-23	S402	Y5-42
		S415	Y5-39
		S417	Y5-38
		S418	Y5-41
		S422	Y5-38
		S423	Y5-40
		S424	Y5-42
		S426	Y5-38
		S501	Y5-29
		S601	Y5-14




Y5 ETM

DISCOVERY

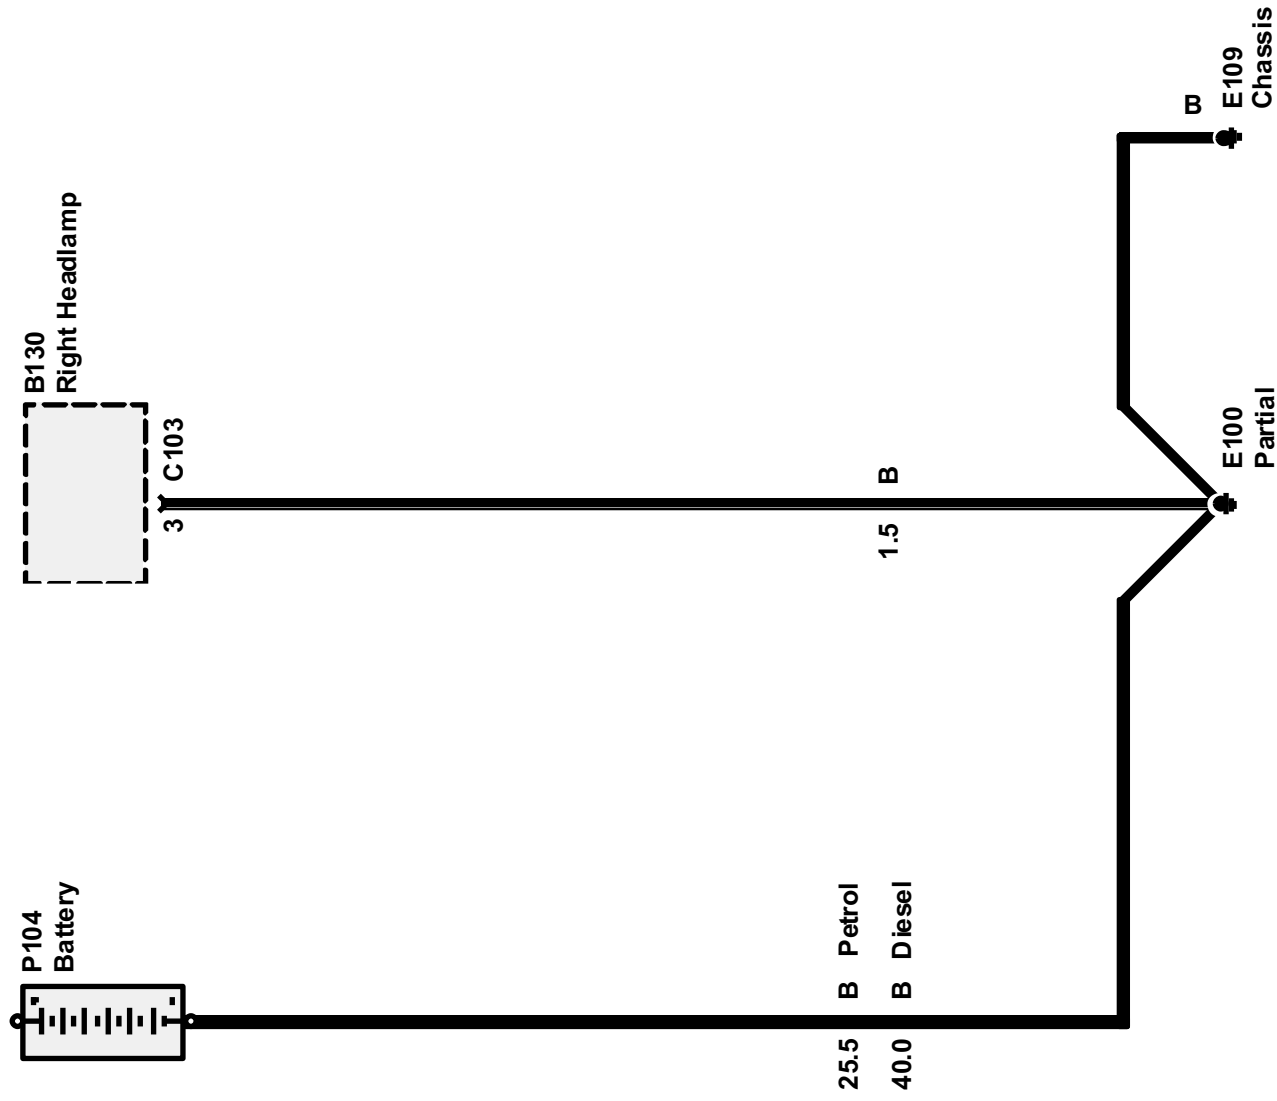


DISCOVERY

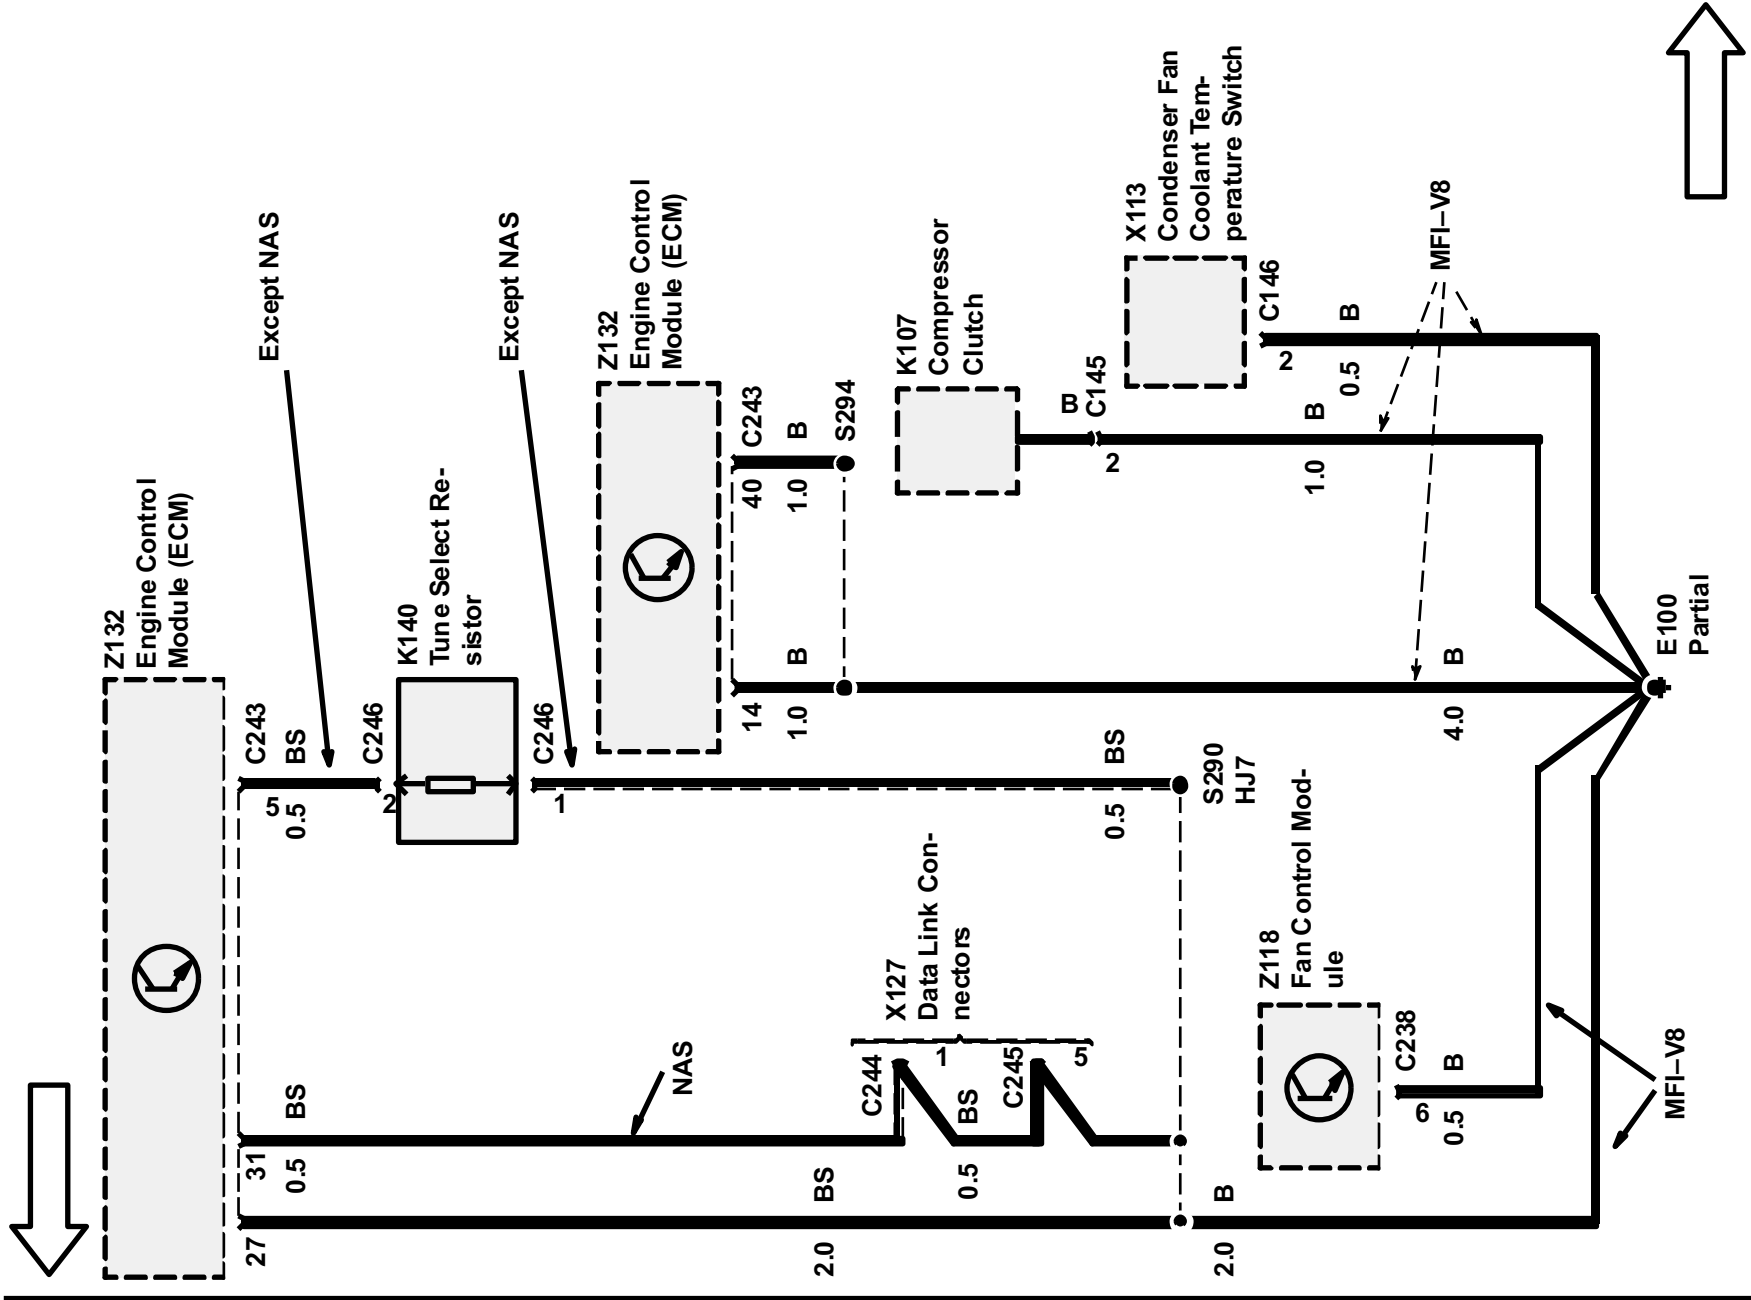

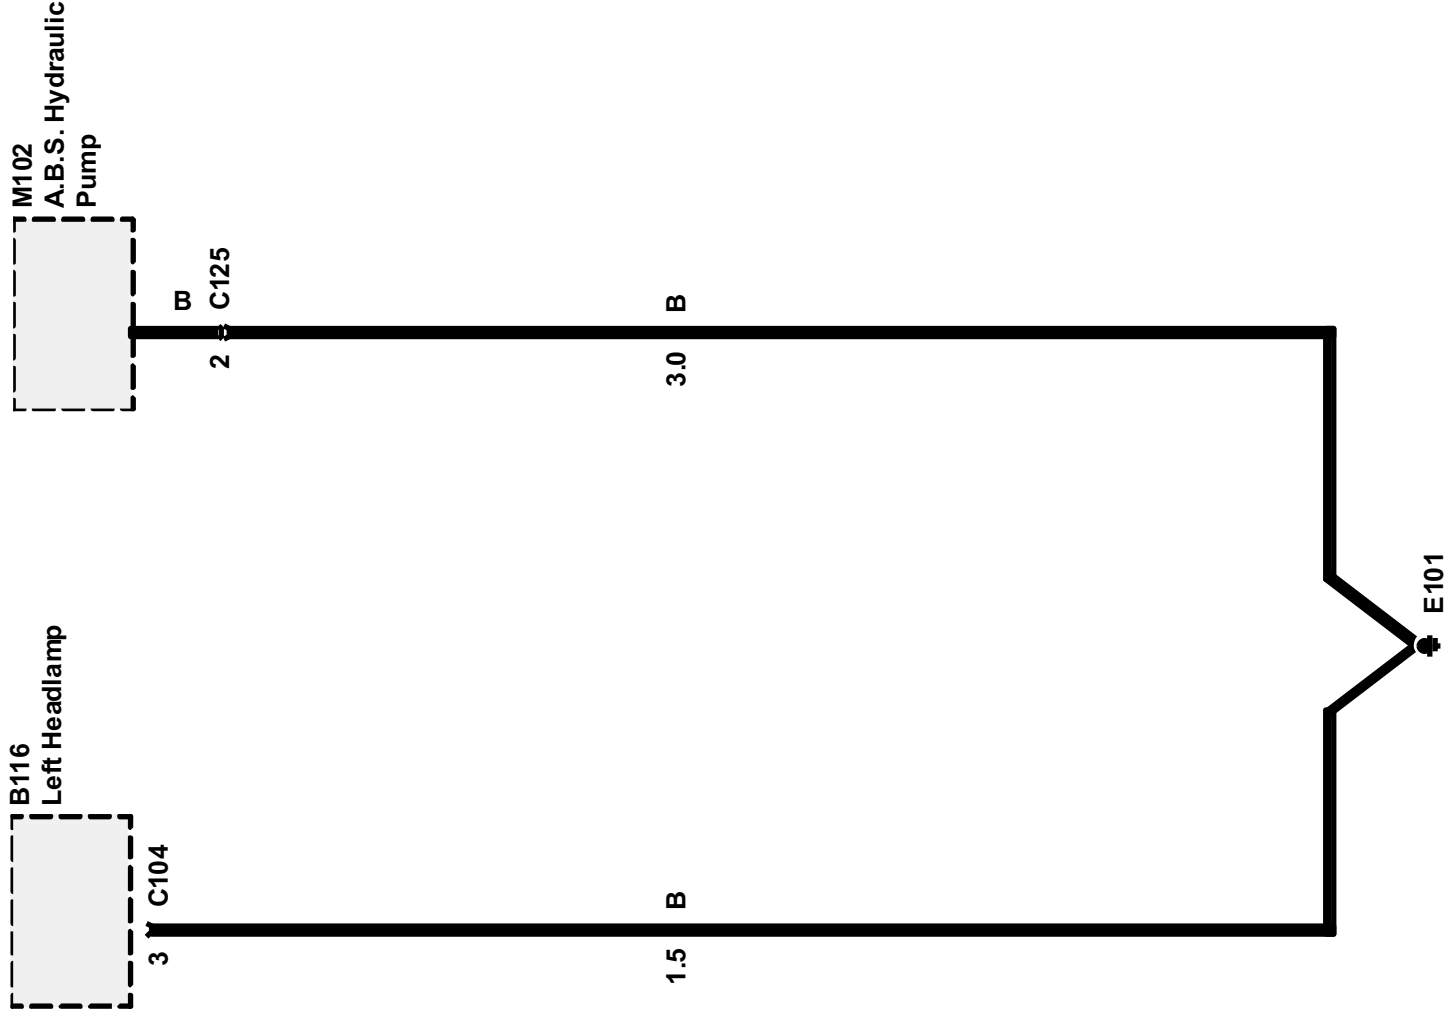  


not ubrt s Ddnua G

Ground Distribution (MFI-V8)

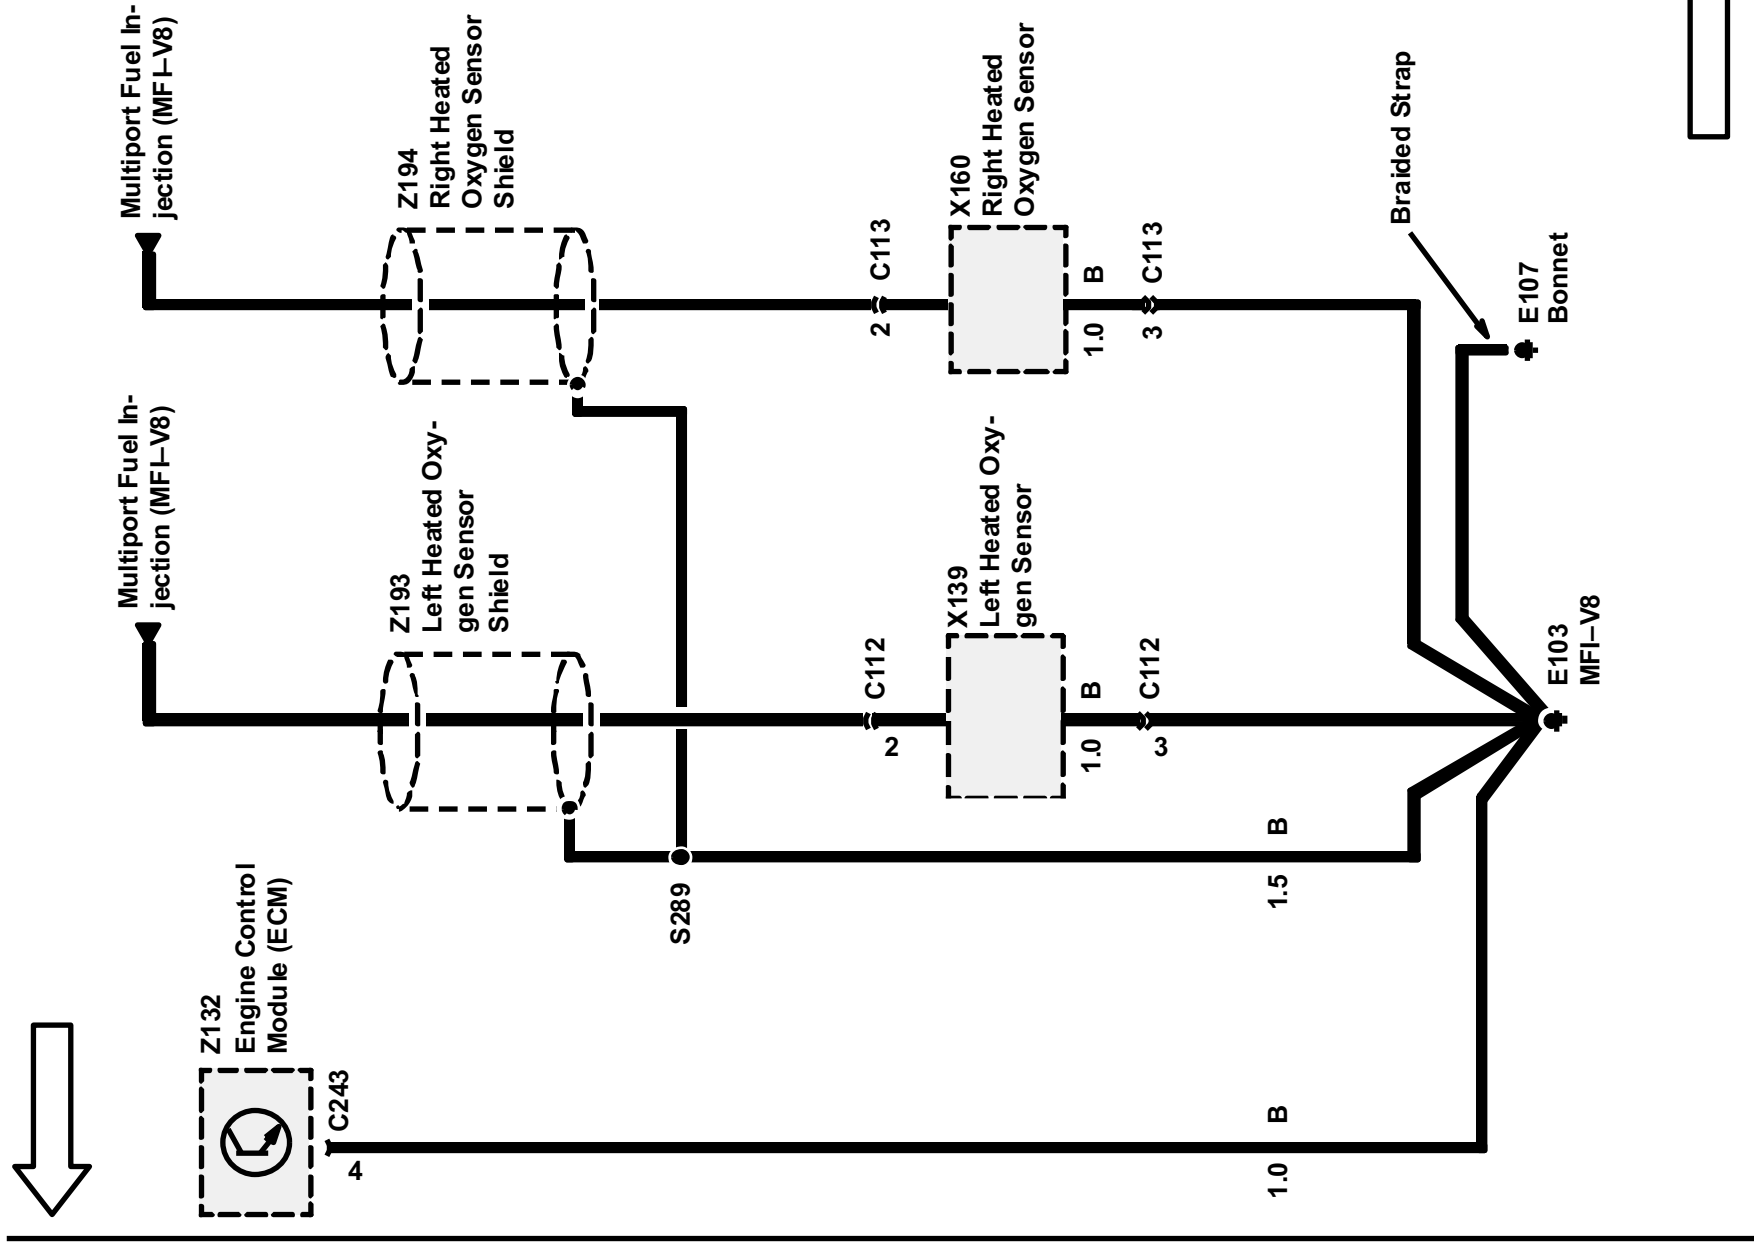


Y5 ETM



 
DISCOVERY




29 14 C1007

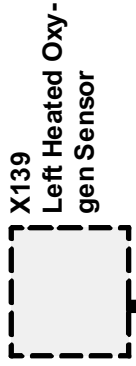


3 C112

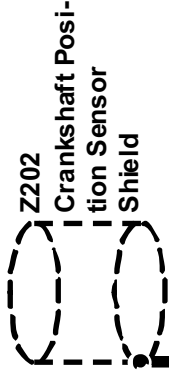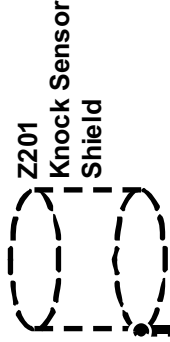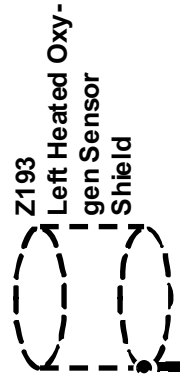

S112

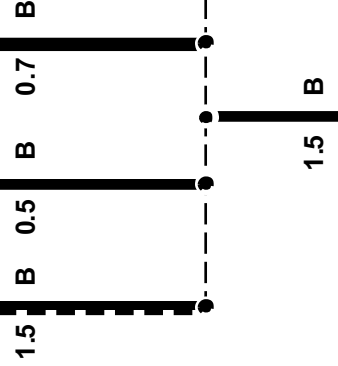


Y5-7

 

Ground Distribution (MFI-T16)

ETM Y5




DISCOVERY

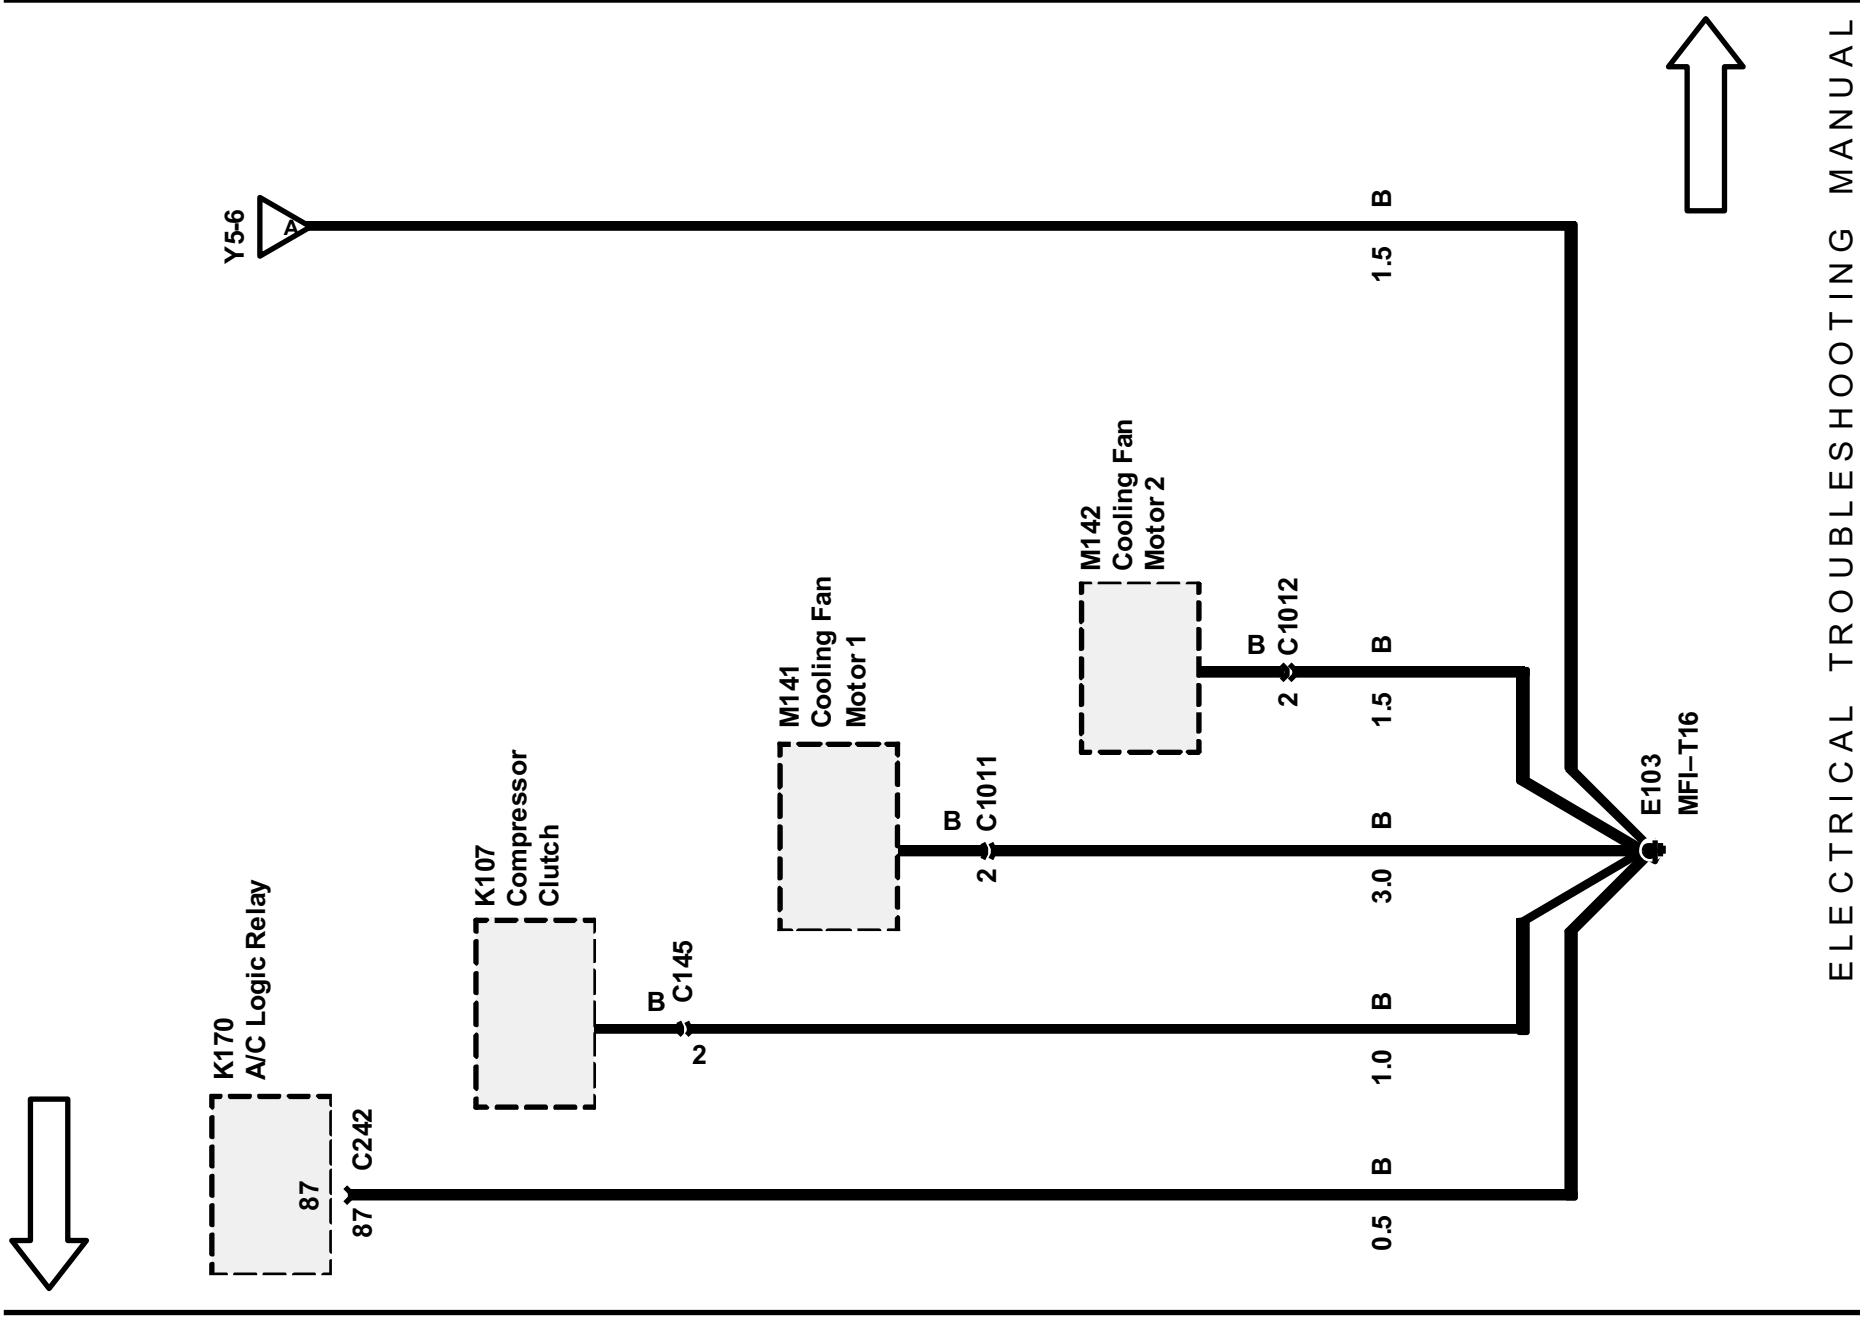

ELECTRICAL TROUBLESHOOTING MANUAL

Y5 ETM

  DISCOVERY

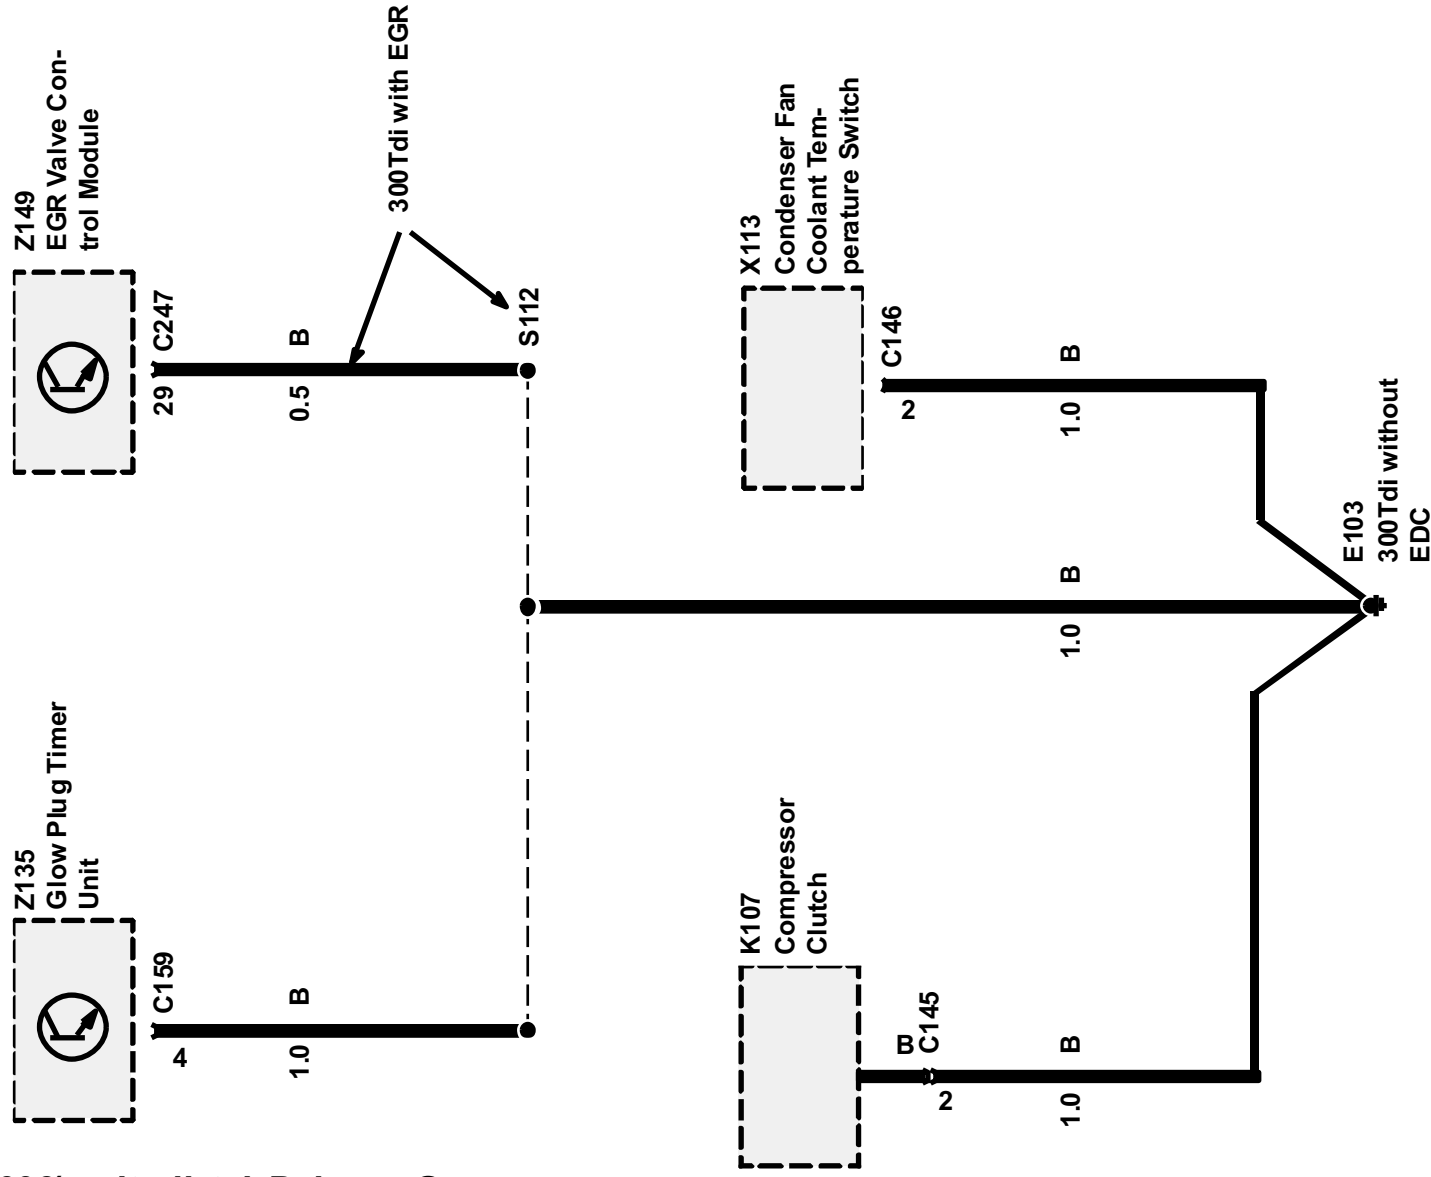


) GDEt uolli wi dT003(nôt ub'it s' Ddnua G

DISCOVERY


ETM Y5

Ground Distribution (300Tdi with EDC)


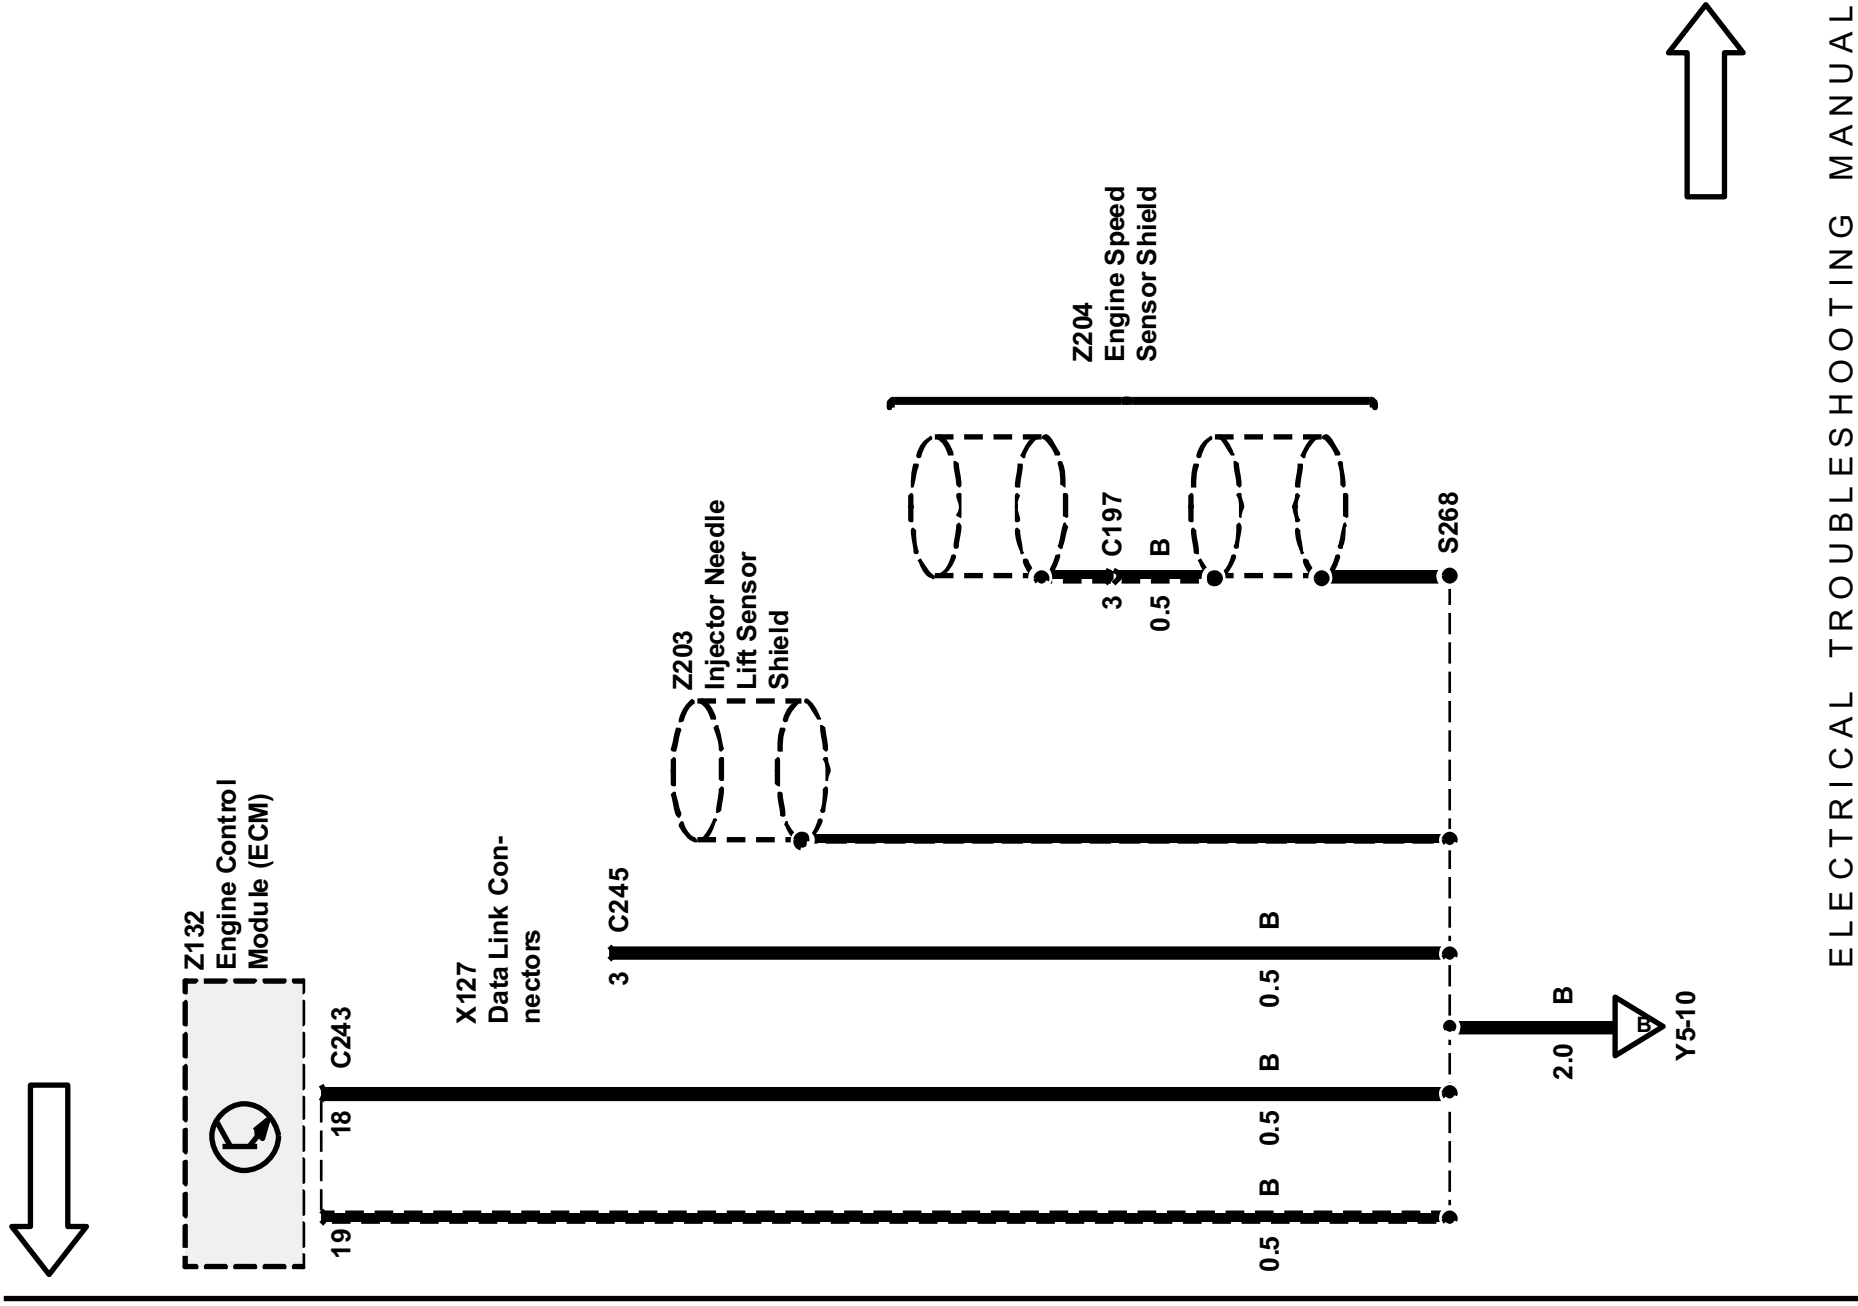


Y5 ETM

 DISCOVERY



 

300Tdi with EDC (not suitable for Discovery G)

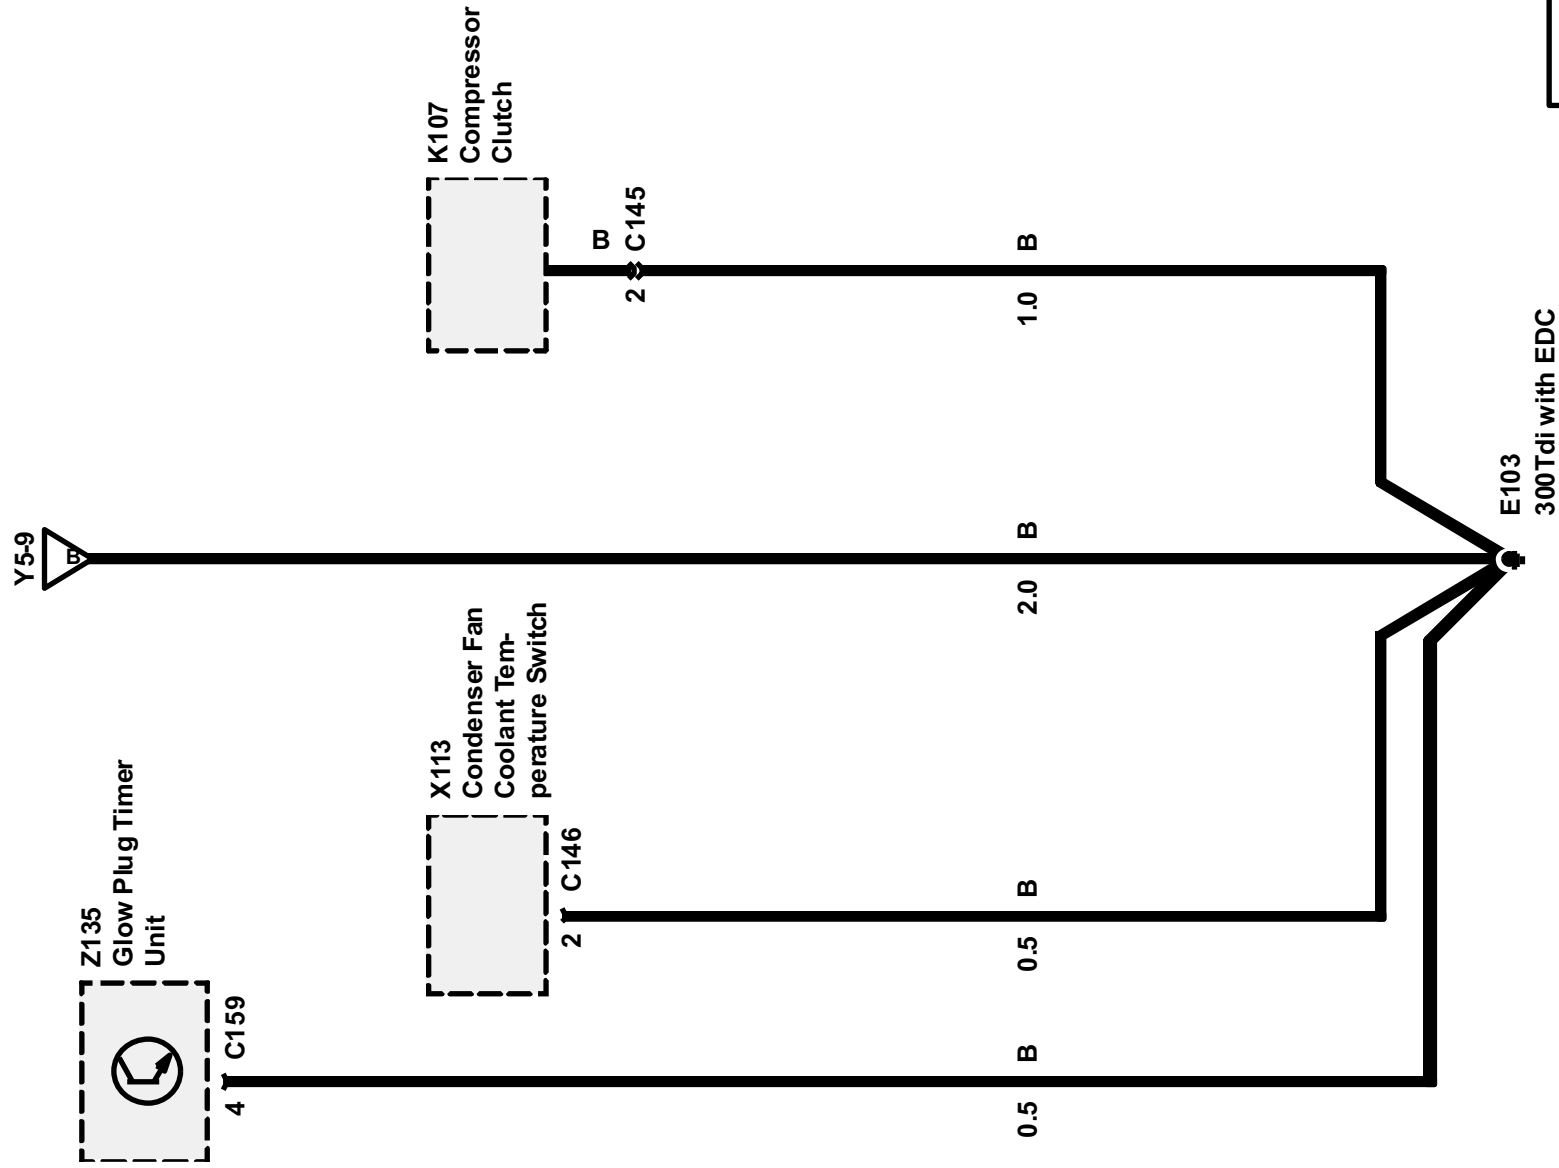


DISCOVERY

ETM Y5

 Ground Distribution

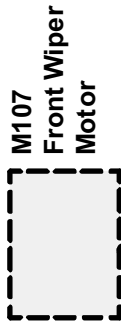

M107
Front Wiper
Motor

 

Braided Strap

E110

Braided Strap

E105

Ignition Coil

E106

Engine

 
Braided Strap

E104

Chassis




E108

Starter



Y5 ETM

  
DISCOVERY

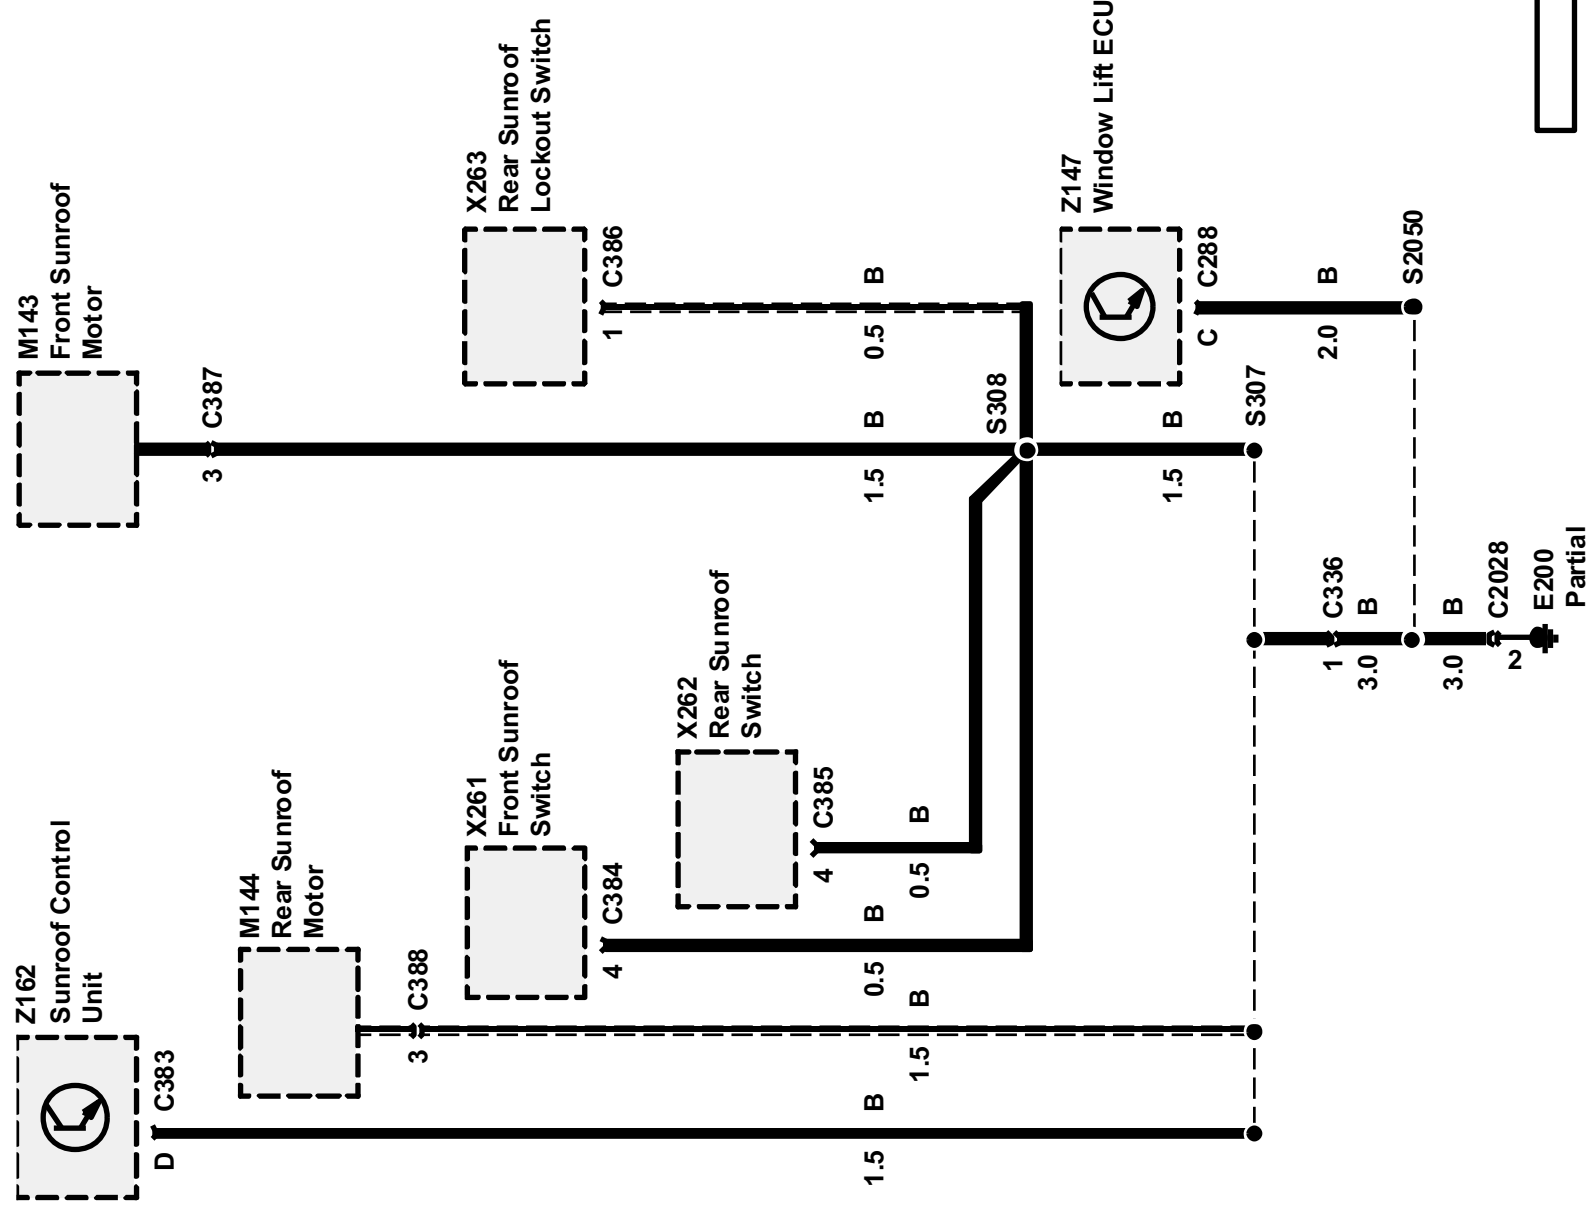

DISCOVERY






ETM Y5

Ground Distribution

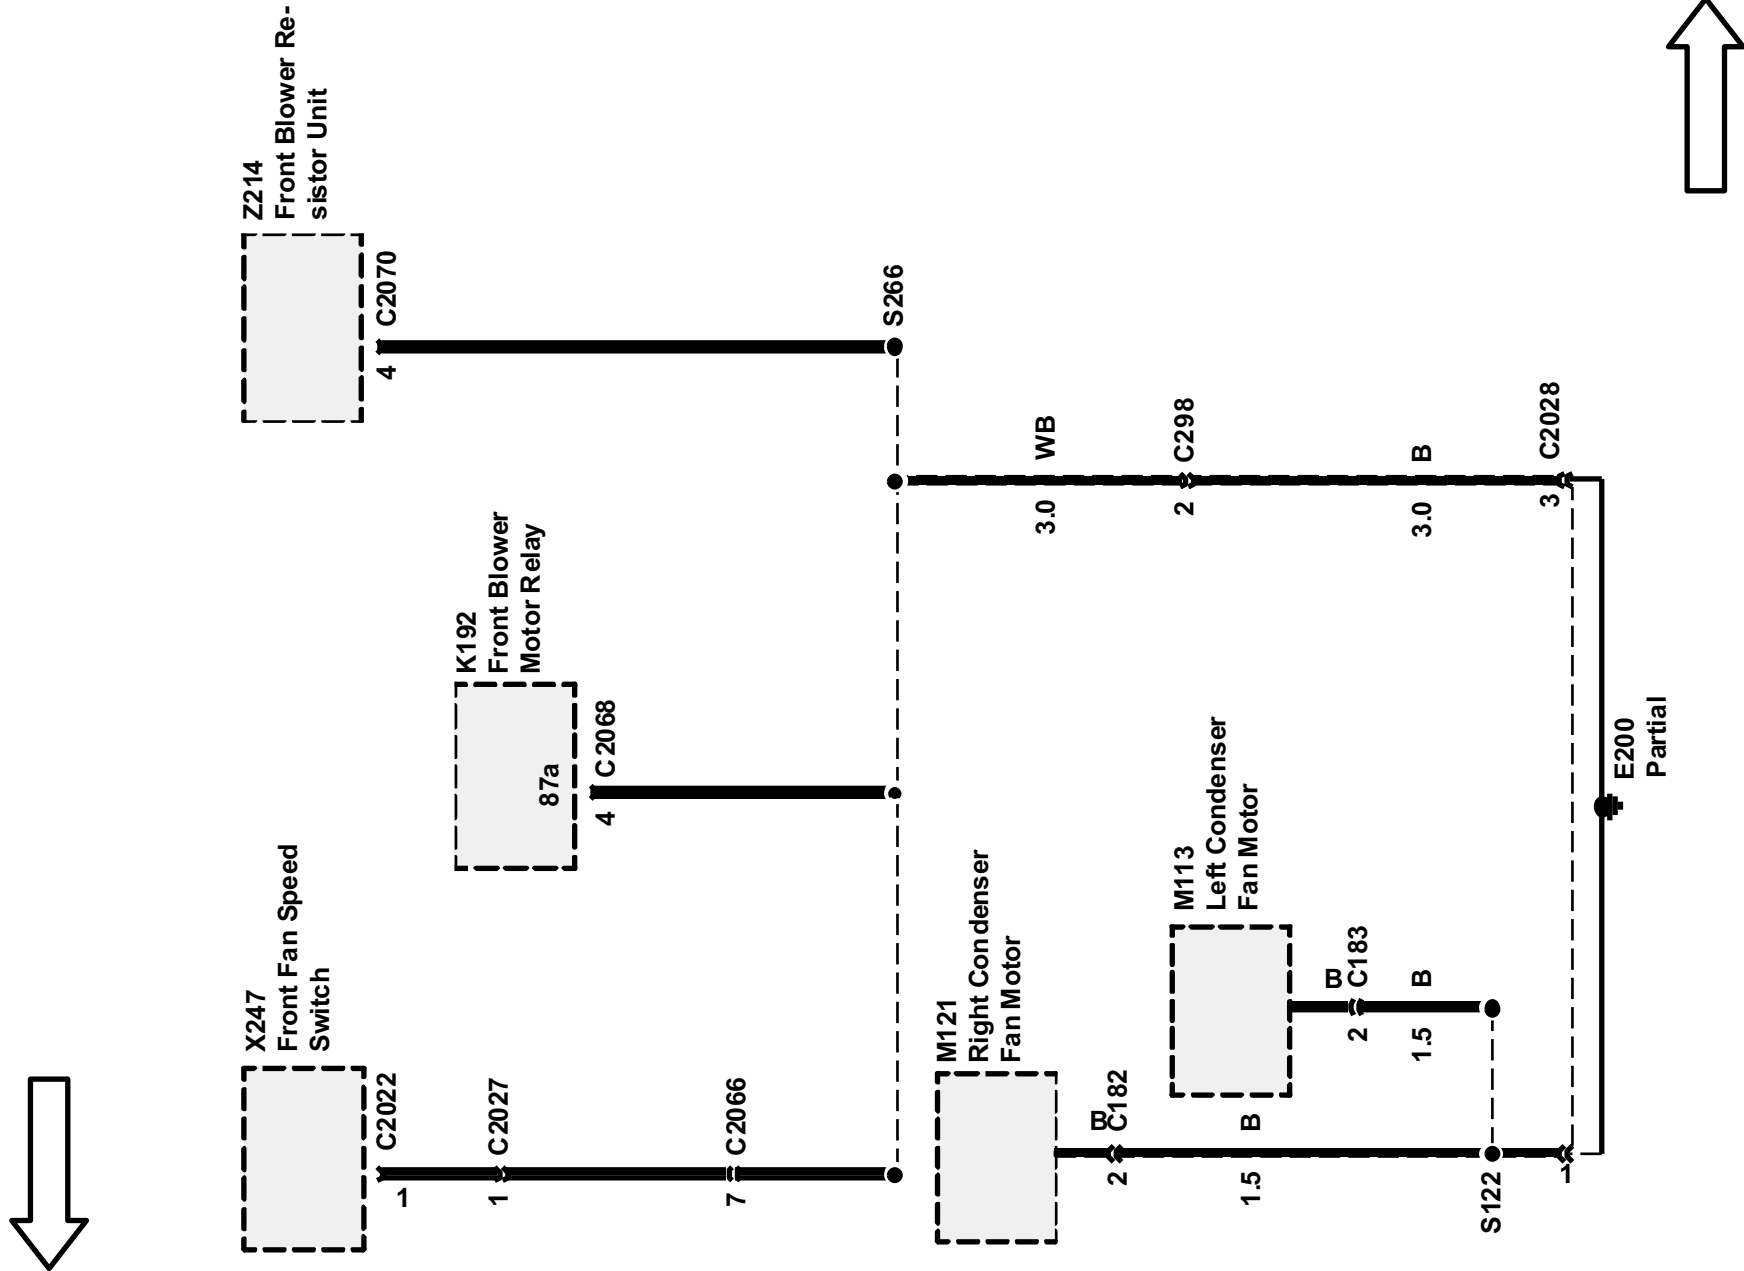

Y5 ETM

  
DISCOVERY

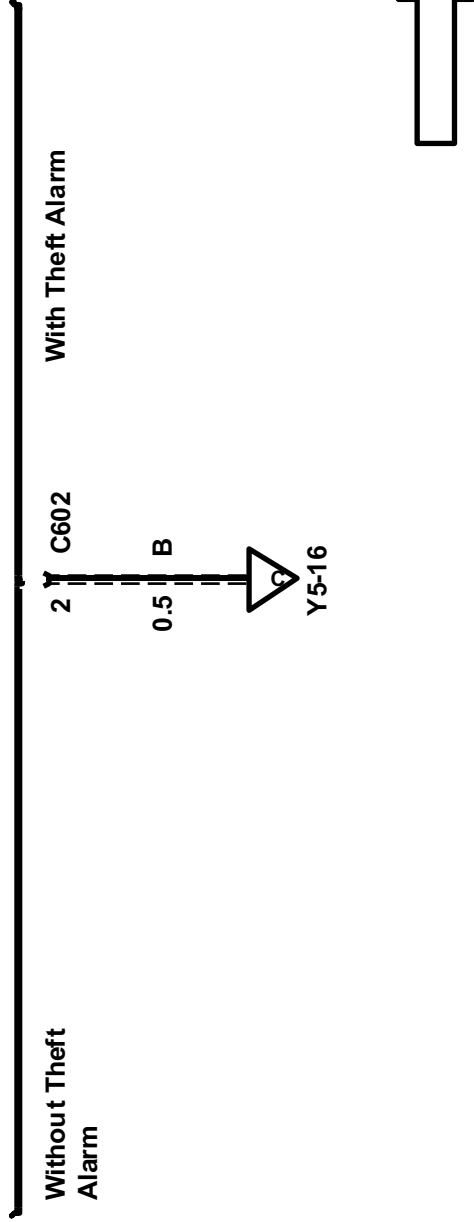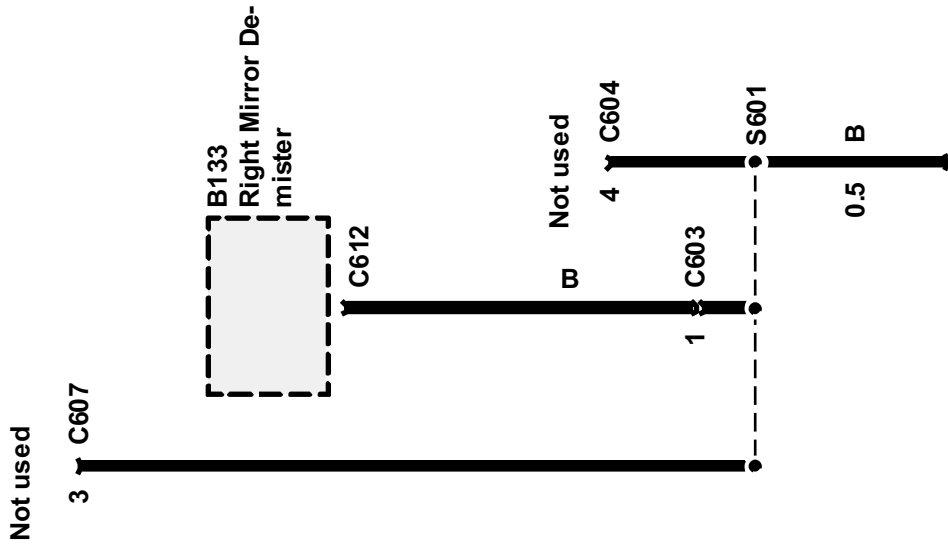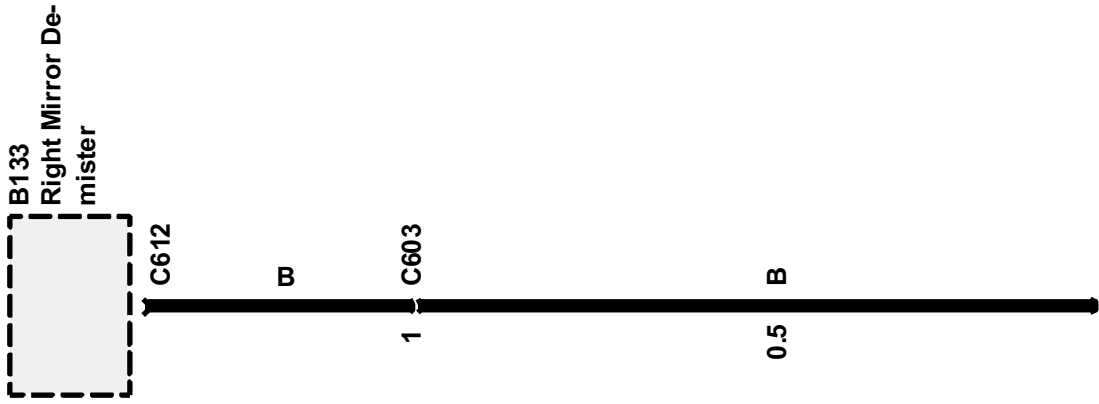

DISCOVERY




ETM Y5




Ground Distribution

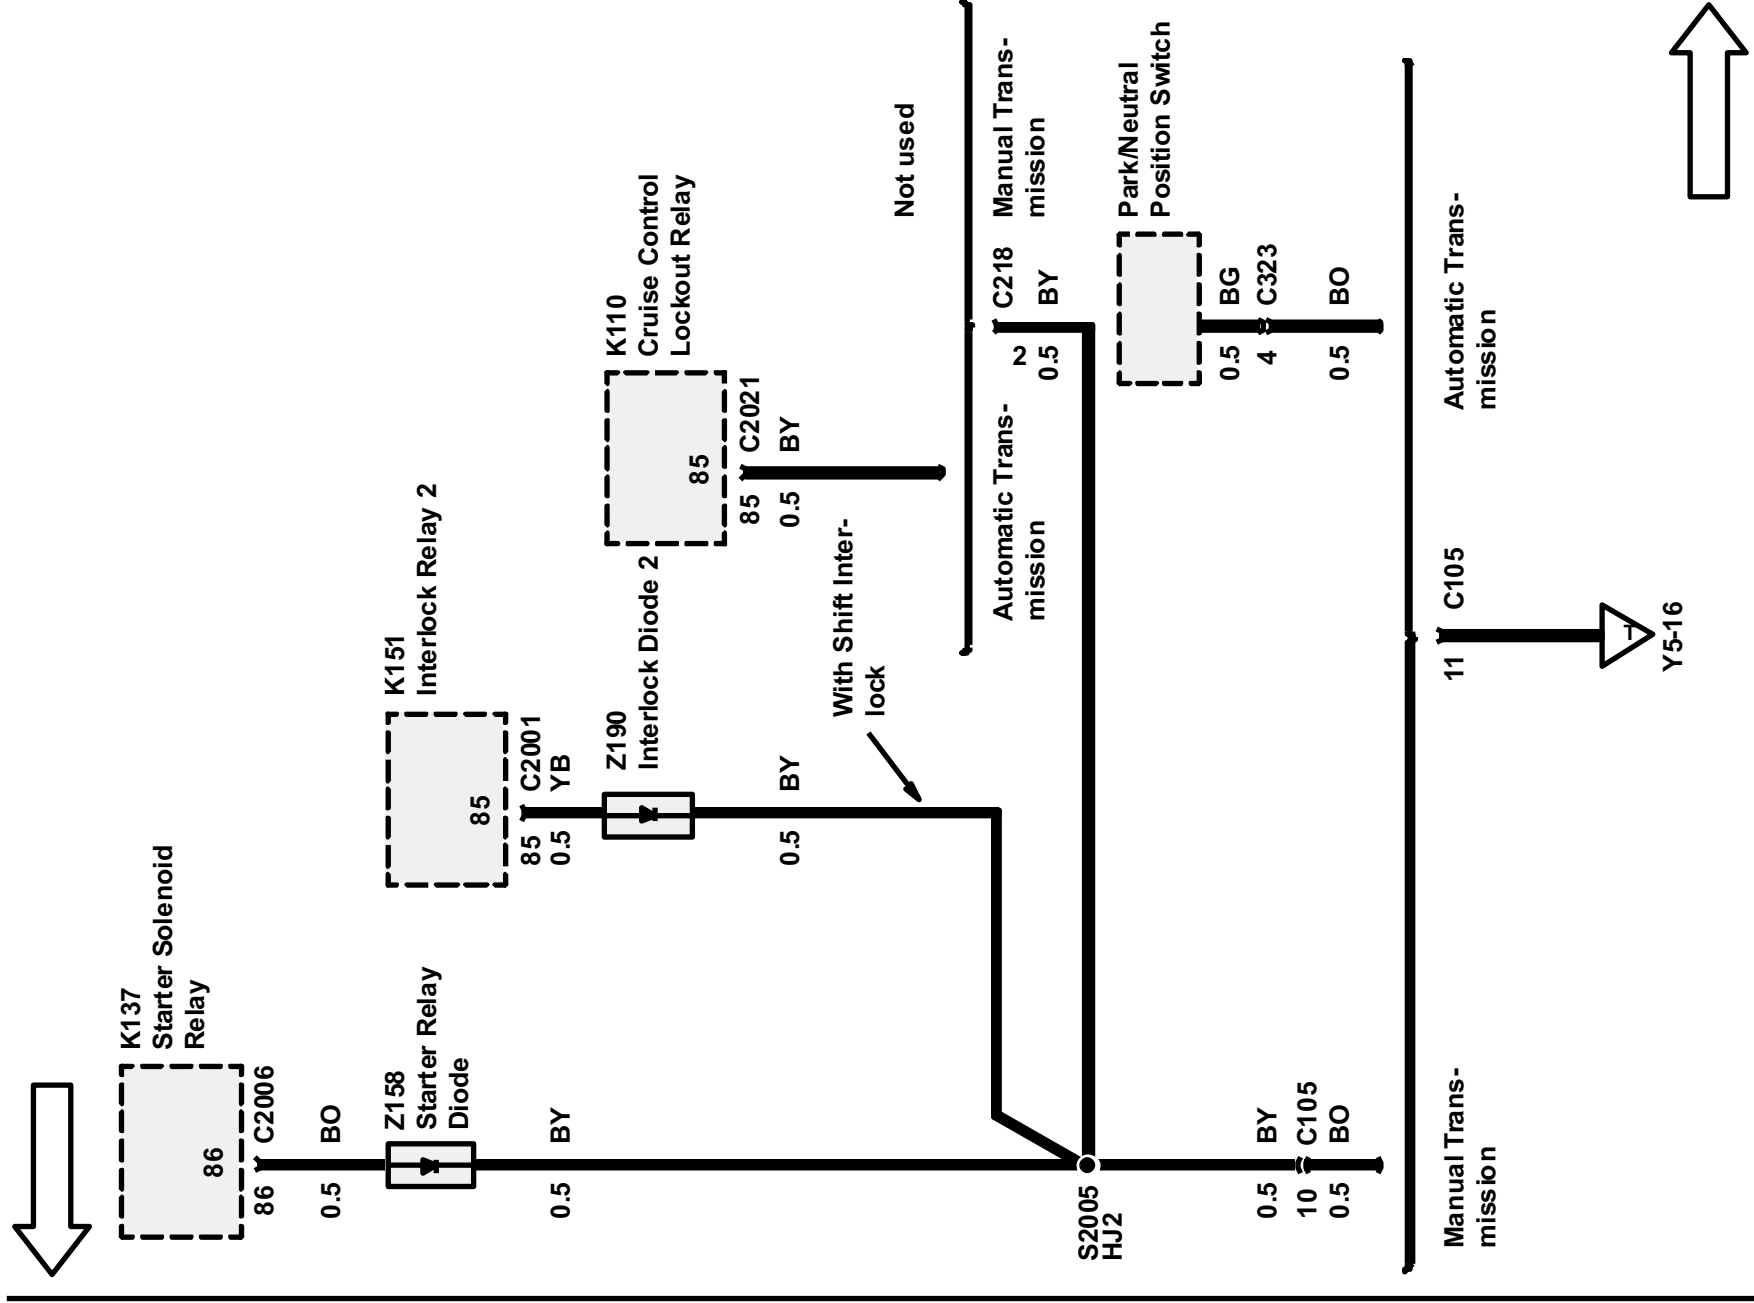

Y5 ETM

 
 
 
 

DISCOVERY

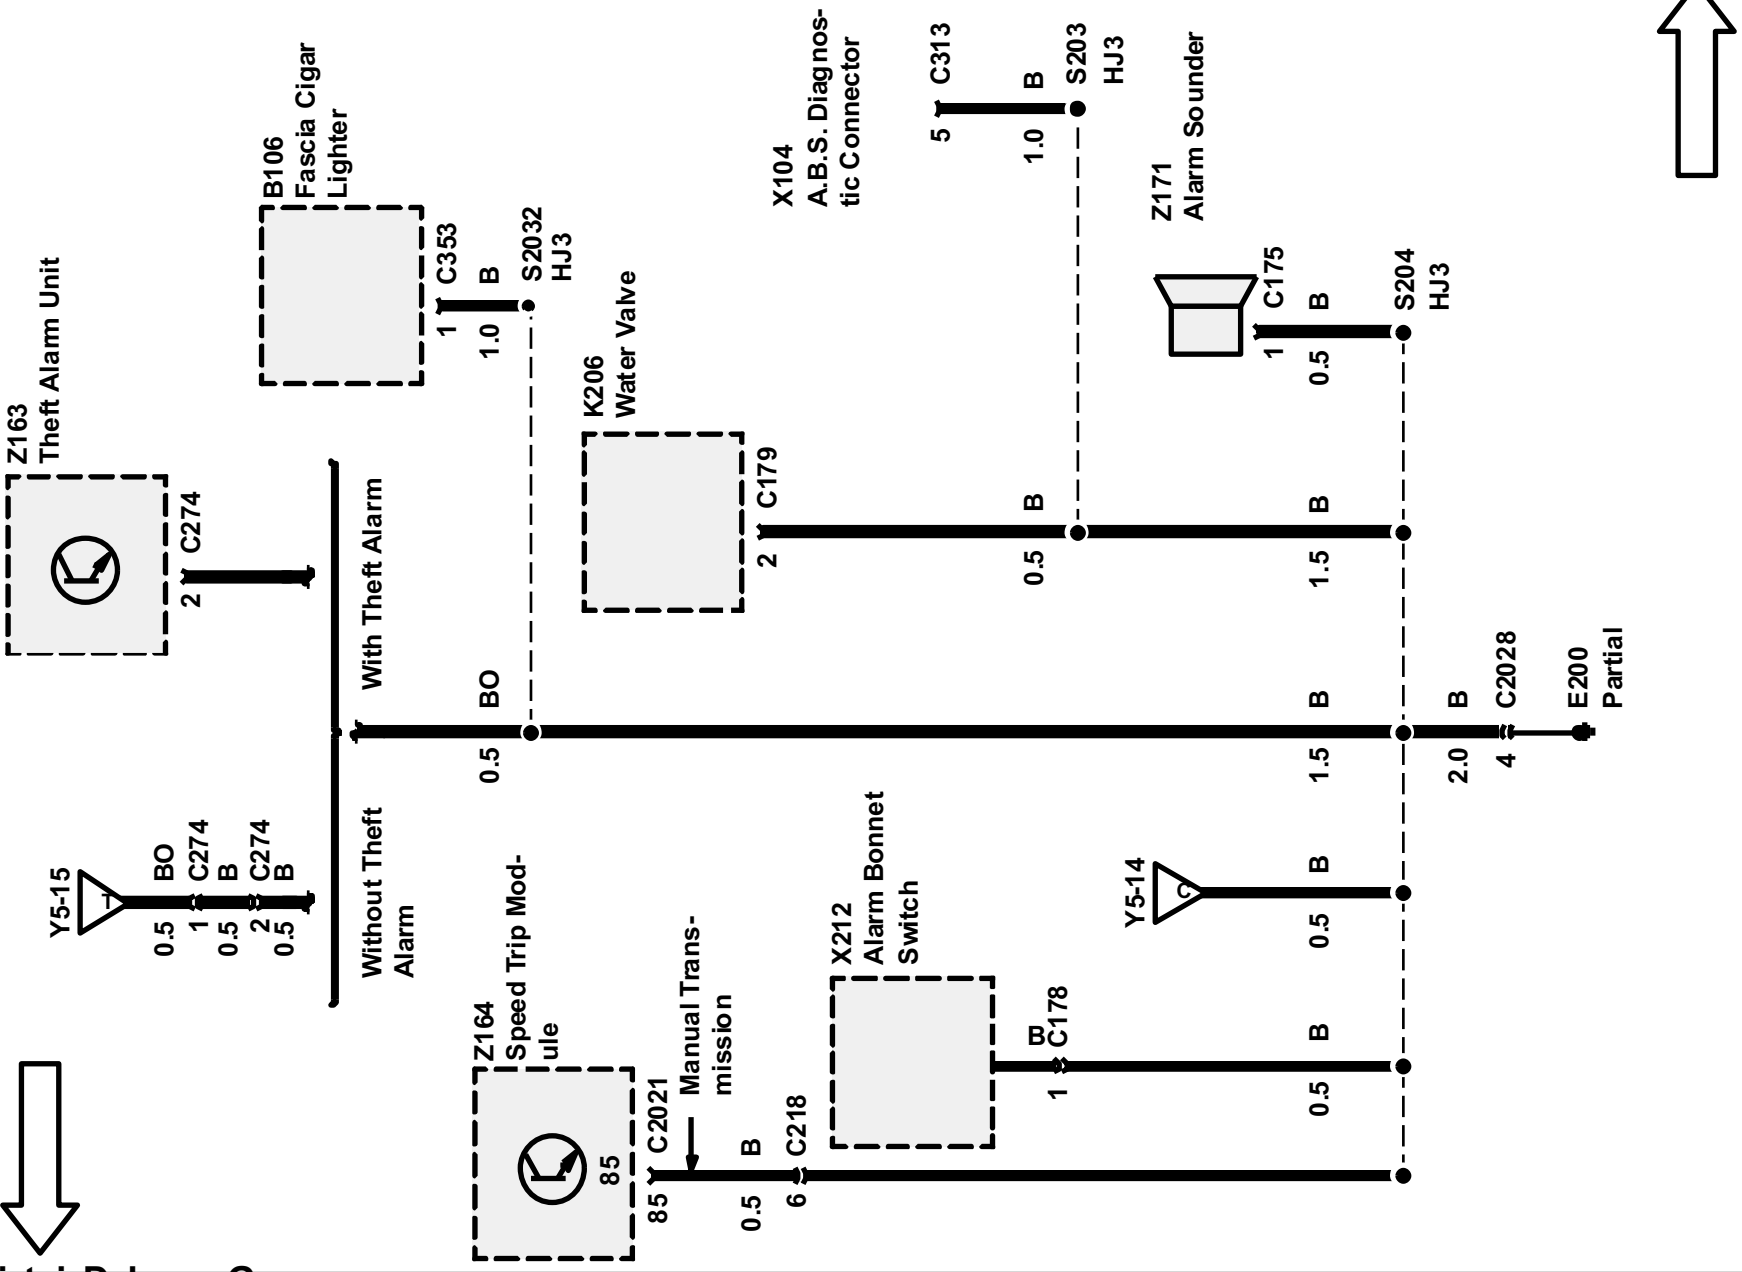

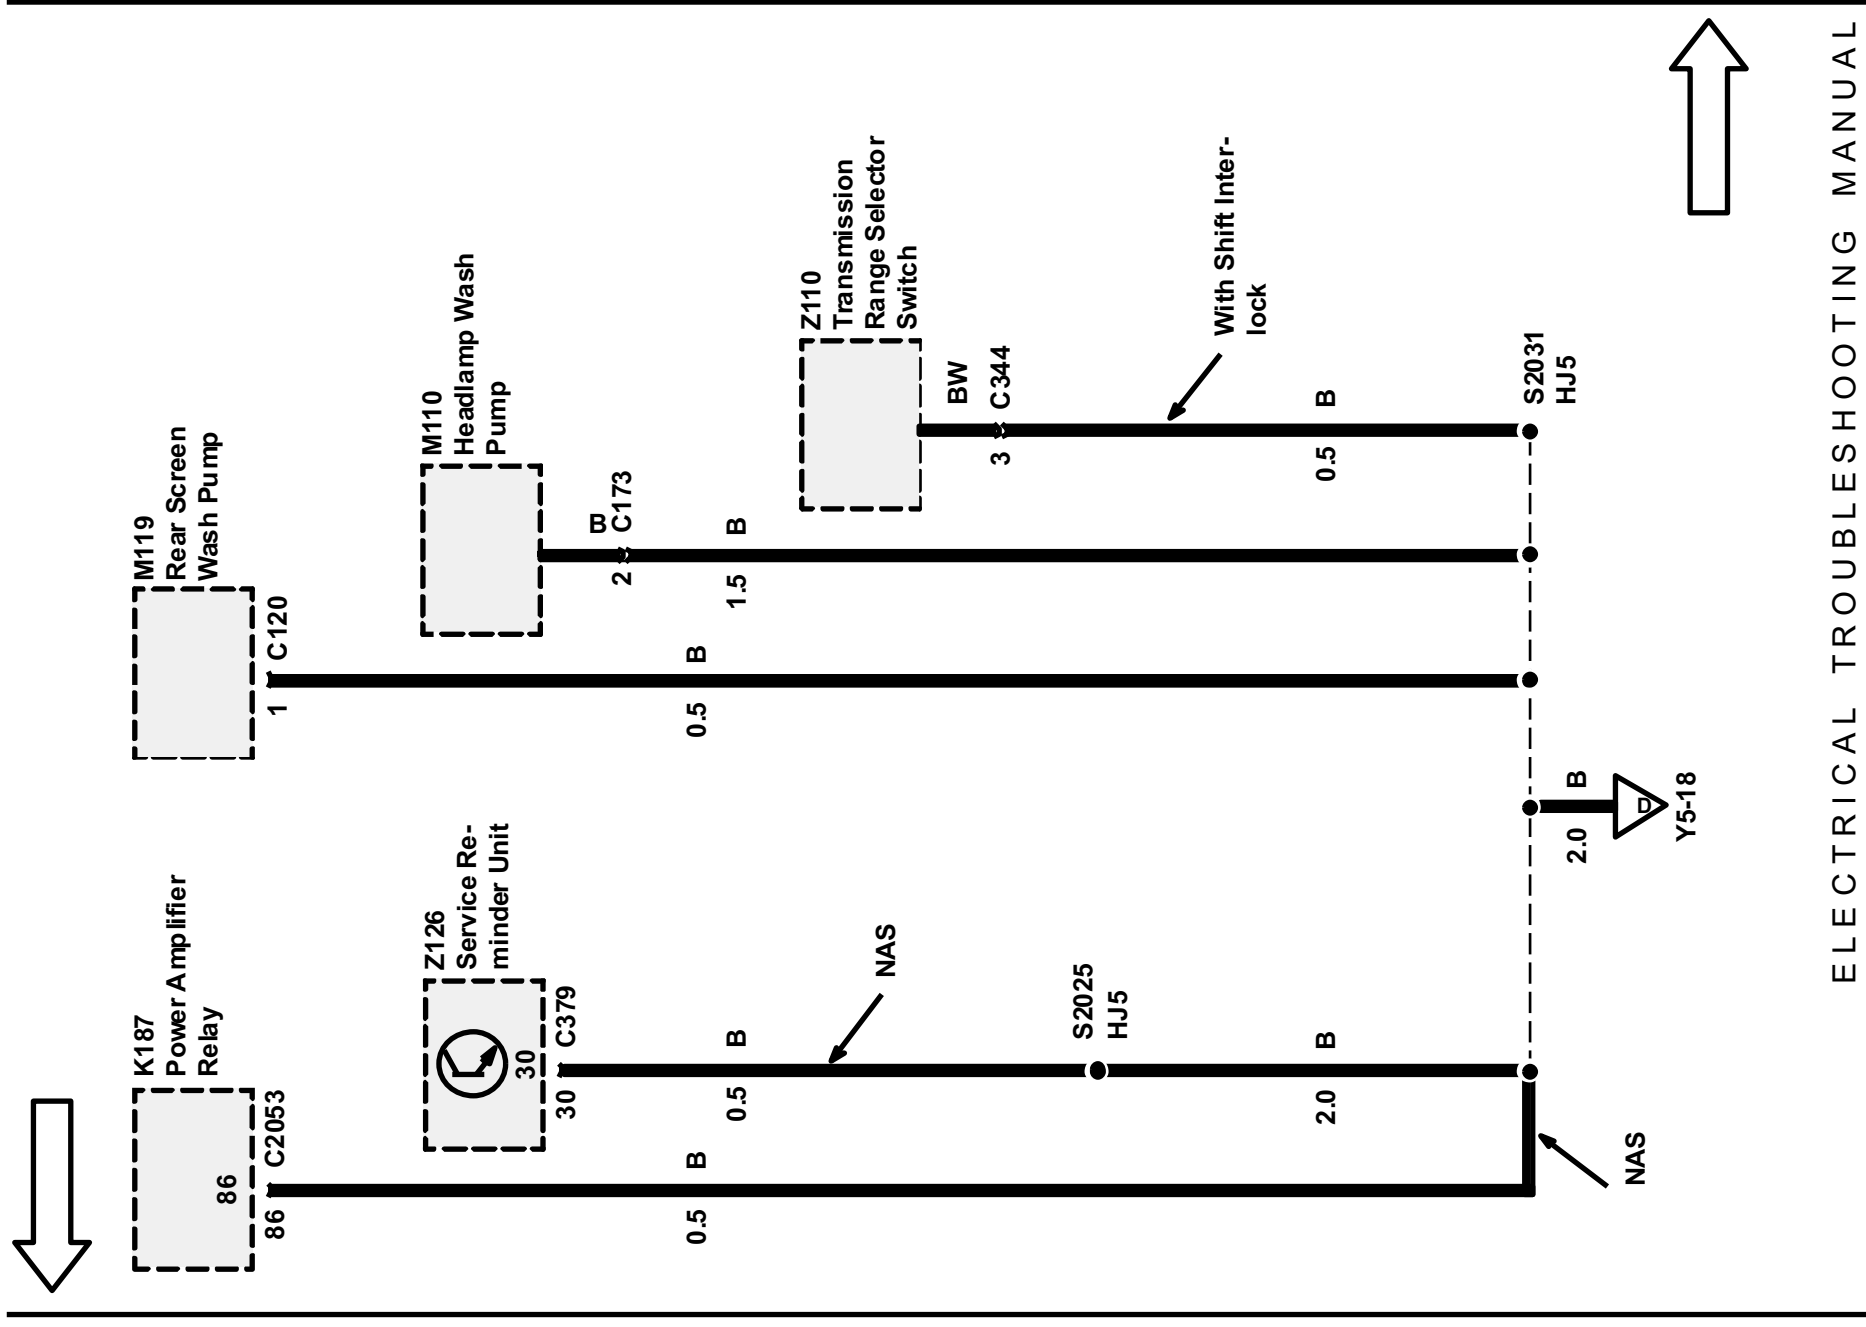

Y5 ETM

  
DISCOVERY

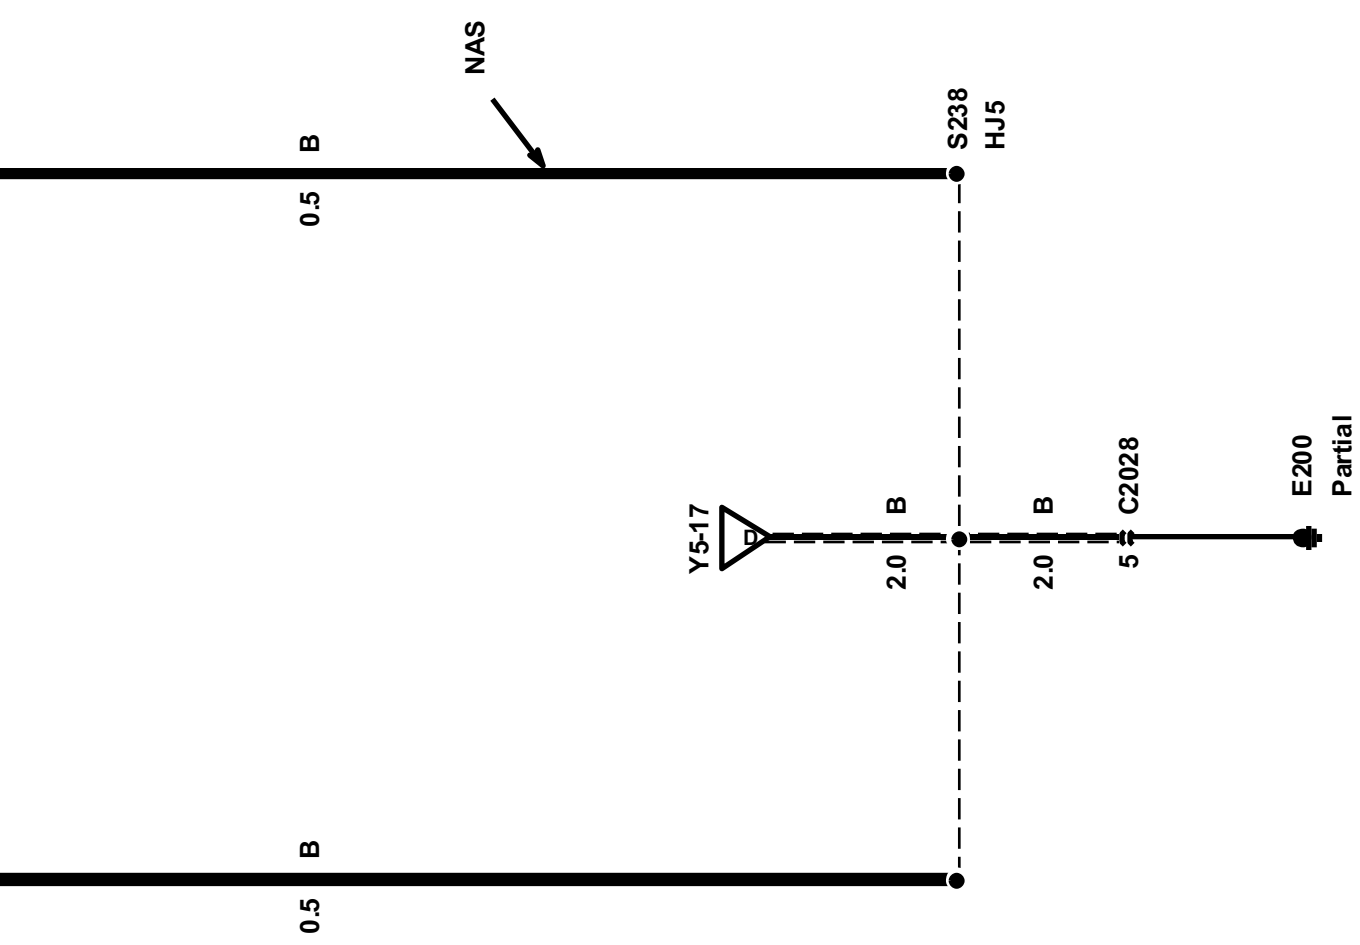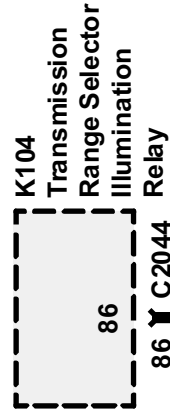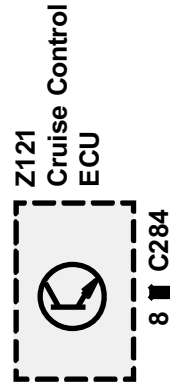

DISCOVERY




ETM Y5


Ground Distribution

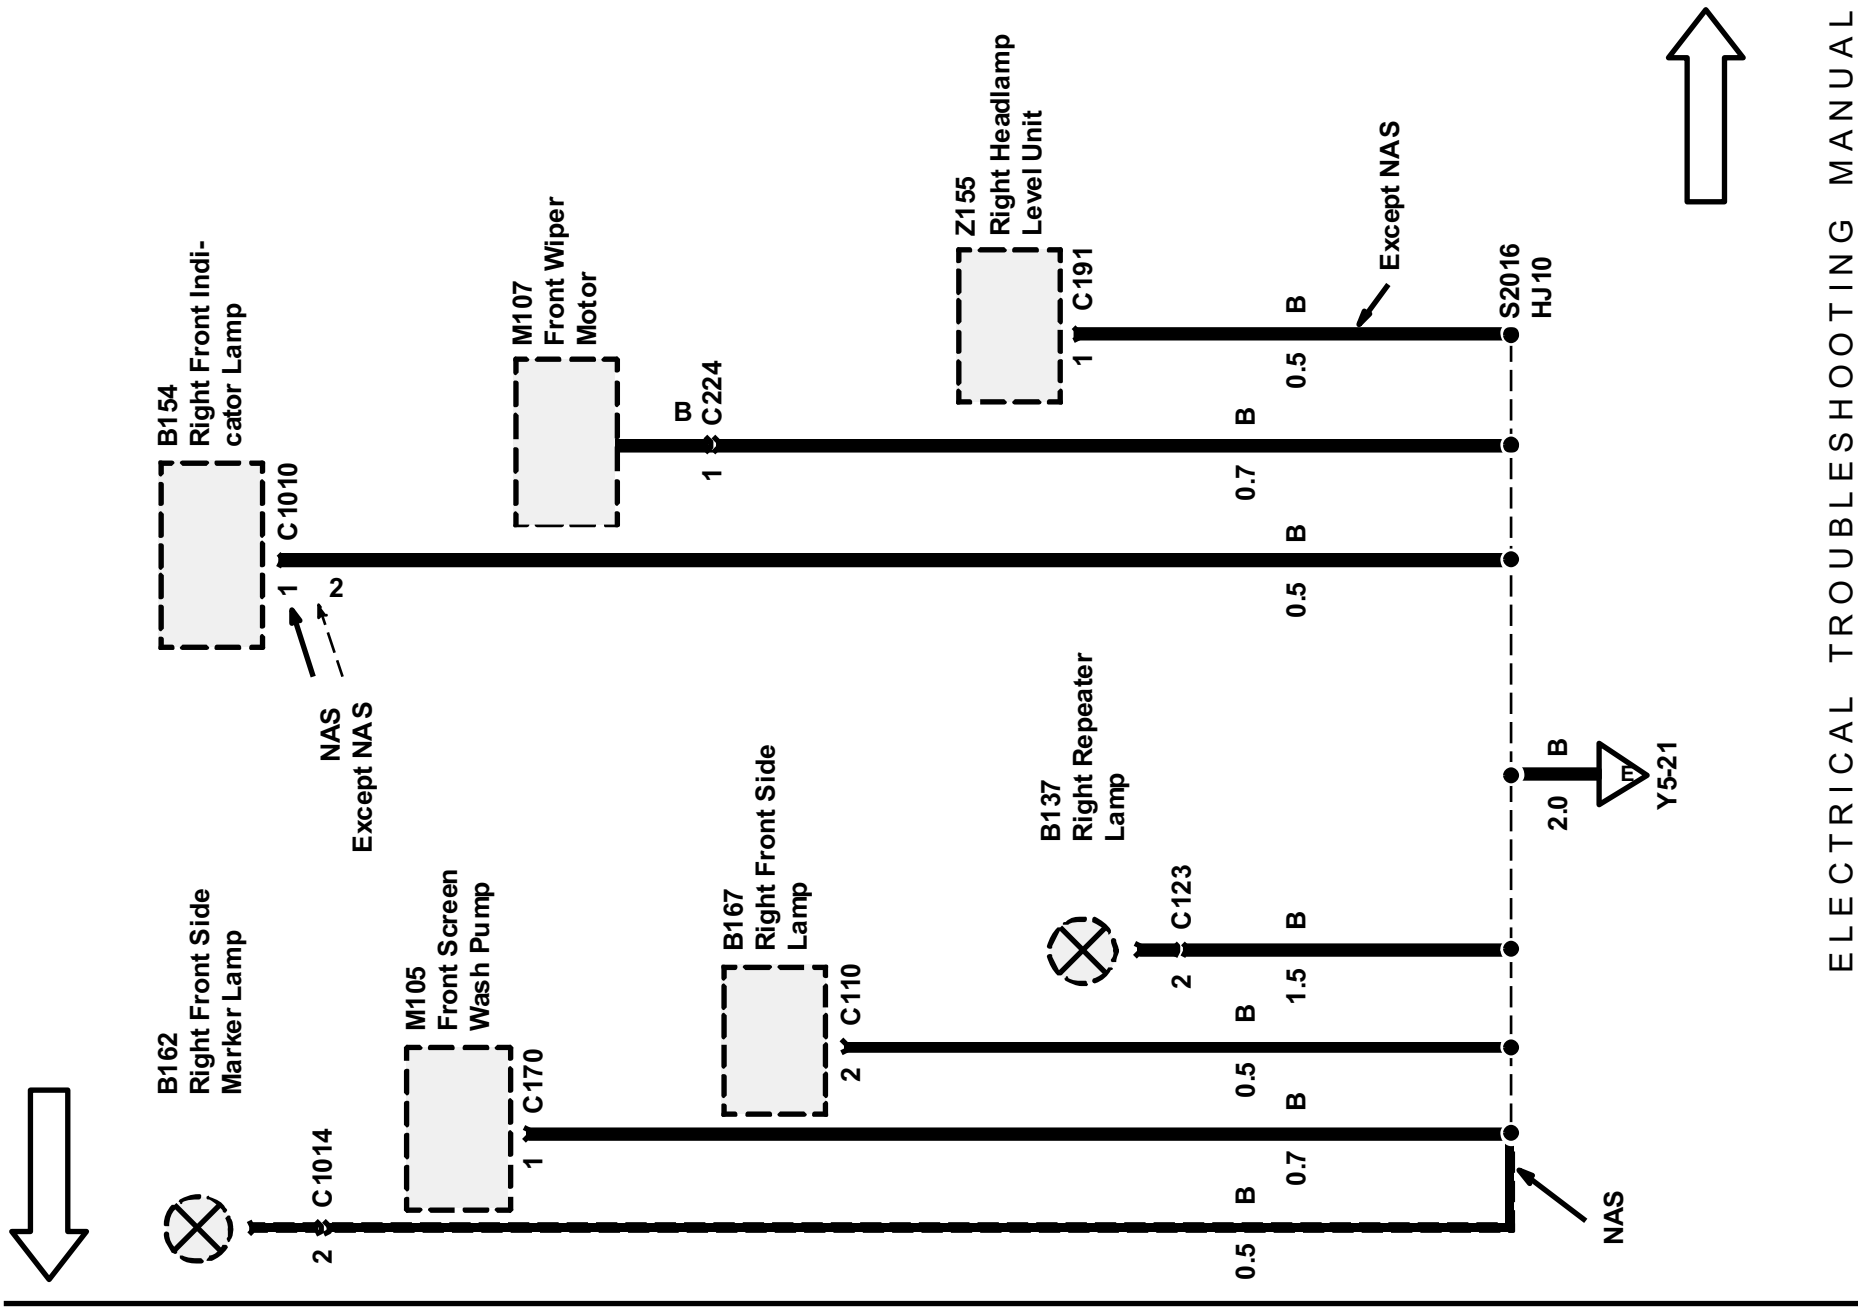

Y5 ETM

 
 

DISCOVERY

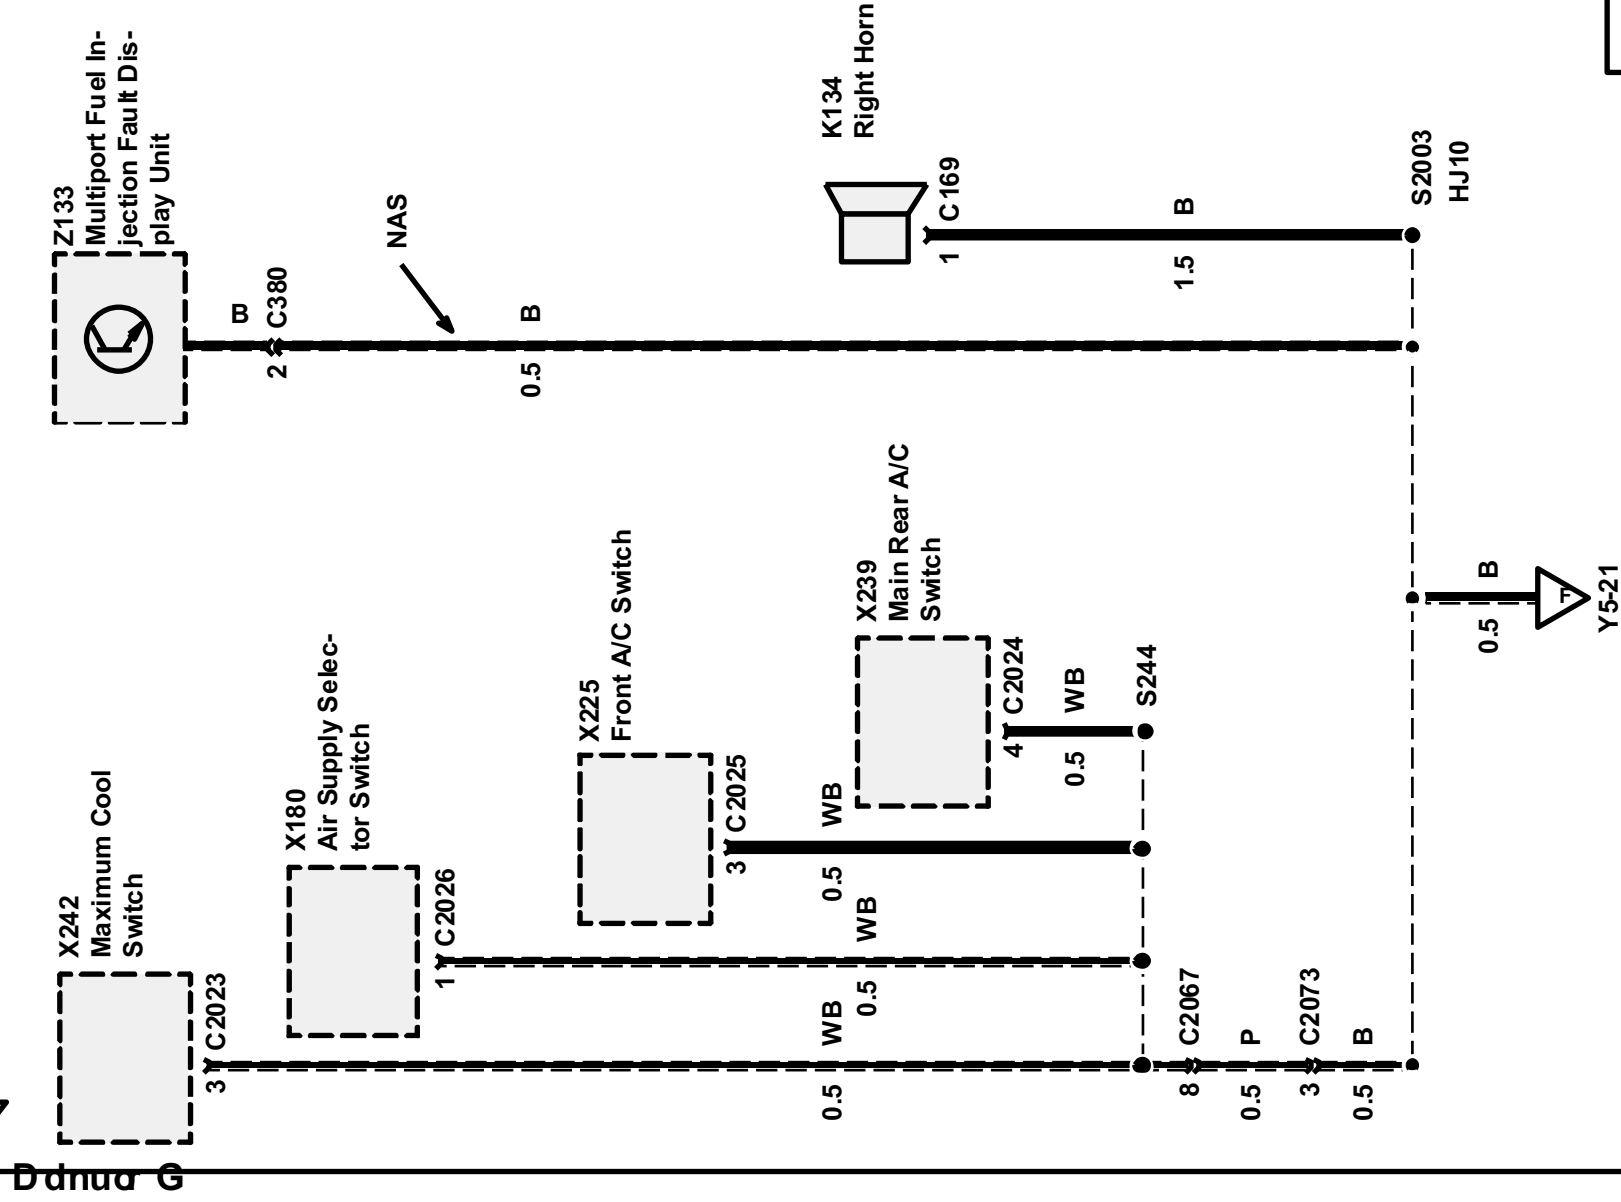


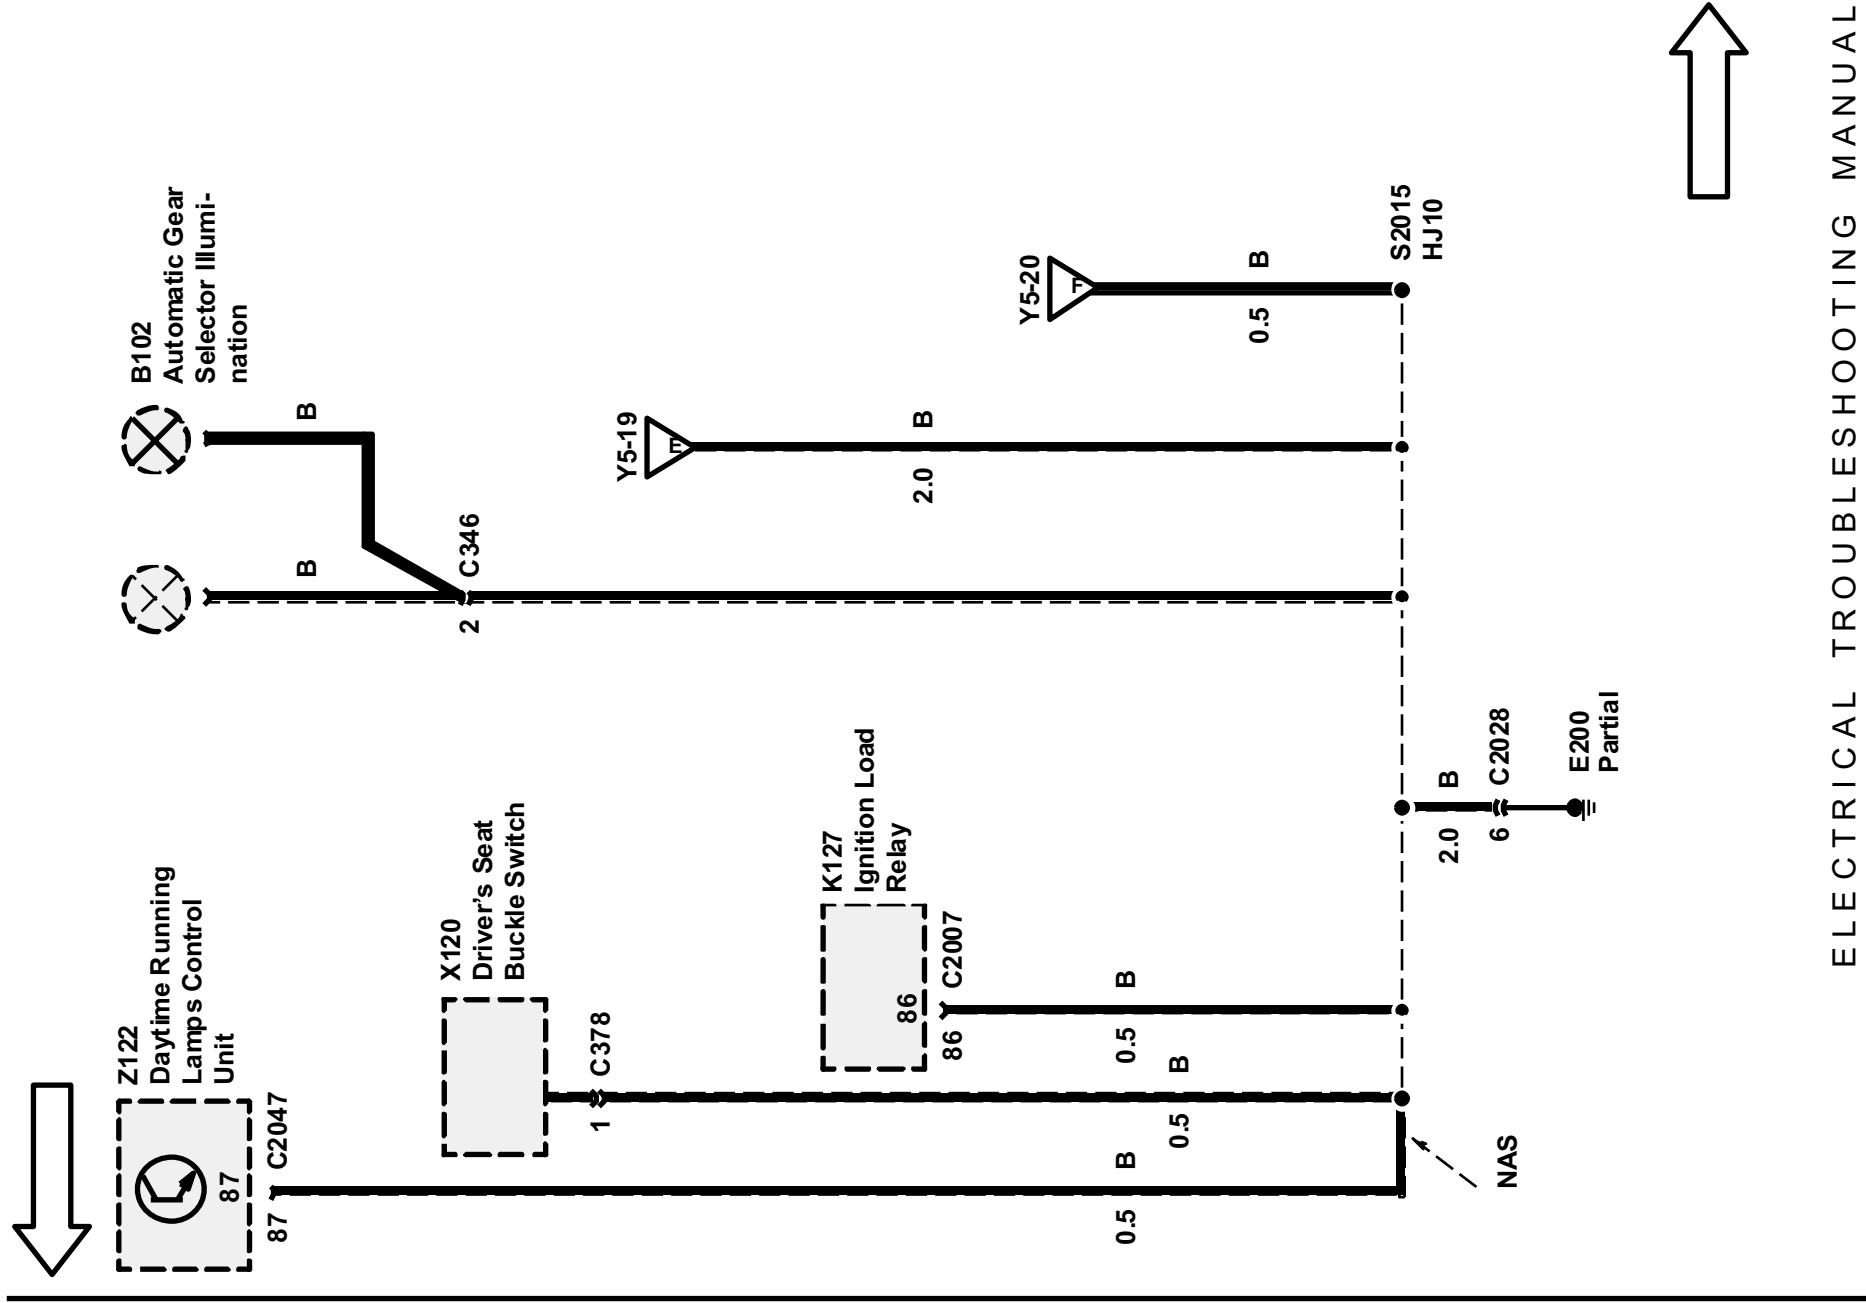

Y5 ETM

 
 

DISCOVERY

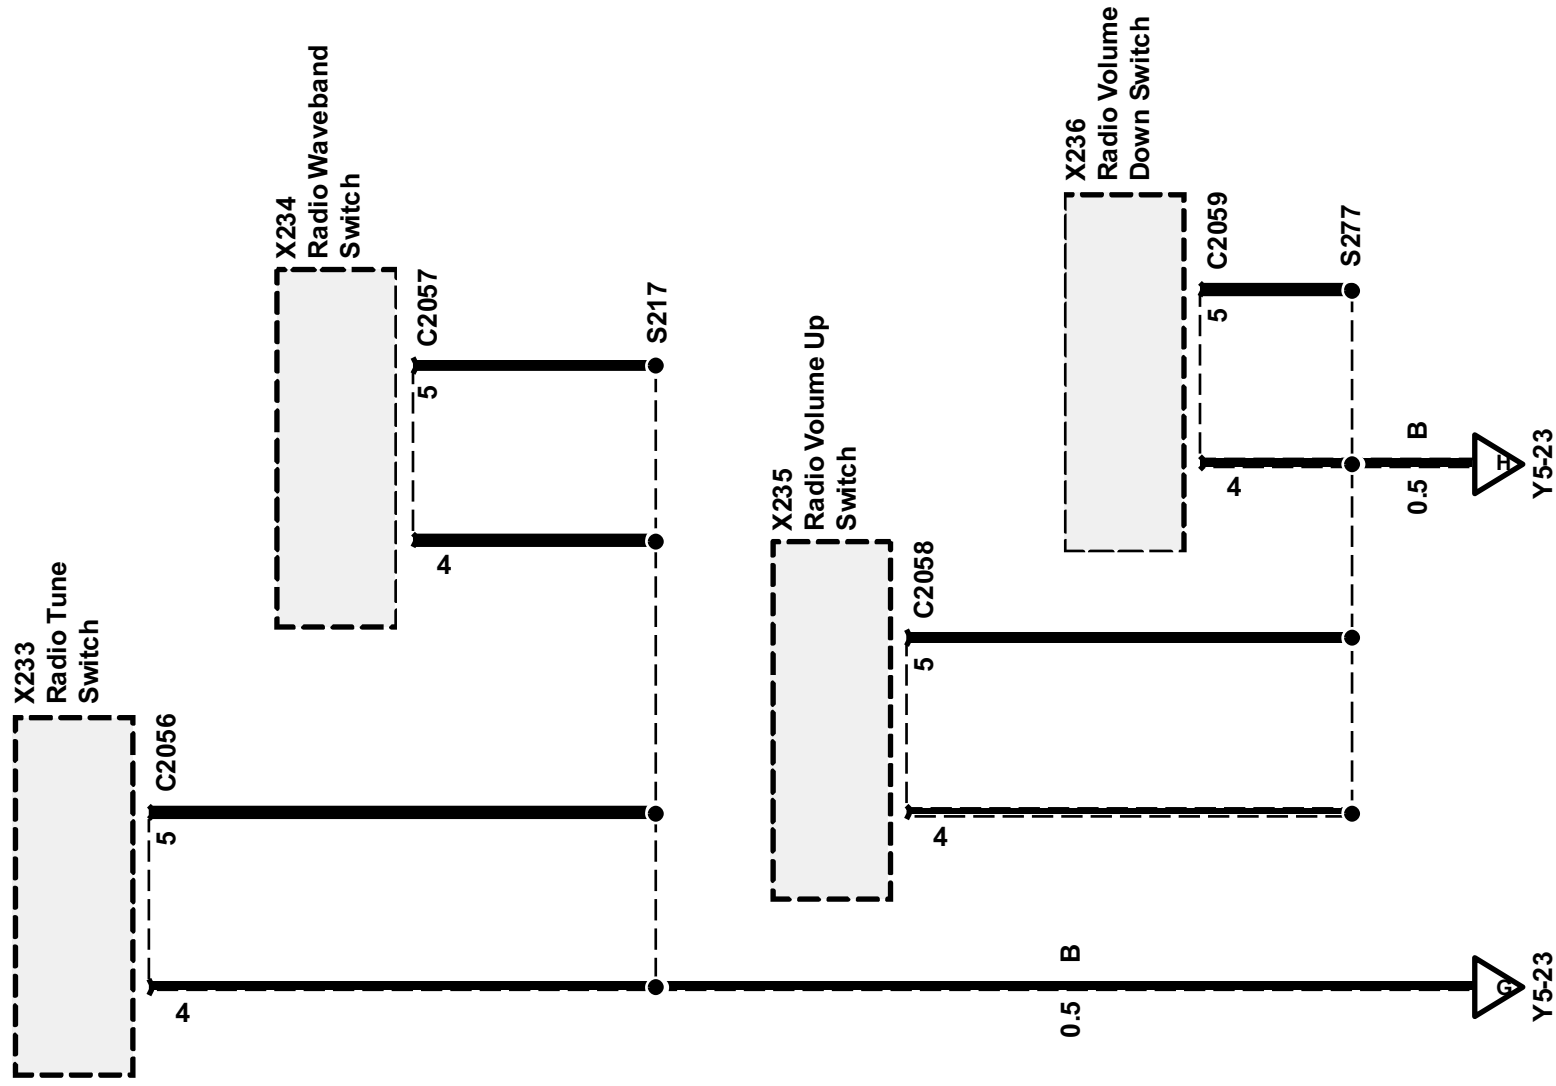

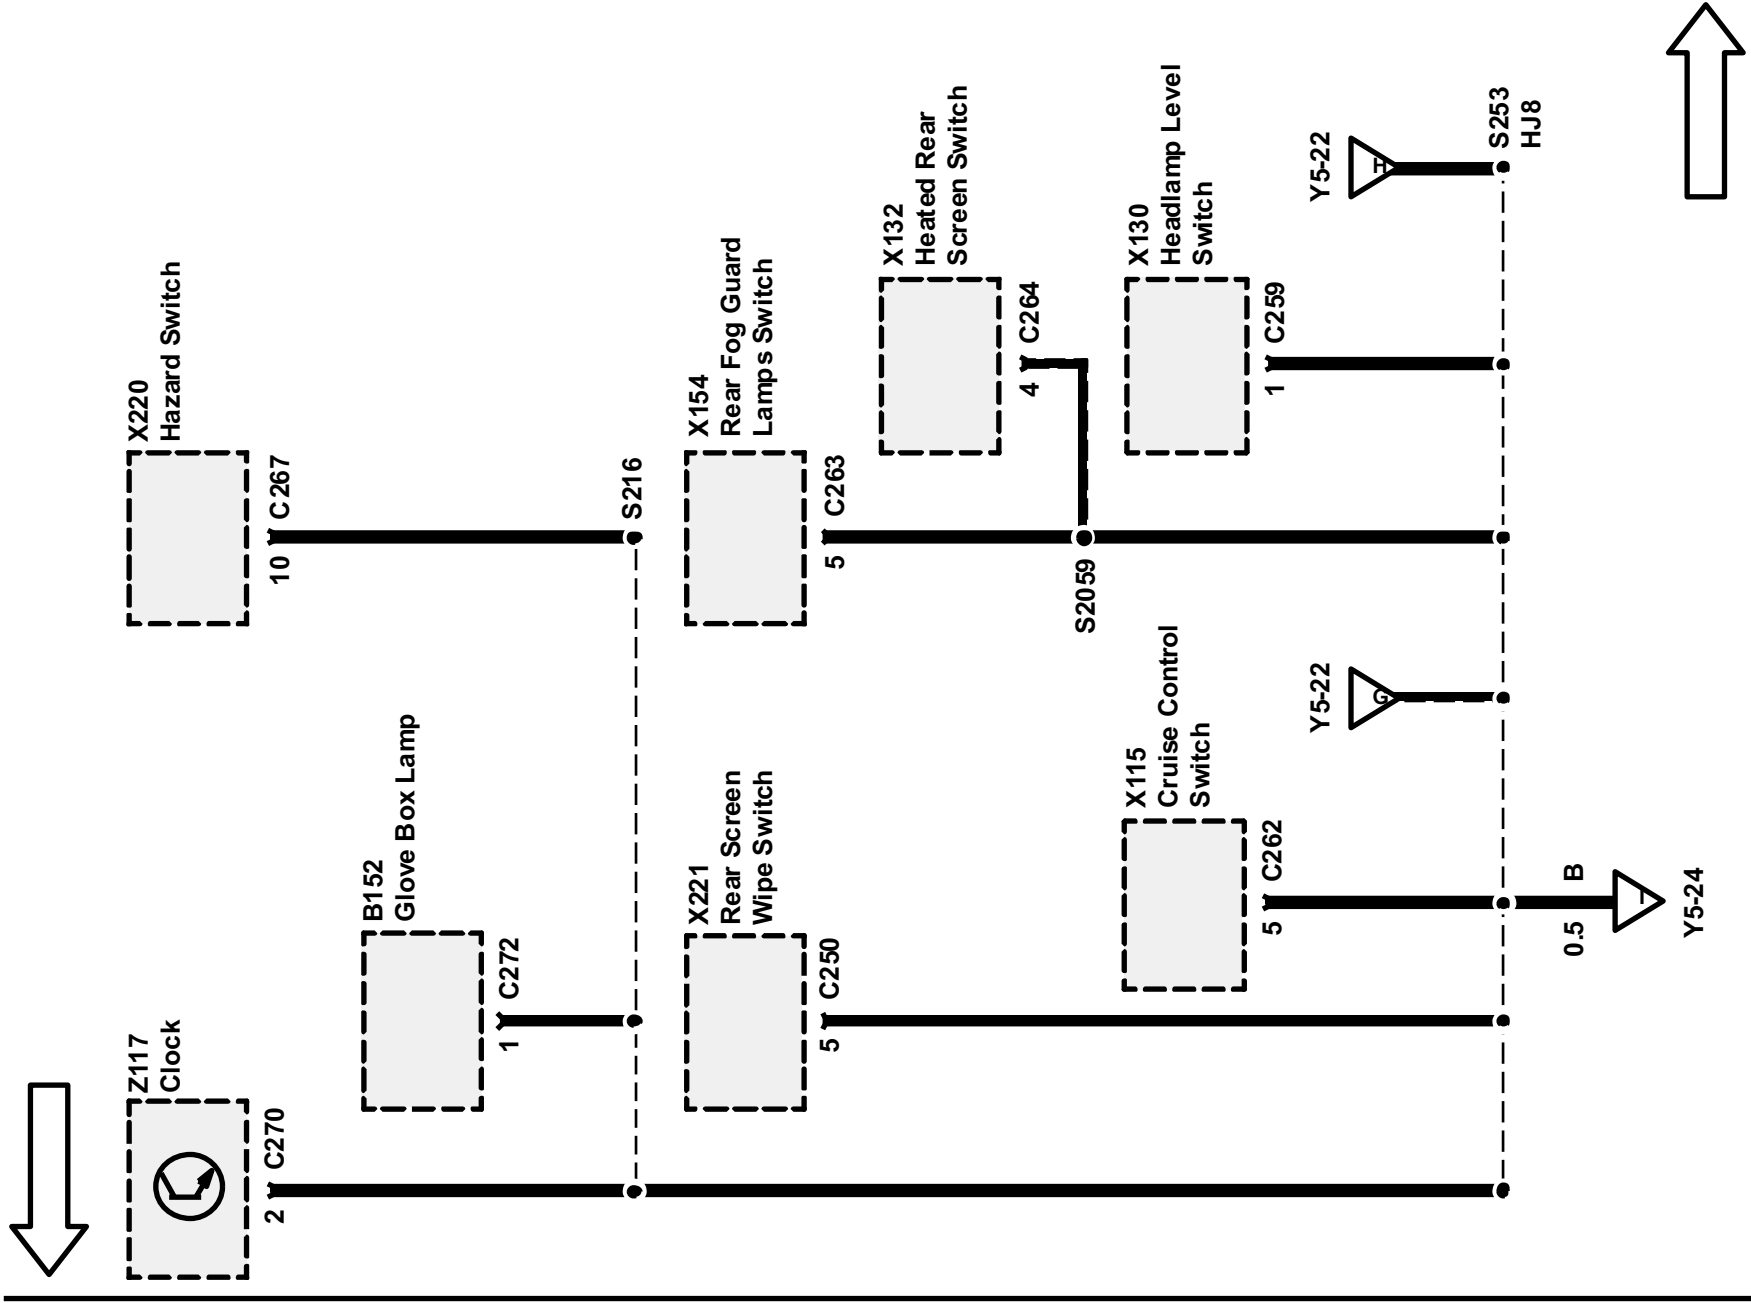

Y5 ETM

  DISCOVERY


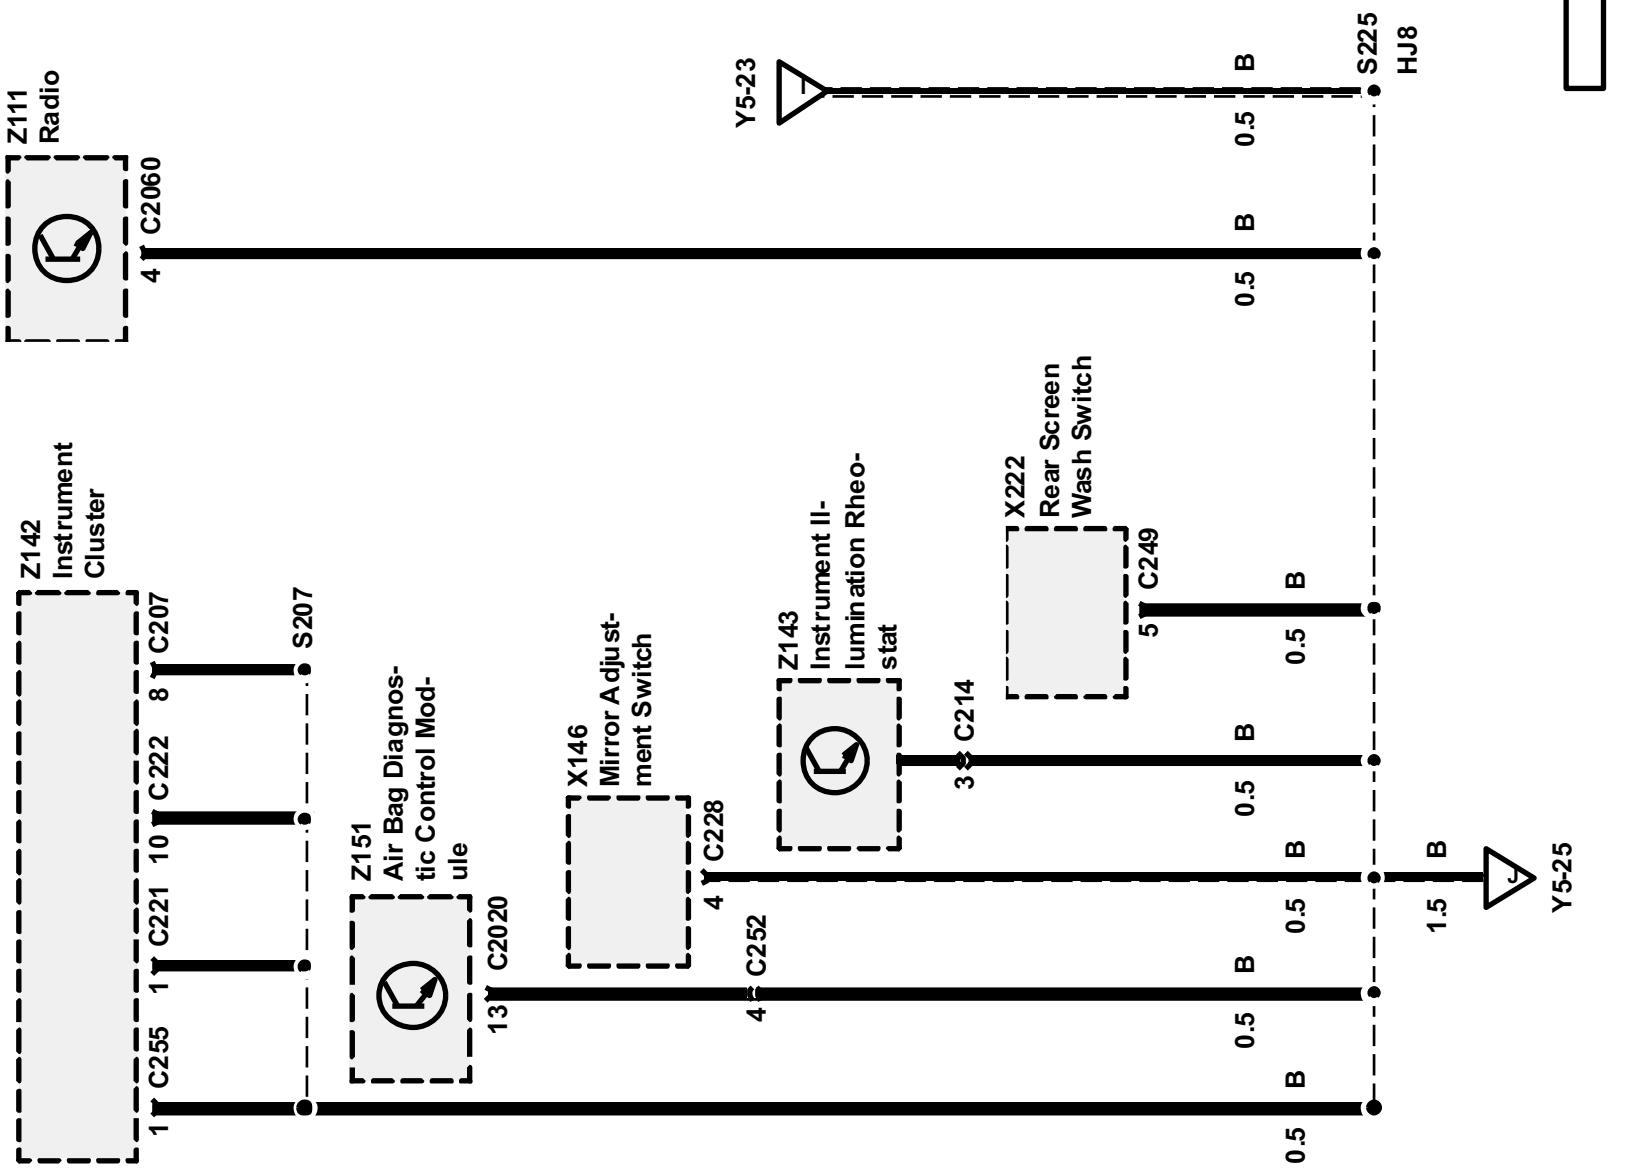



not ubrt s Ddnua G

GROUND DISTRIBUTION



ETM Y5

  DISCOVERY

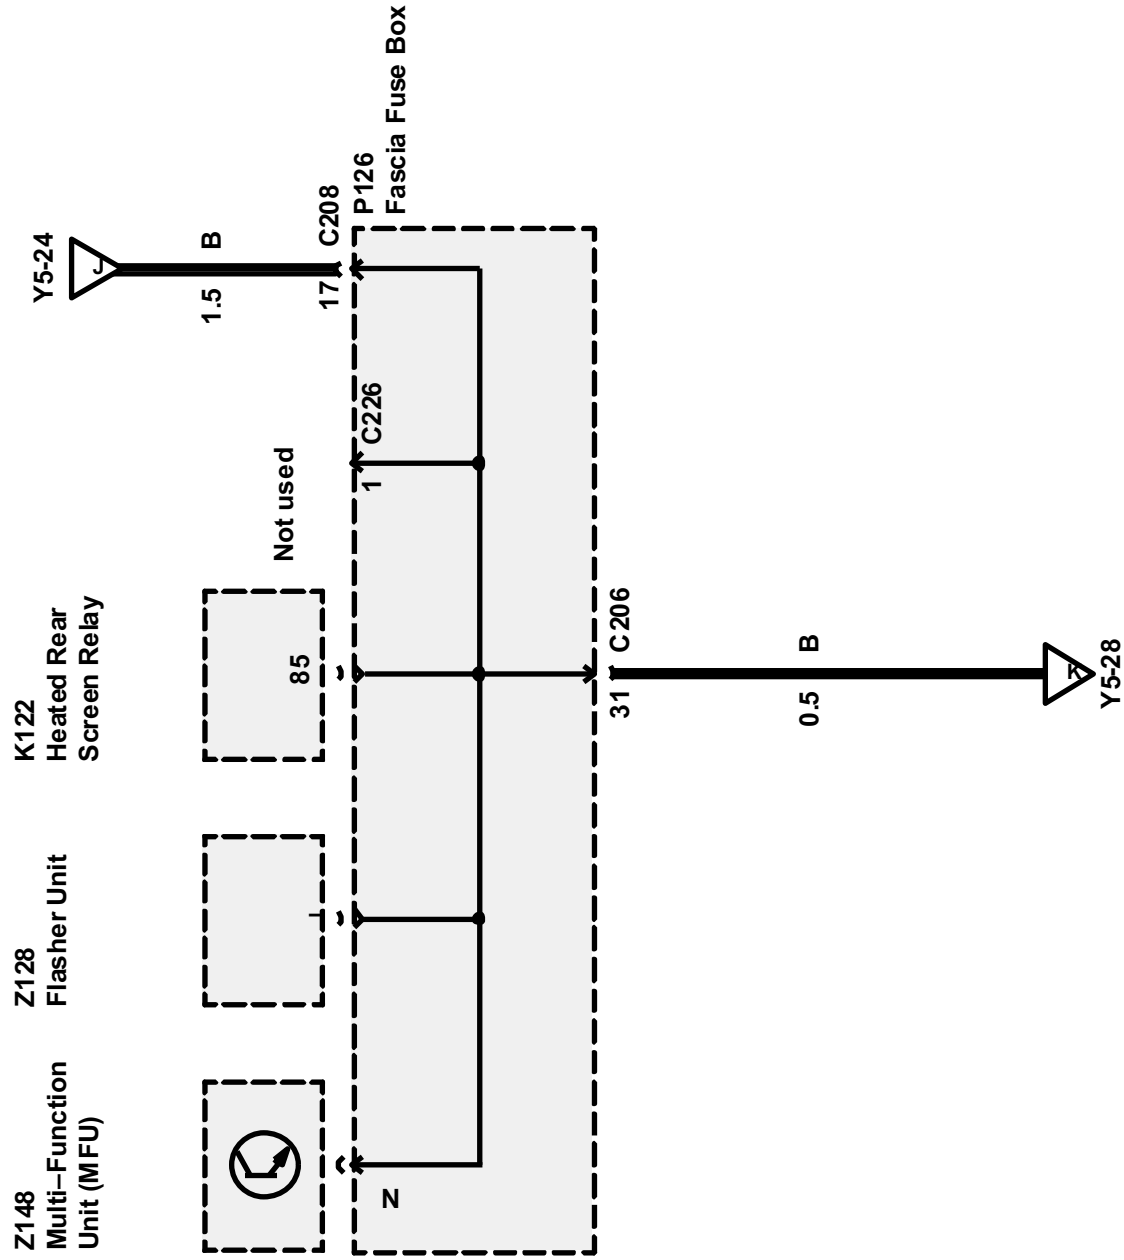

Y5 ETM

 DISCOVERY

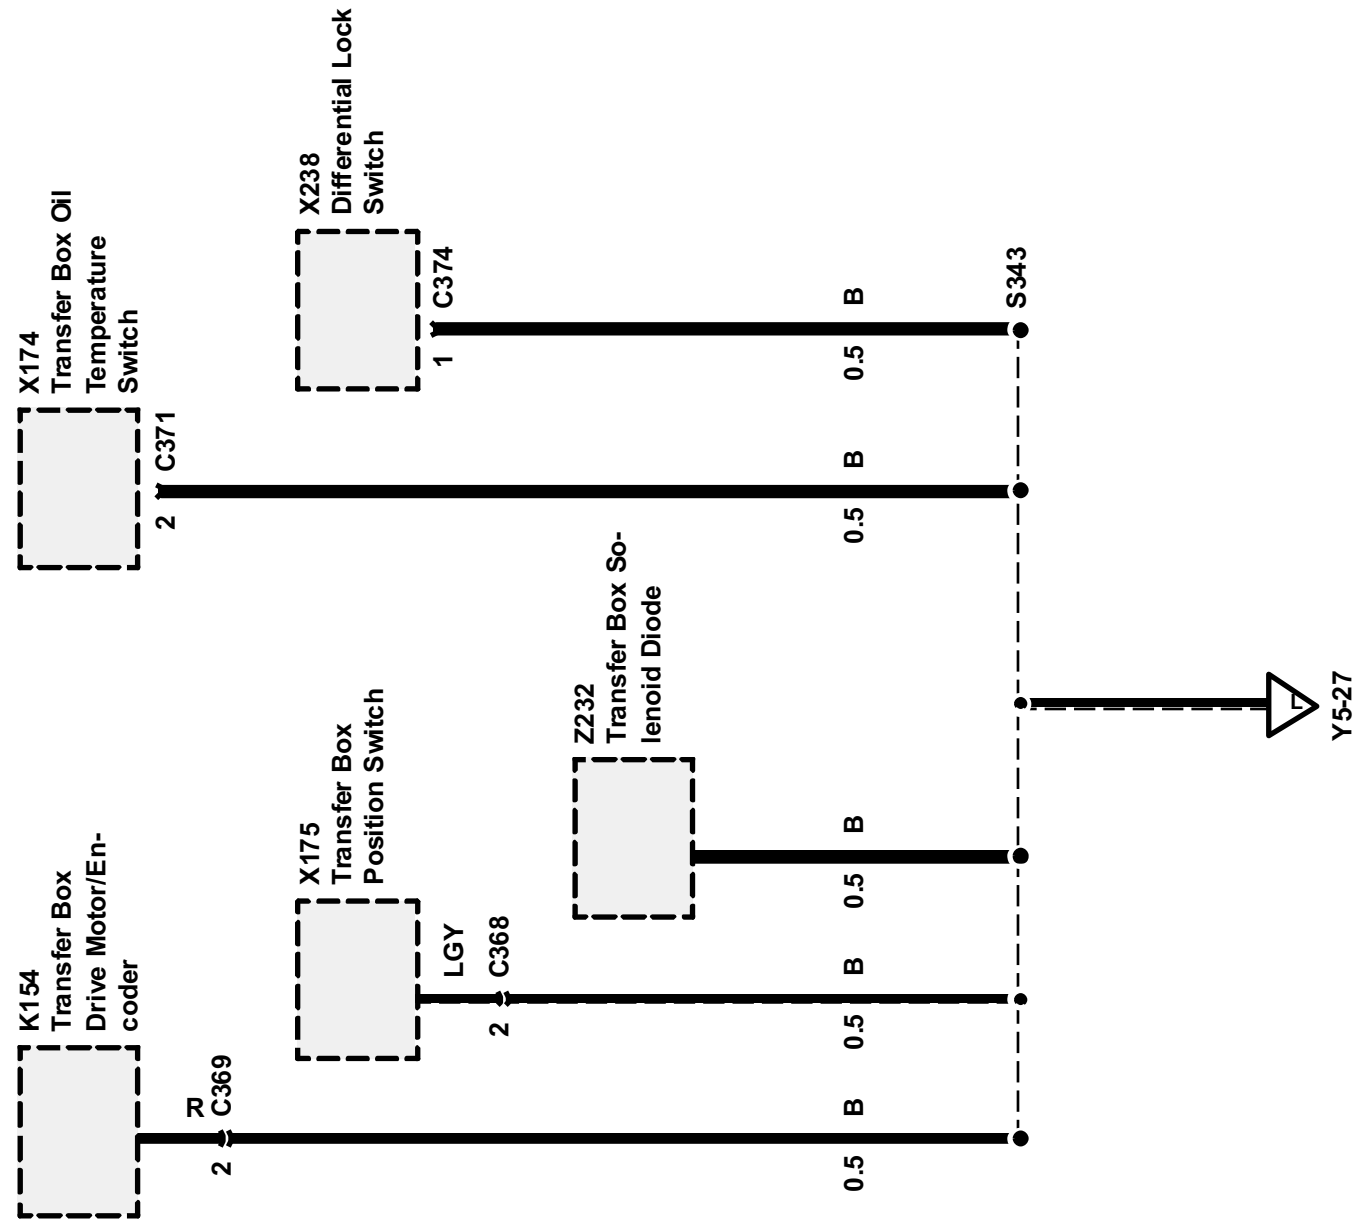


NOT FOR DISTRIBUTION

DISCOVERY



ETM Y5

GROUND DISTRIBUTION

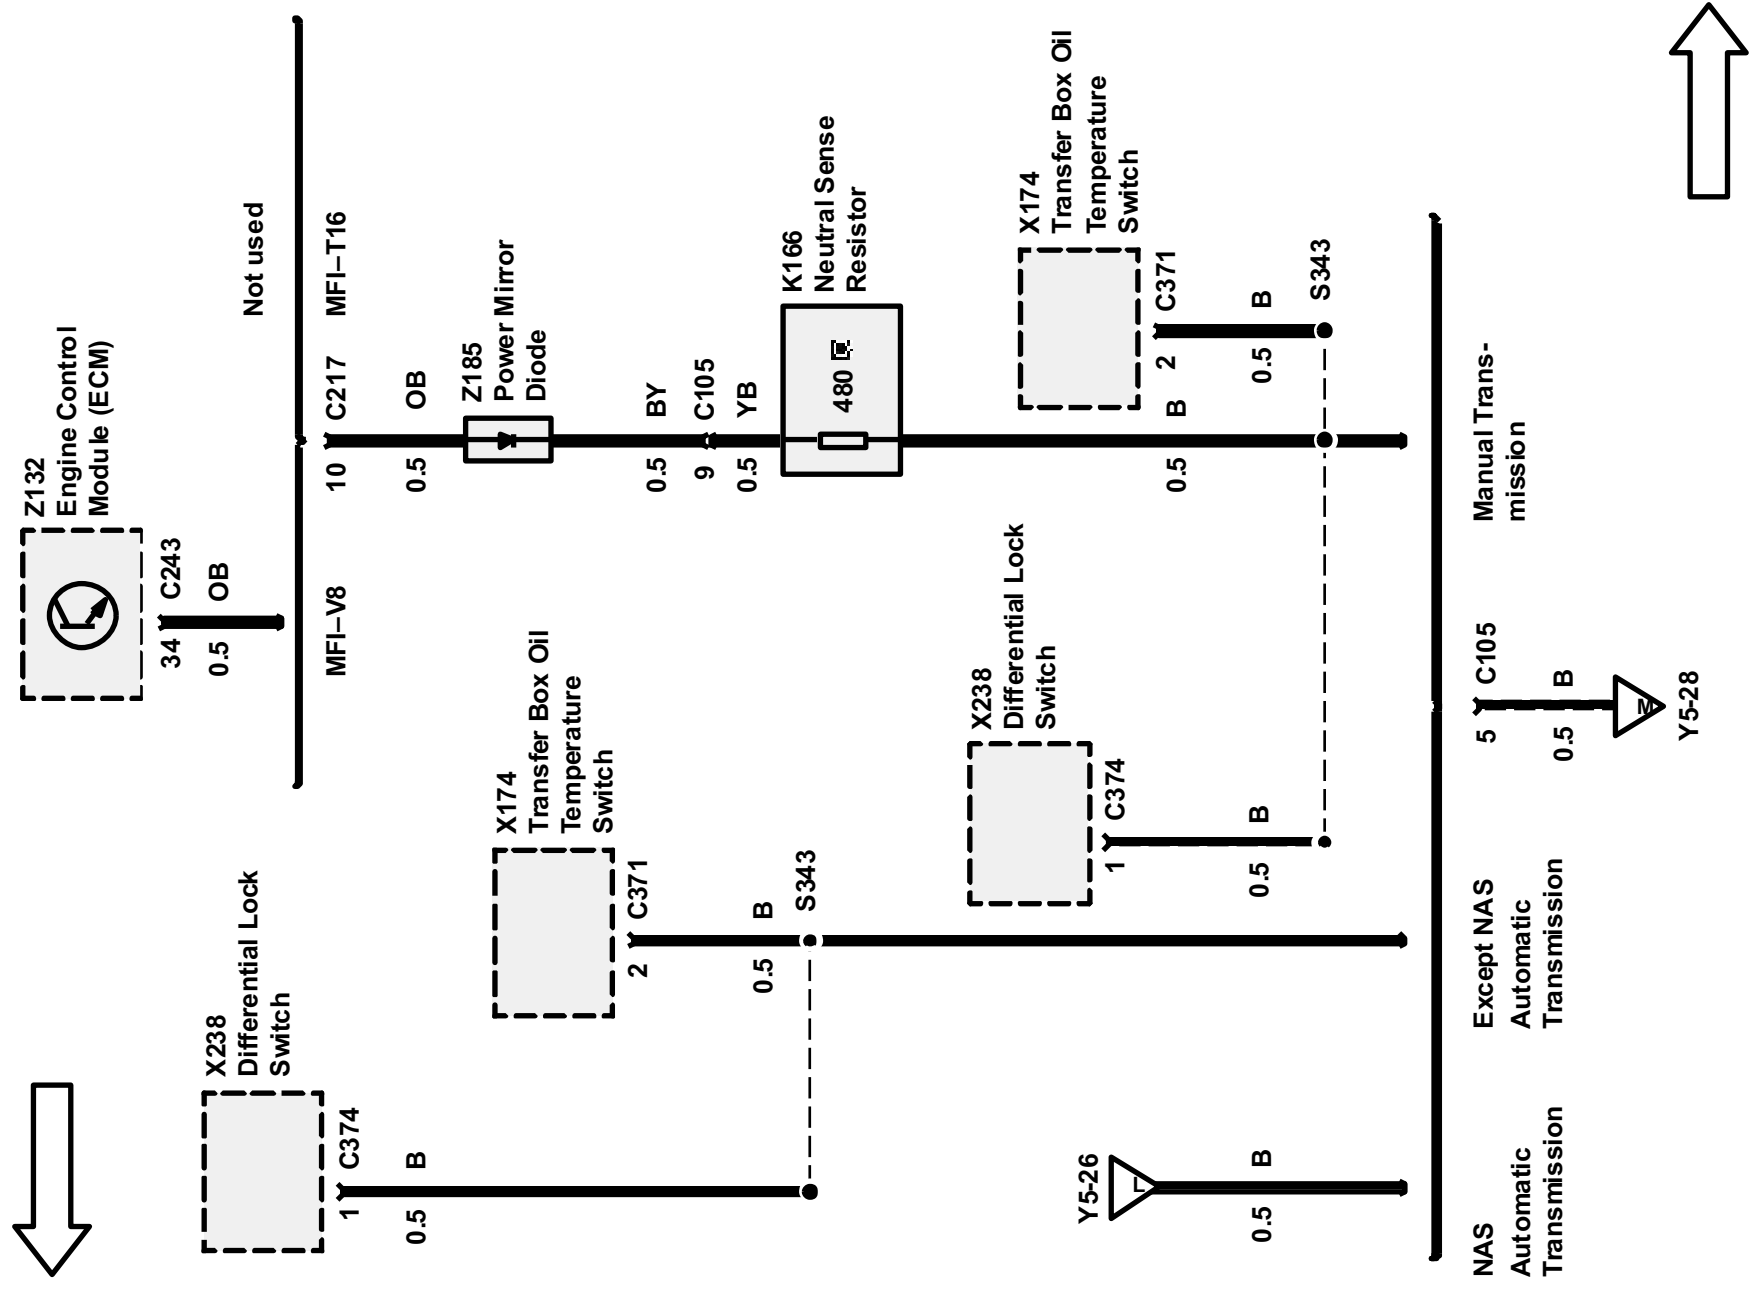

Y5 ETM

 
DISCOVERY

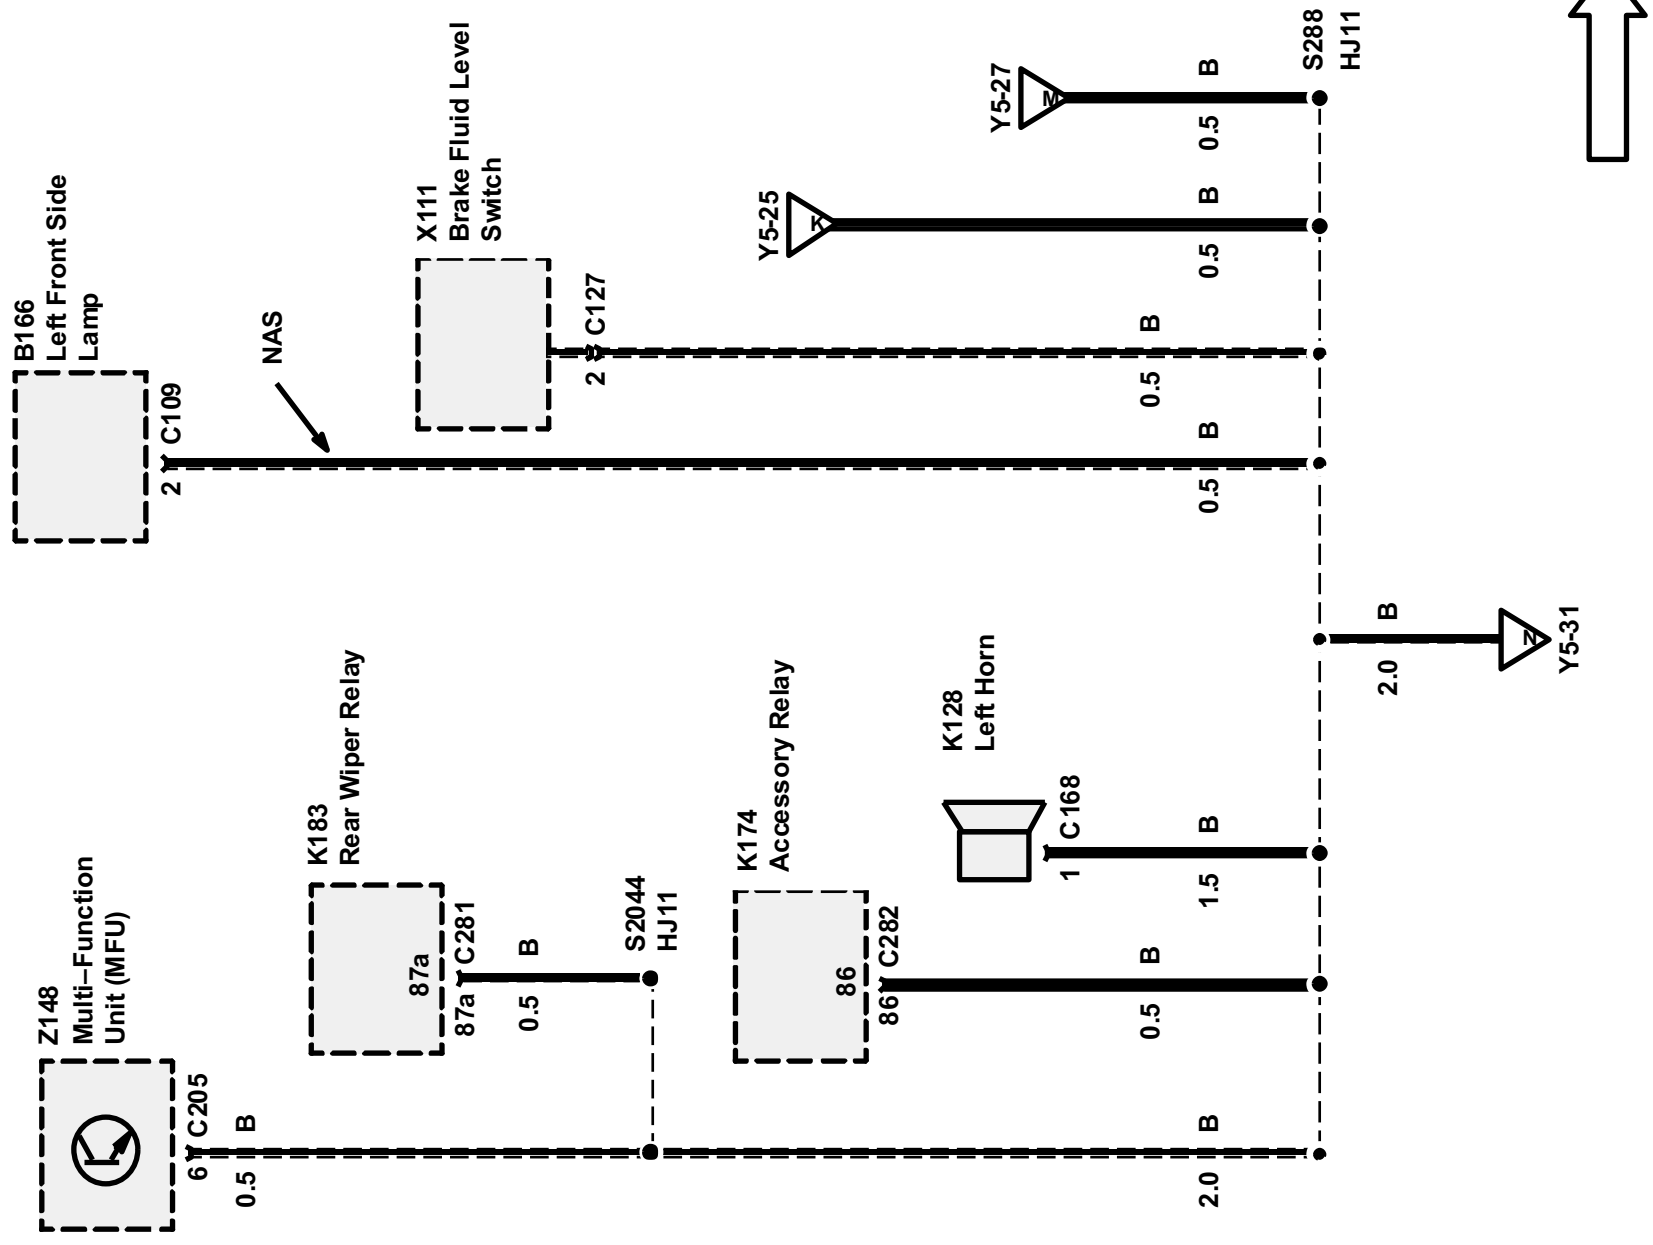

DISCOVERY


ETM Y5

Ground Distribution


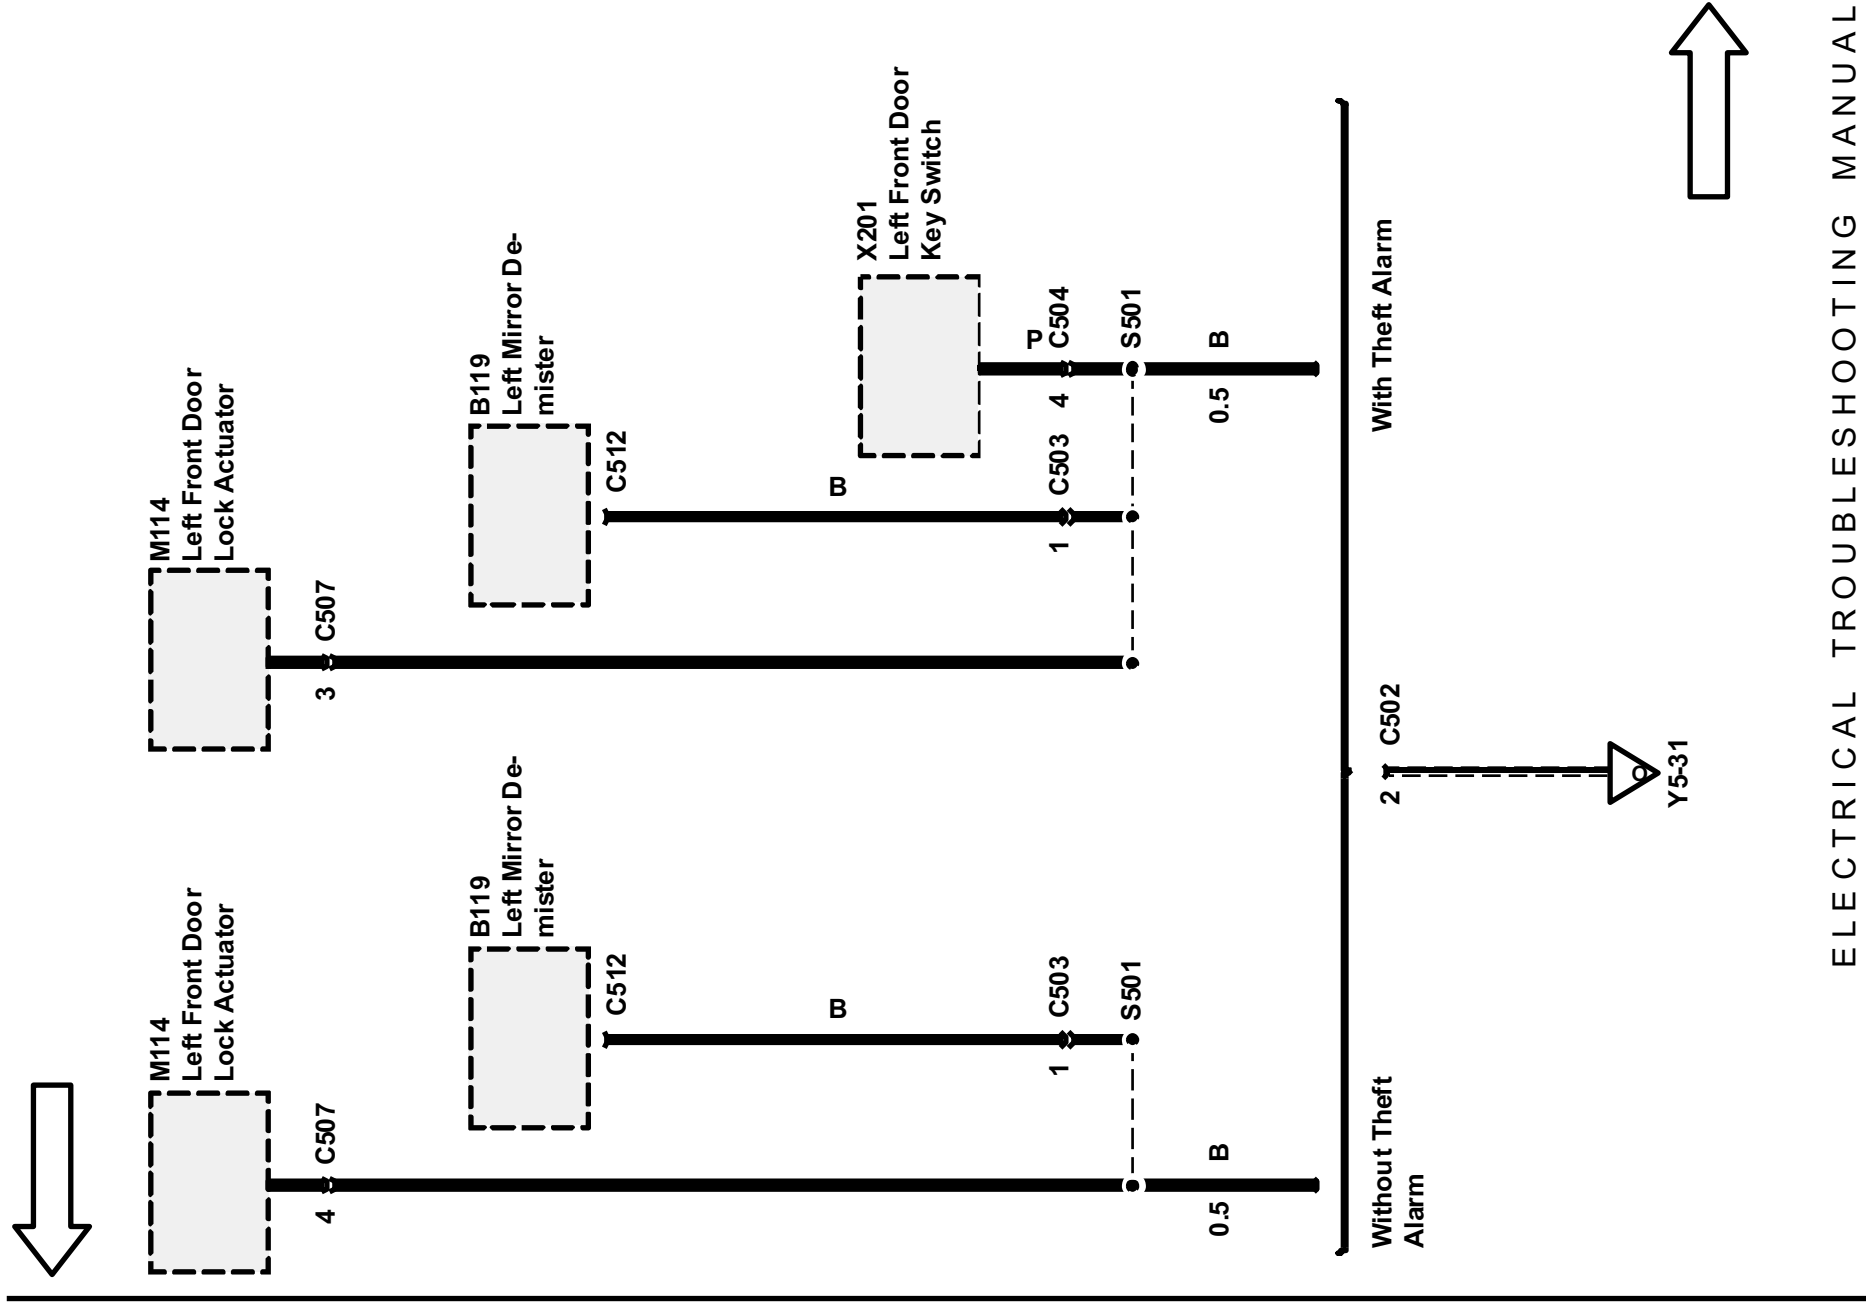


Y5 ETM

 DISCOVERY




not ubirt s Ddnua G

 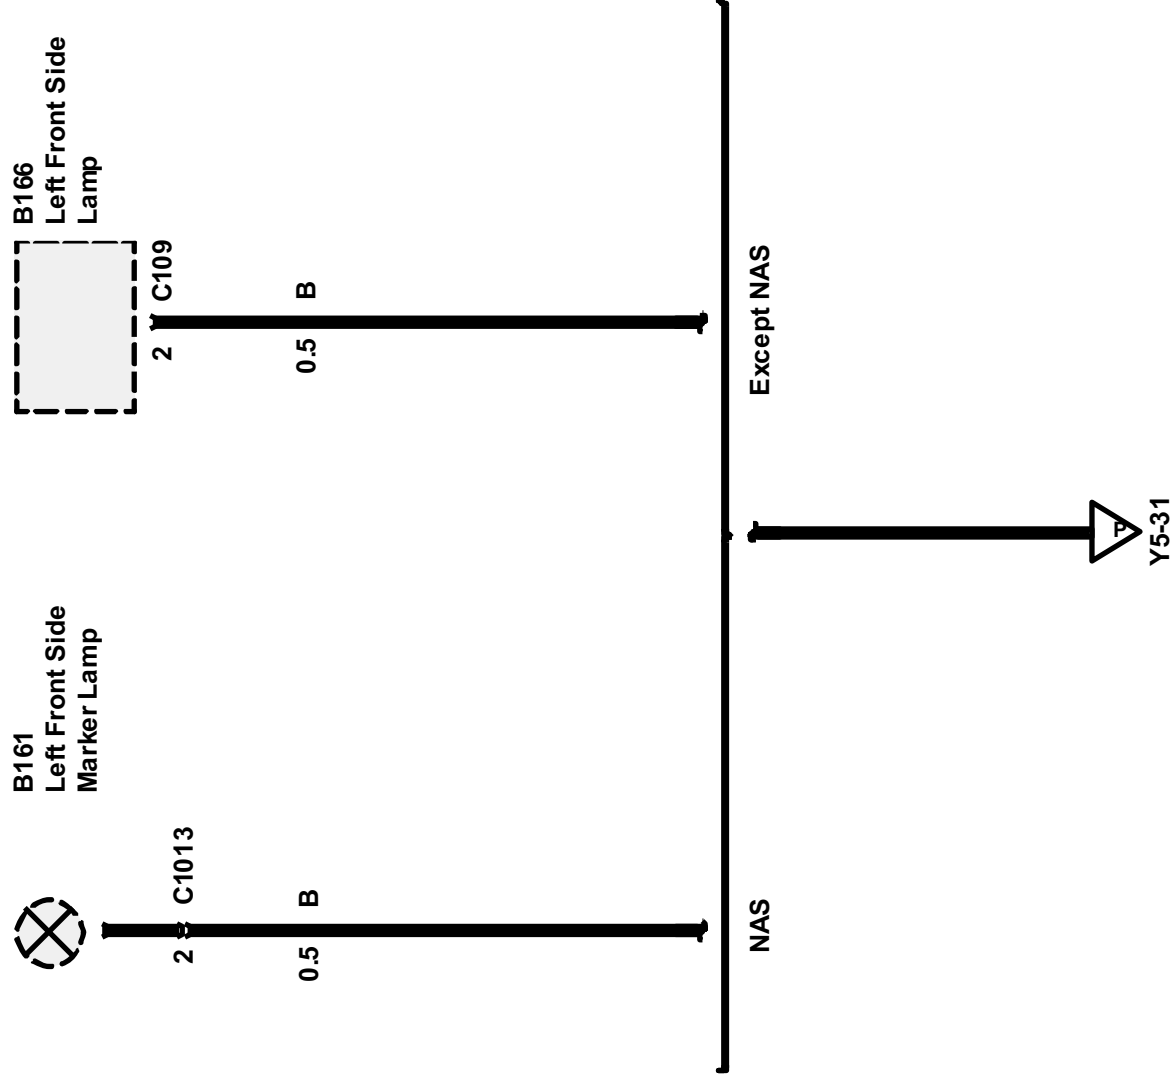

DISCOVERY




ETM Y5


Ground Distribution

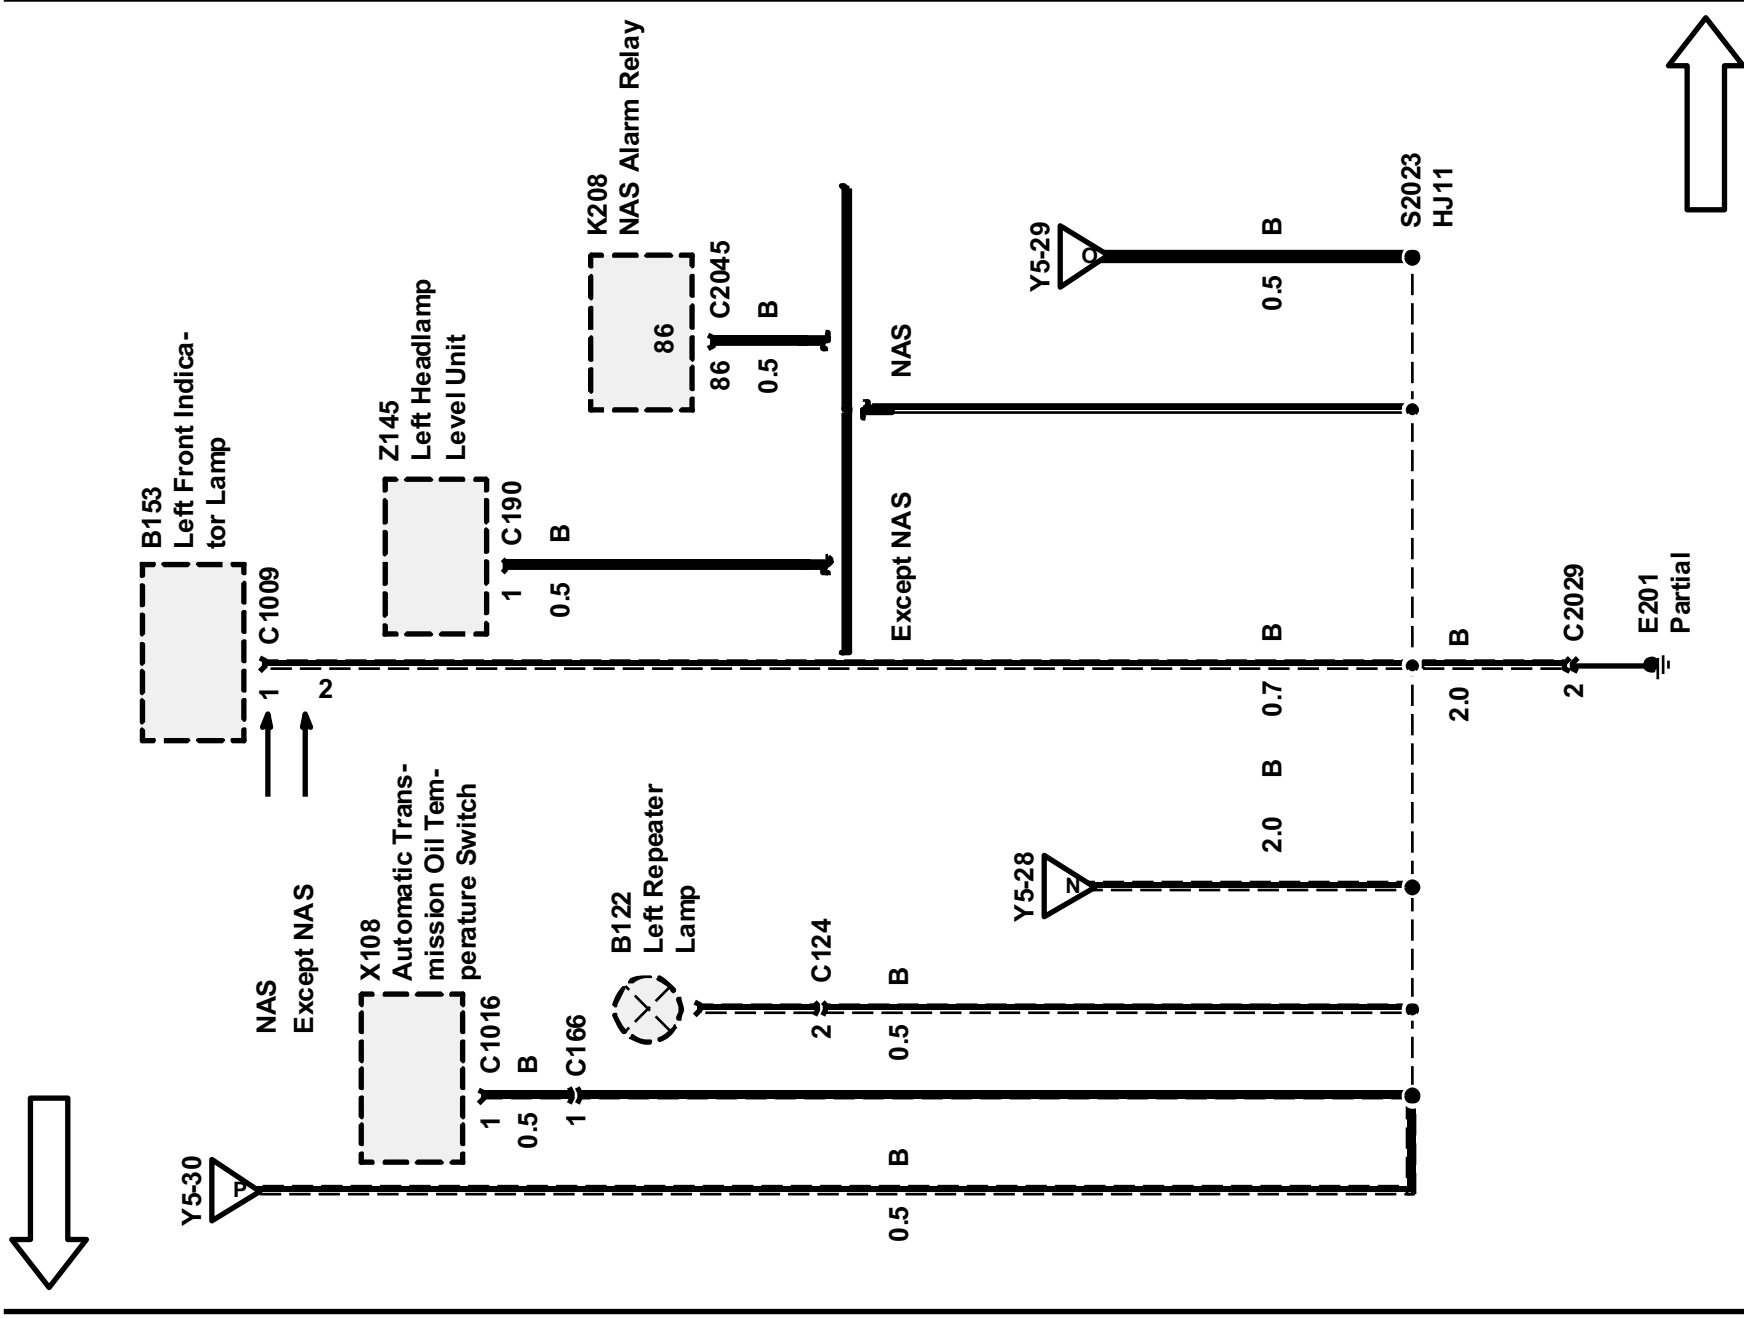

Y5 ETM

 
 

DISCOVERY

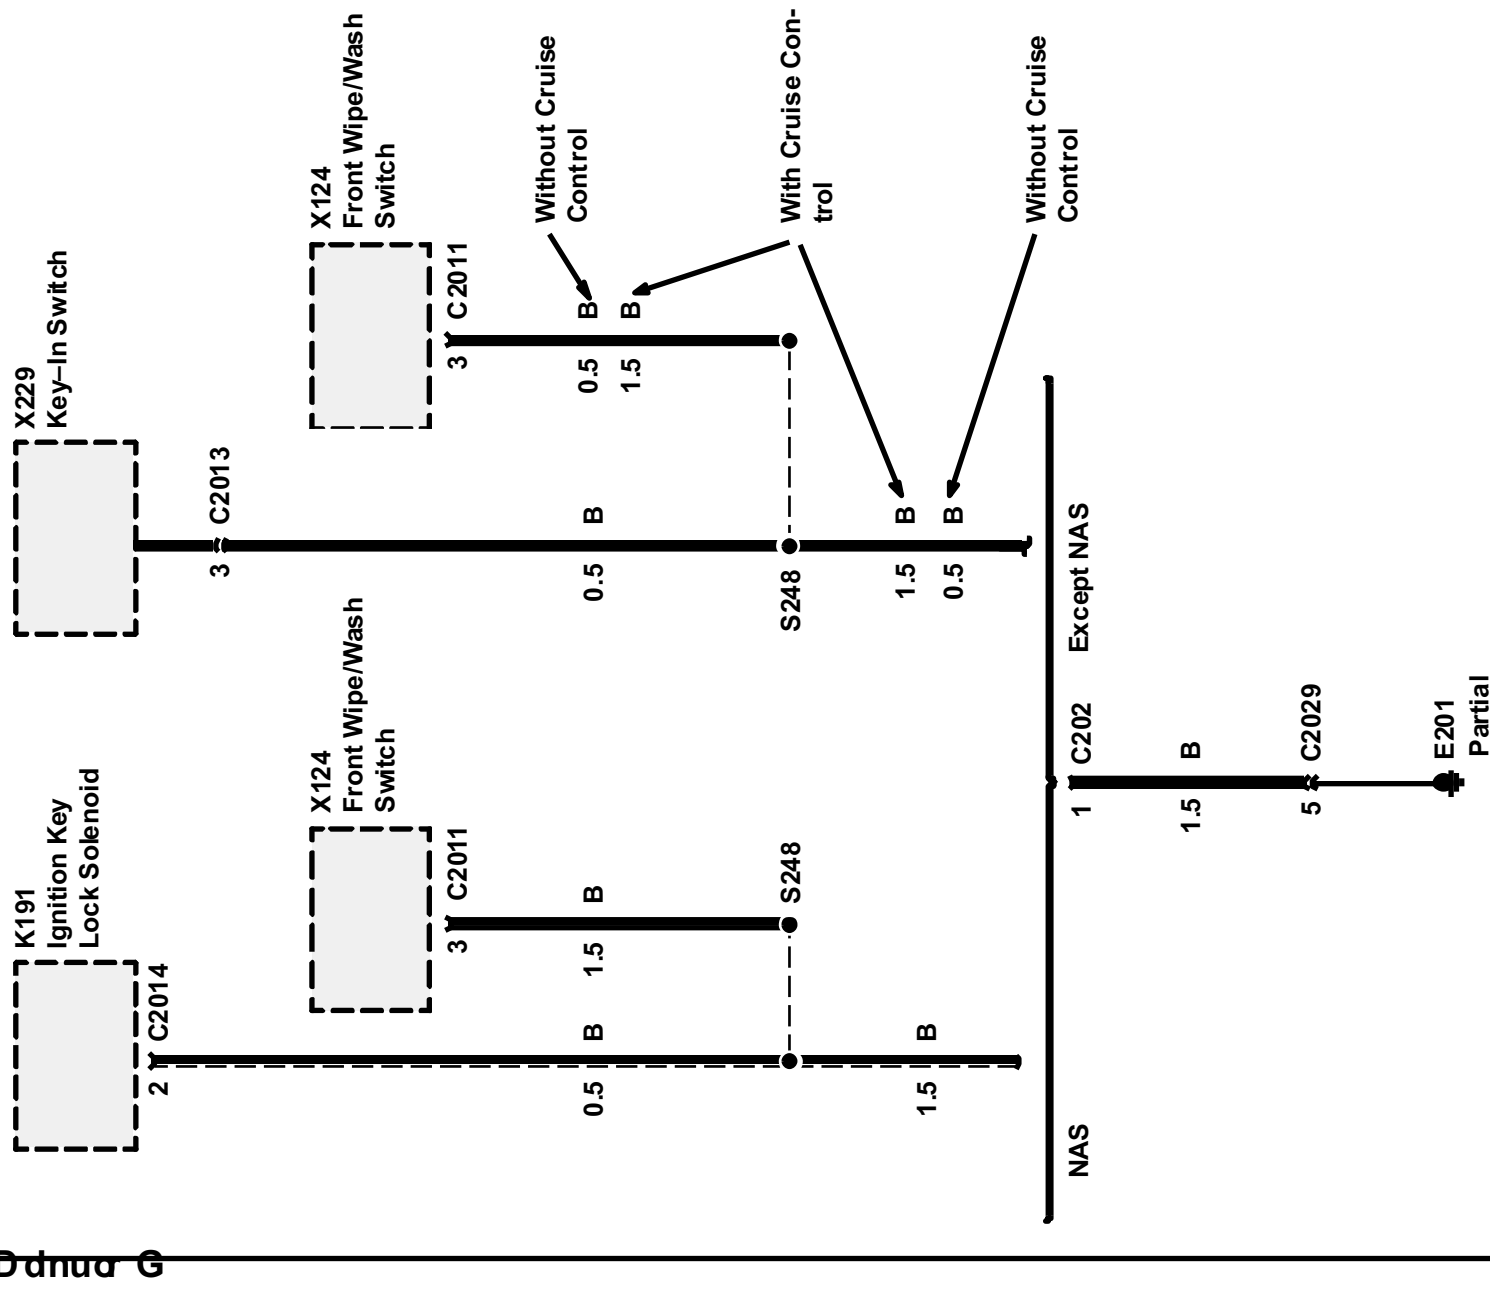

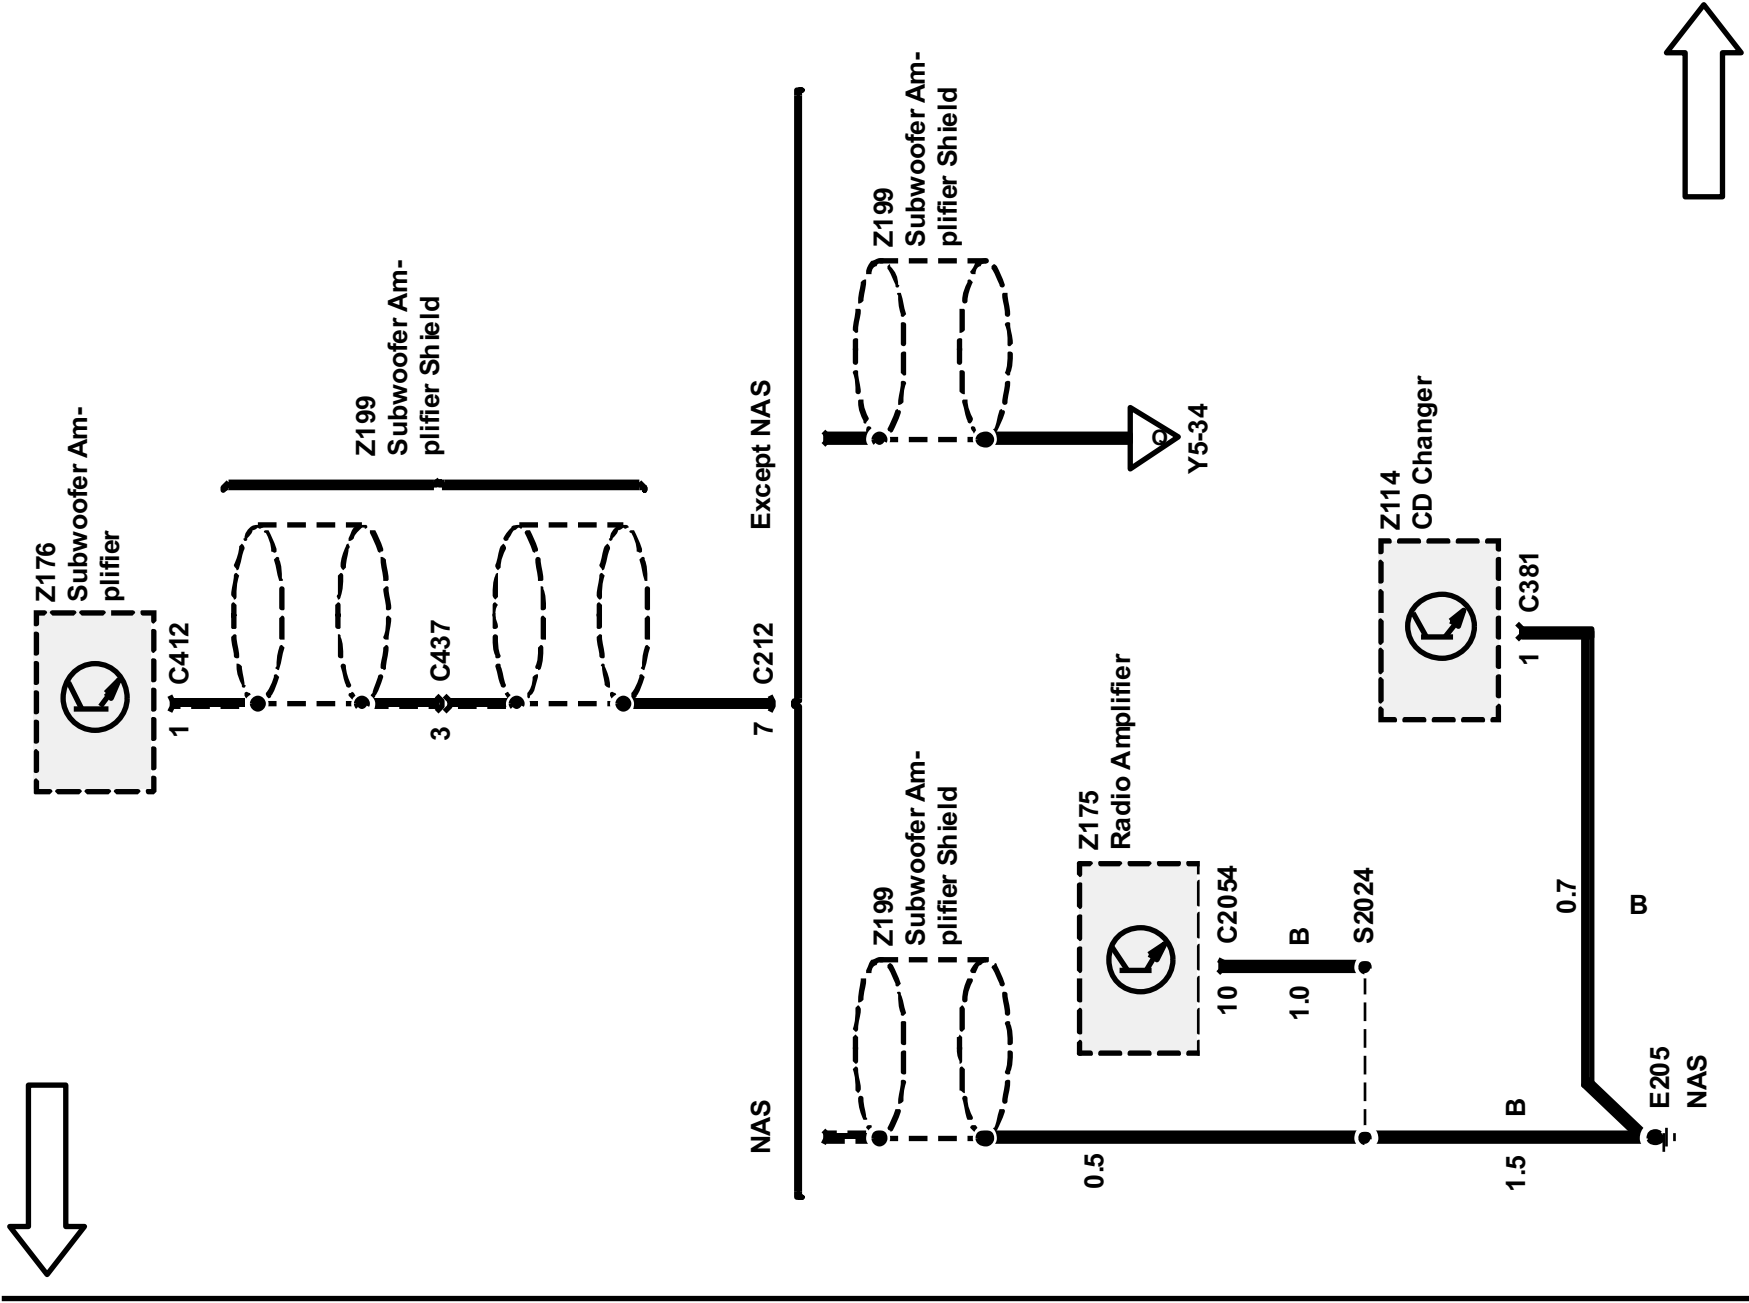

Y5 ETM

  
DISCOVERY

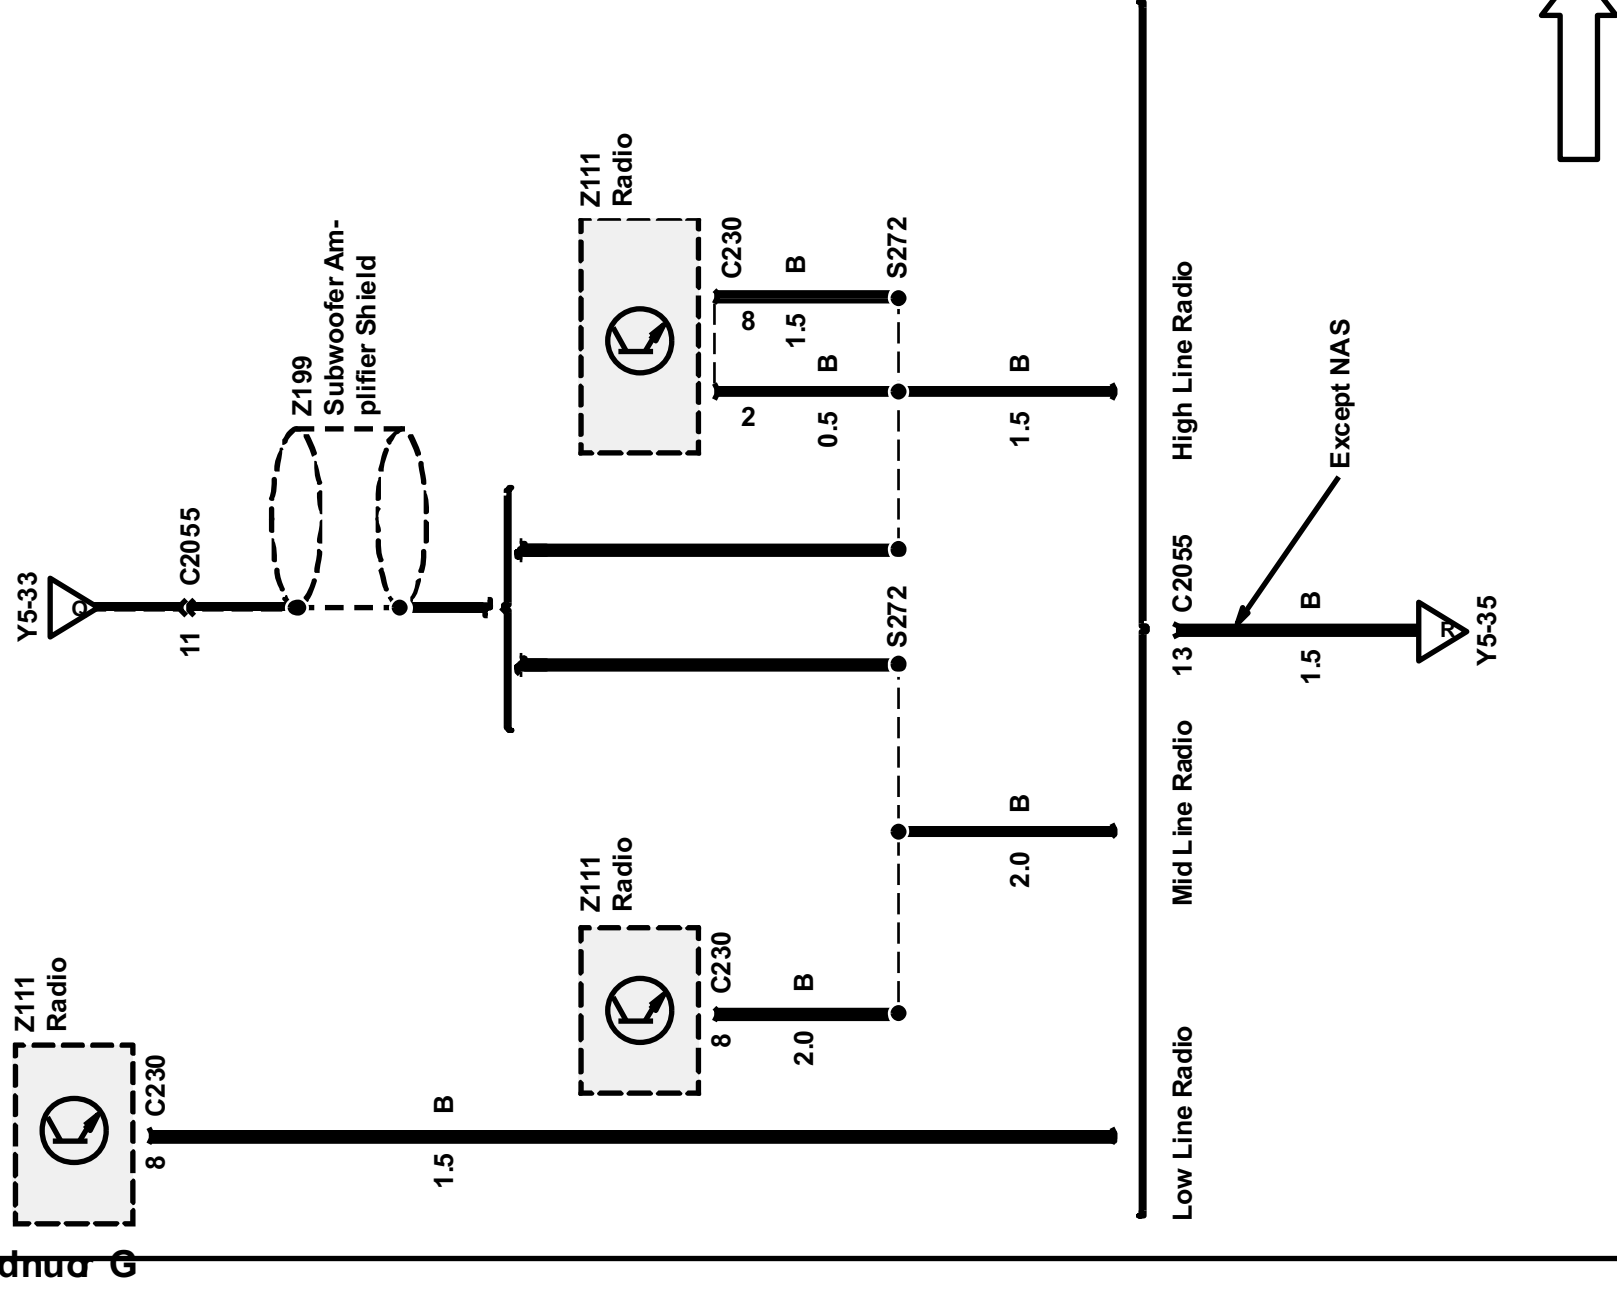

DISCOVERY


ETM Y5

Ground Distribution

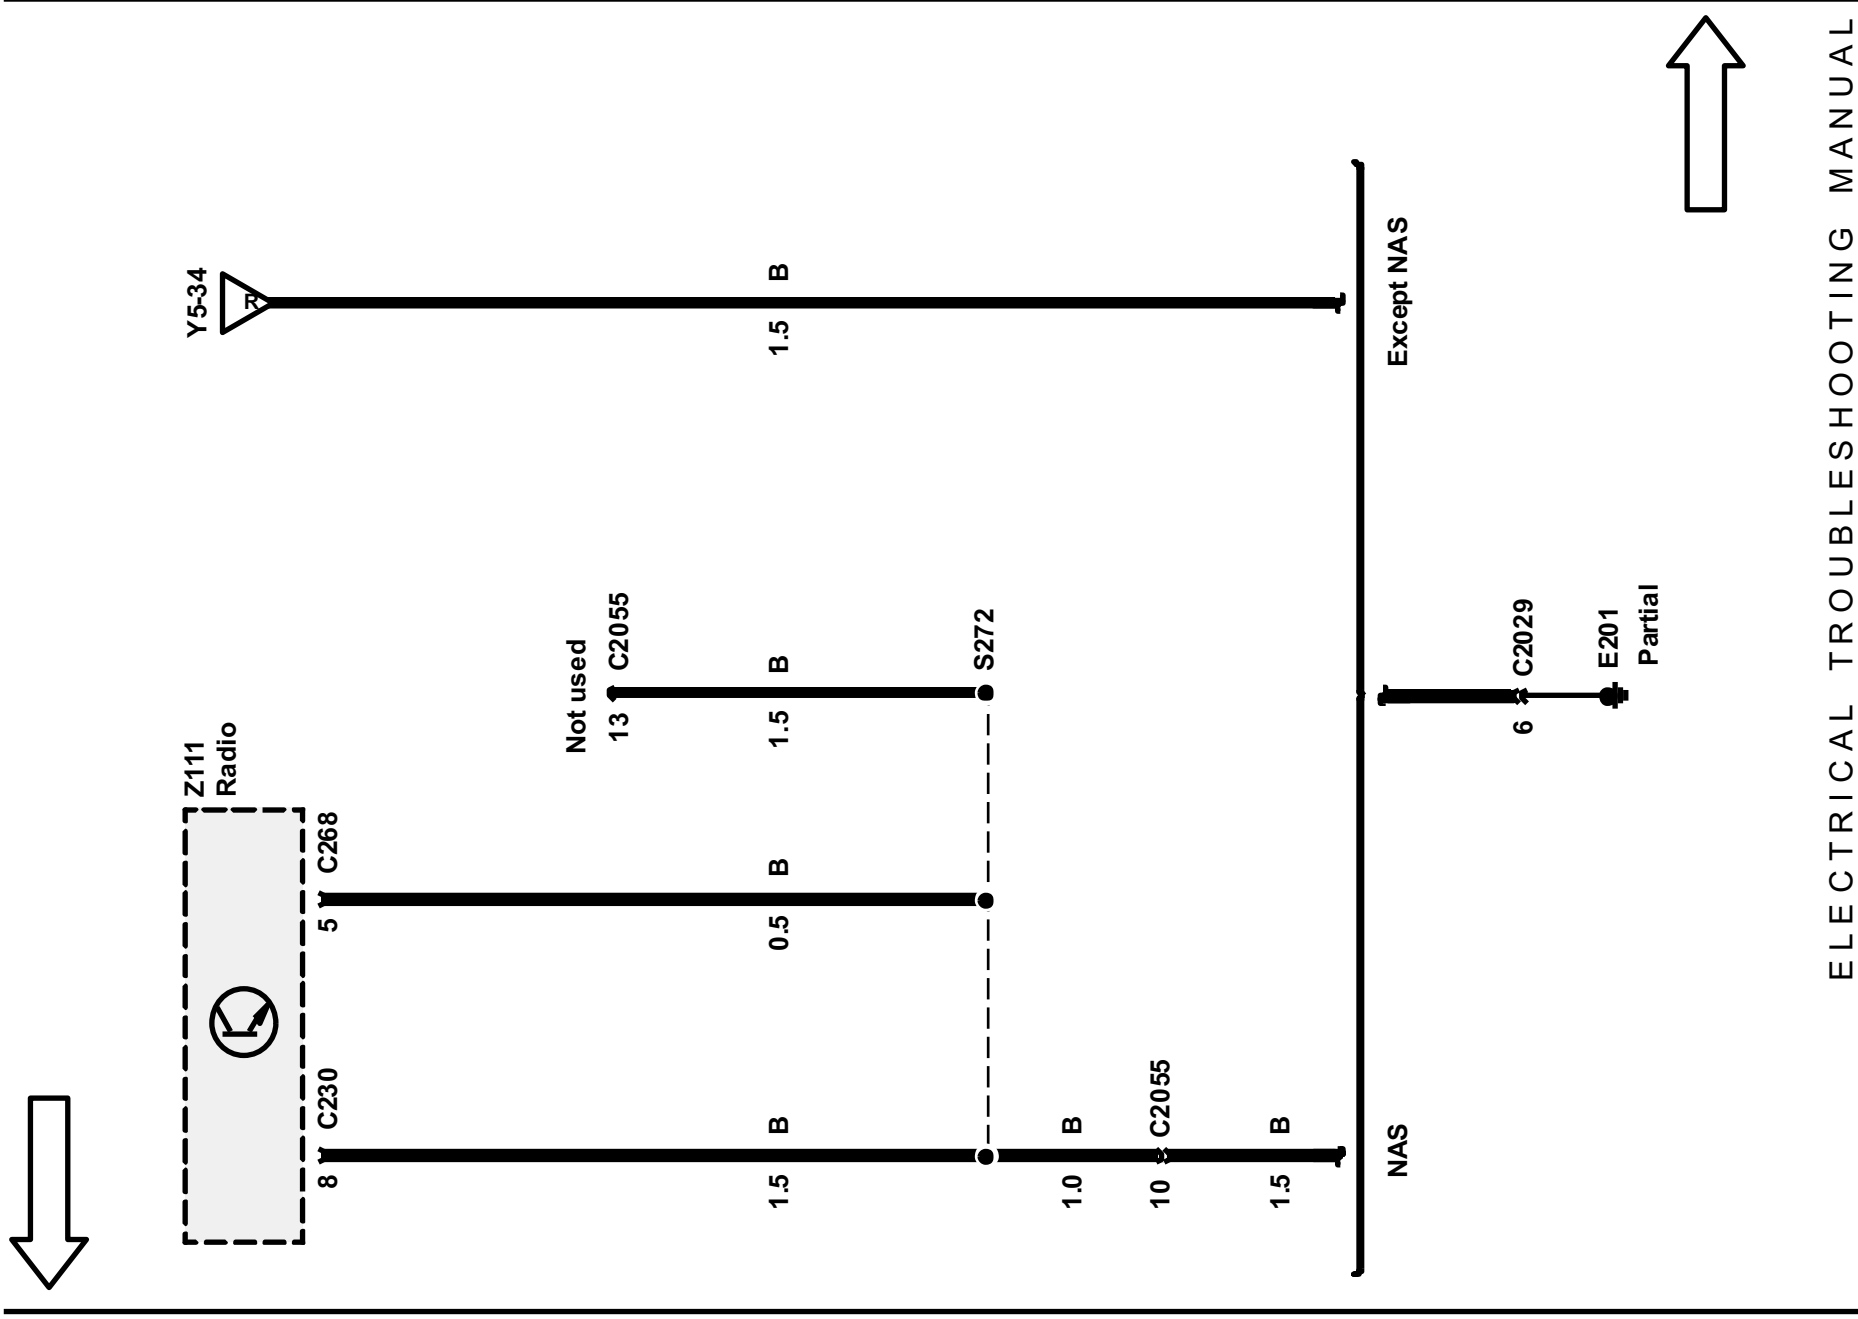

Y5 ETM

 DISCOVERY



27 31 C312



6 9 10 13 C129




85

C352



85

C351

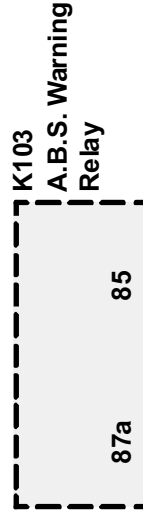

87a

85

87a

C350

S2051

 
1.0 B


S132

6.0 B

E203



E204



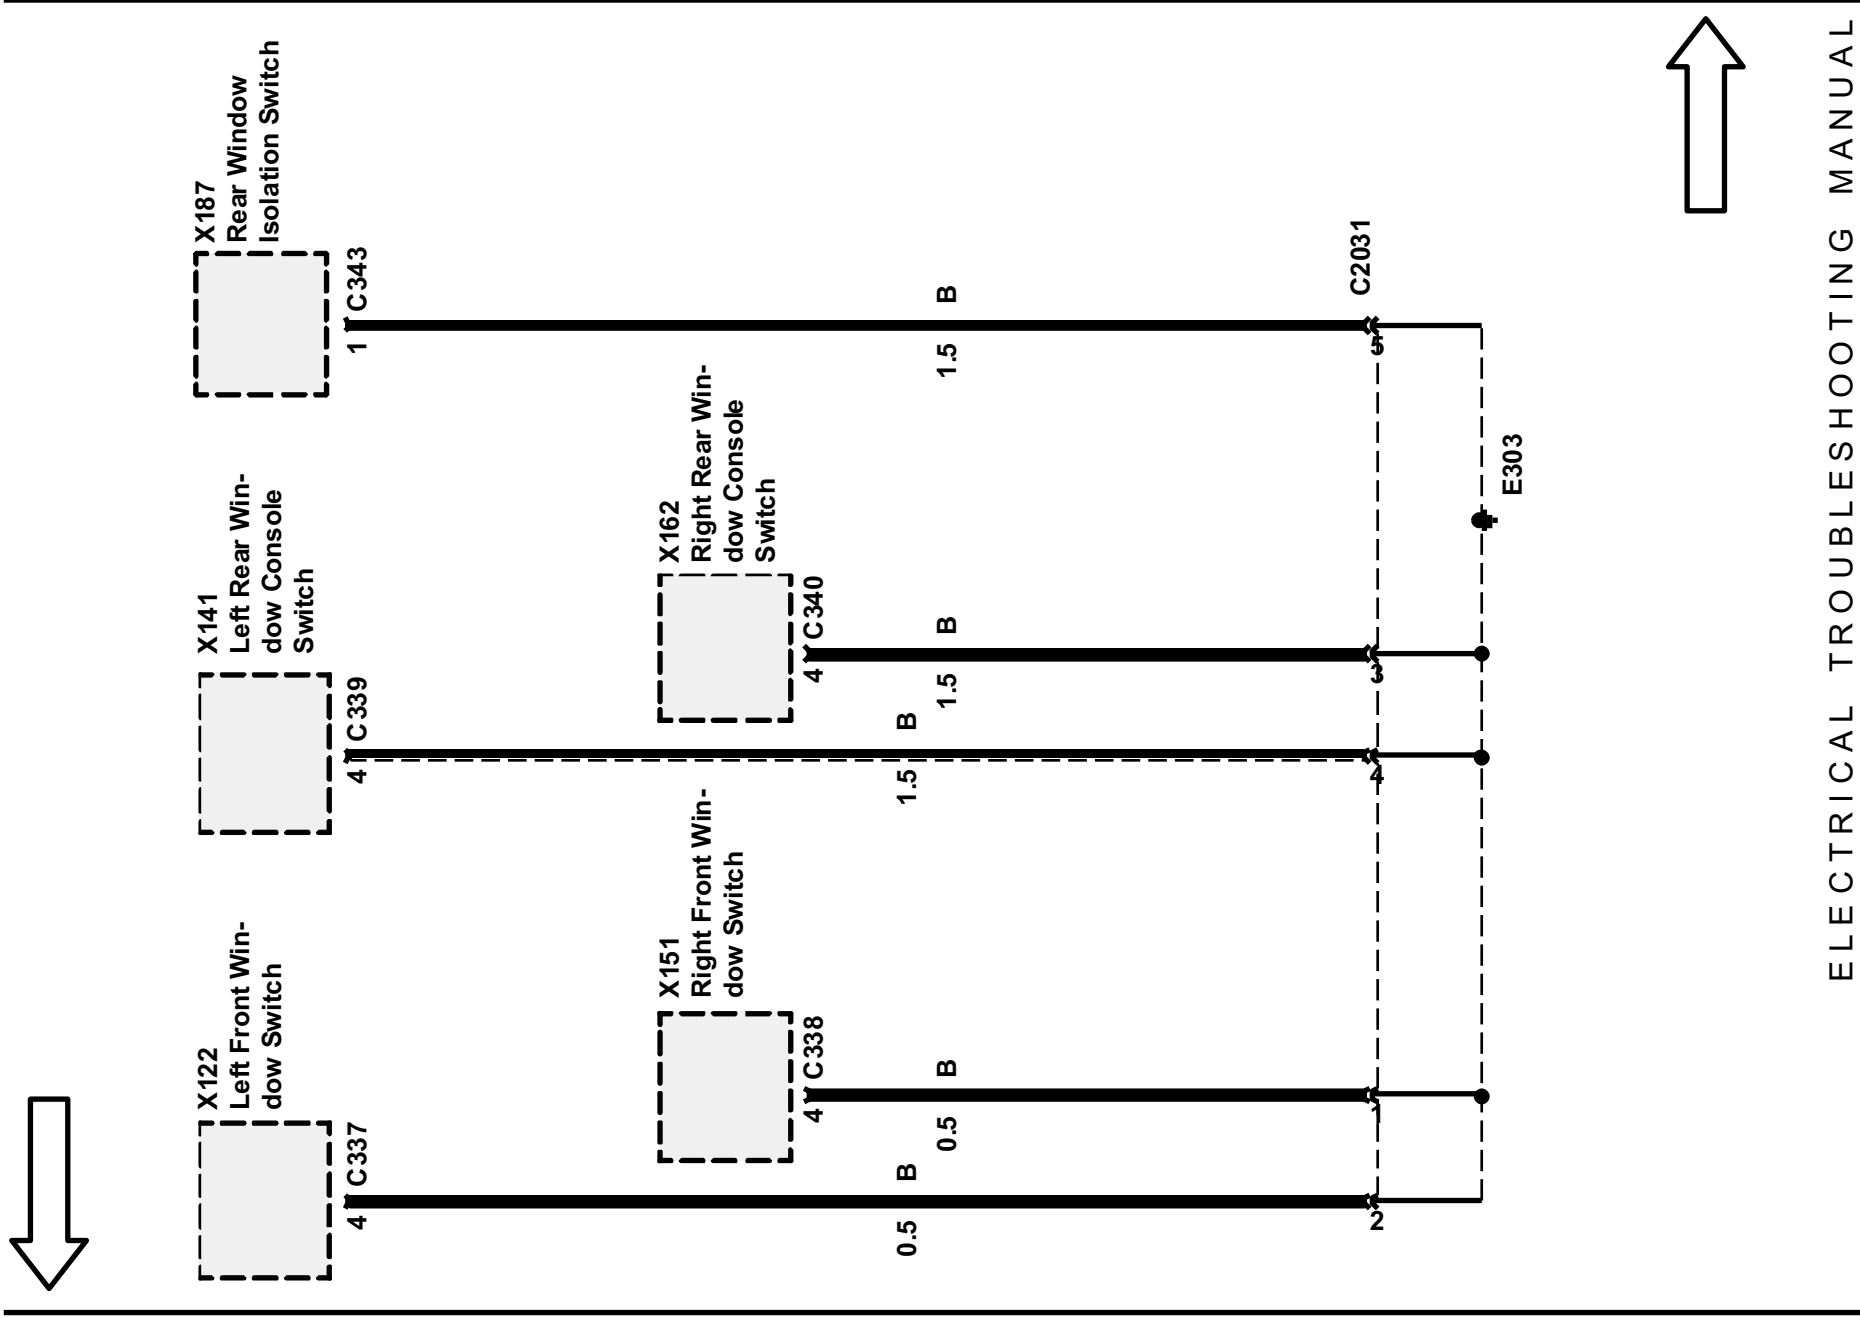

Y5 ETM

 
DISCOVERY

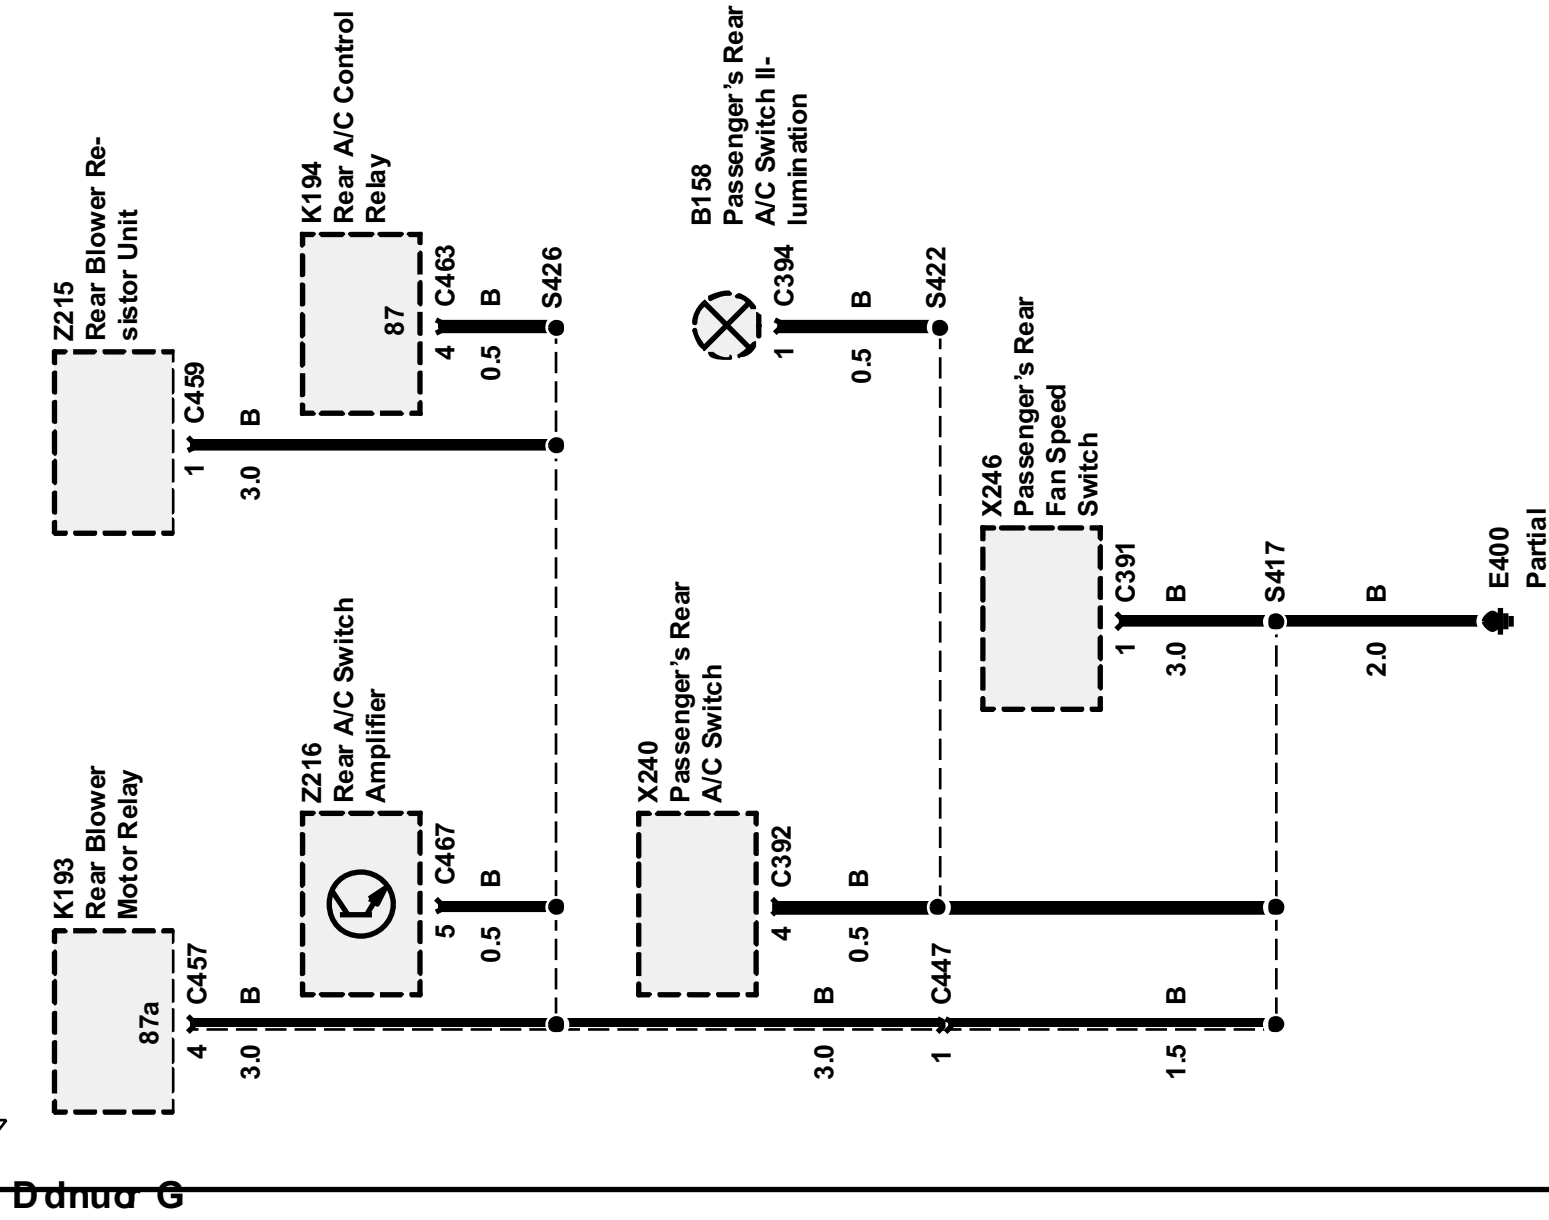

DISCOVERY




ETM Y5

 Ground Distribution



Y5 ETM

  DISCOVERY

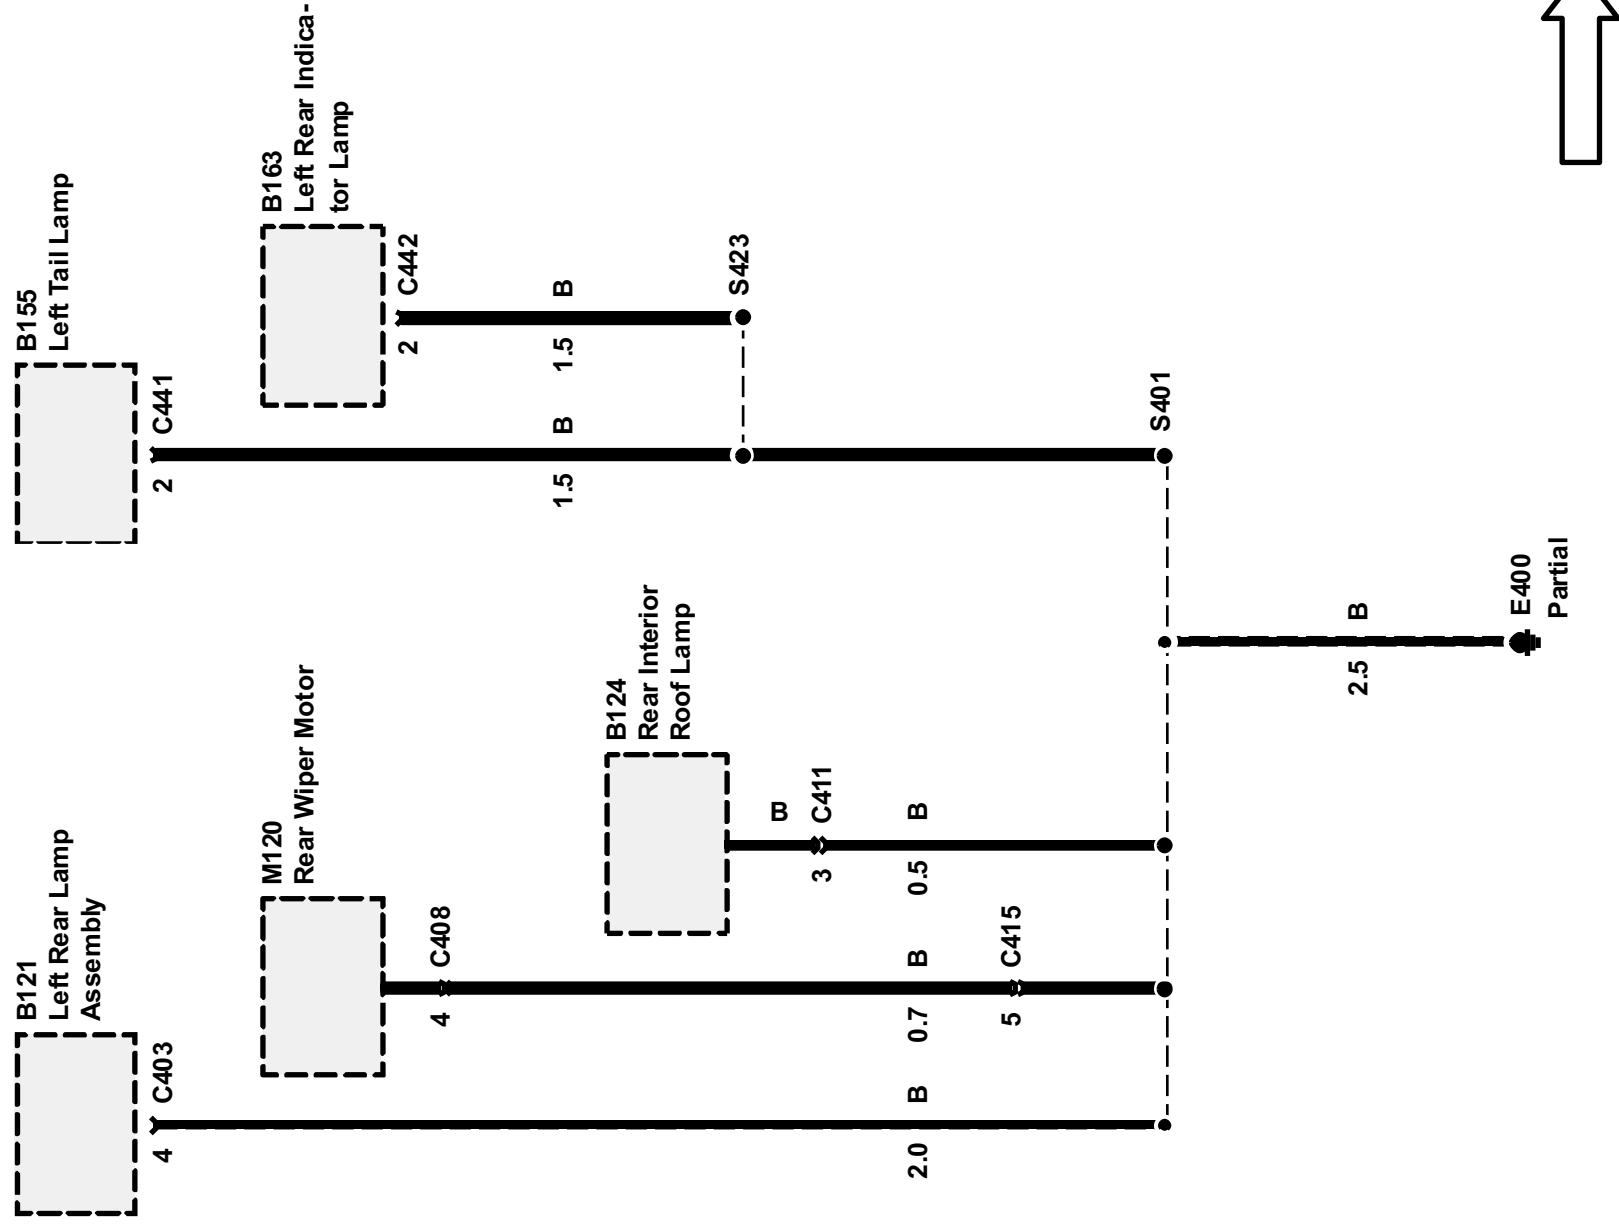


not ubrt s Ddnua G

DISCOVERY



ETM Y5

GROUND DISTRIBUTION

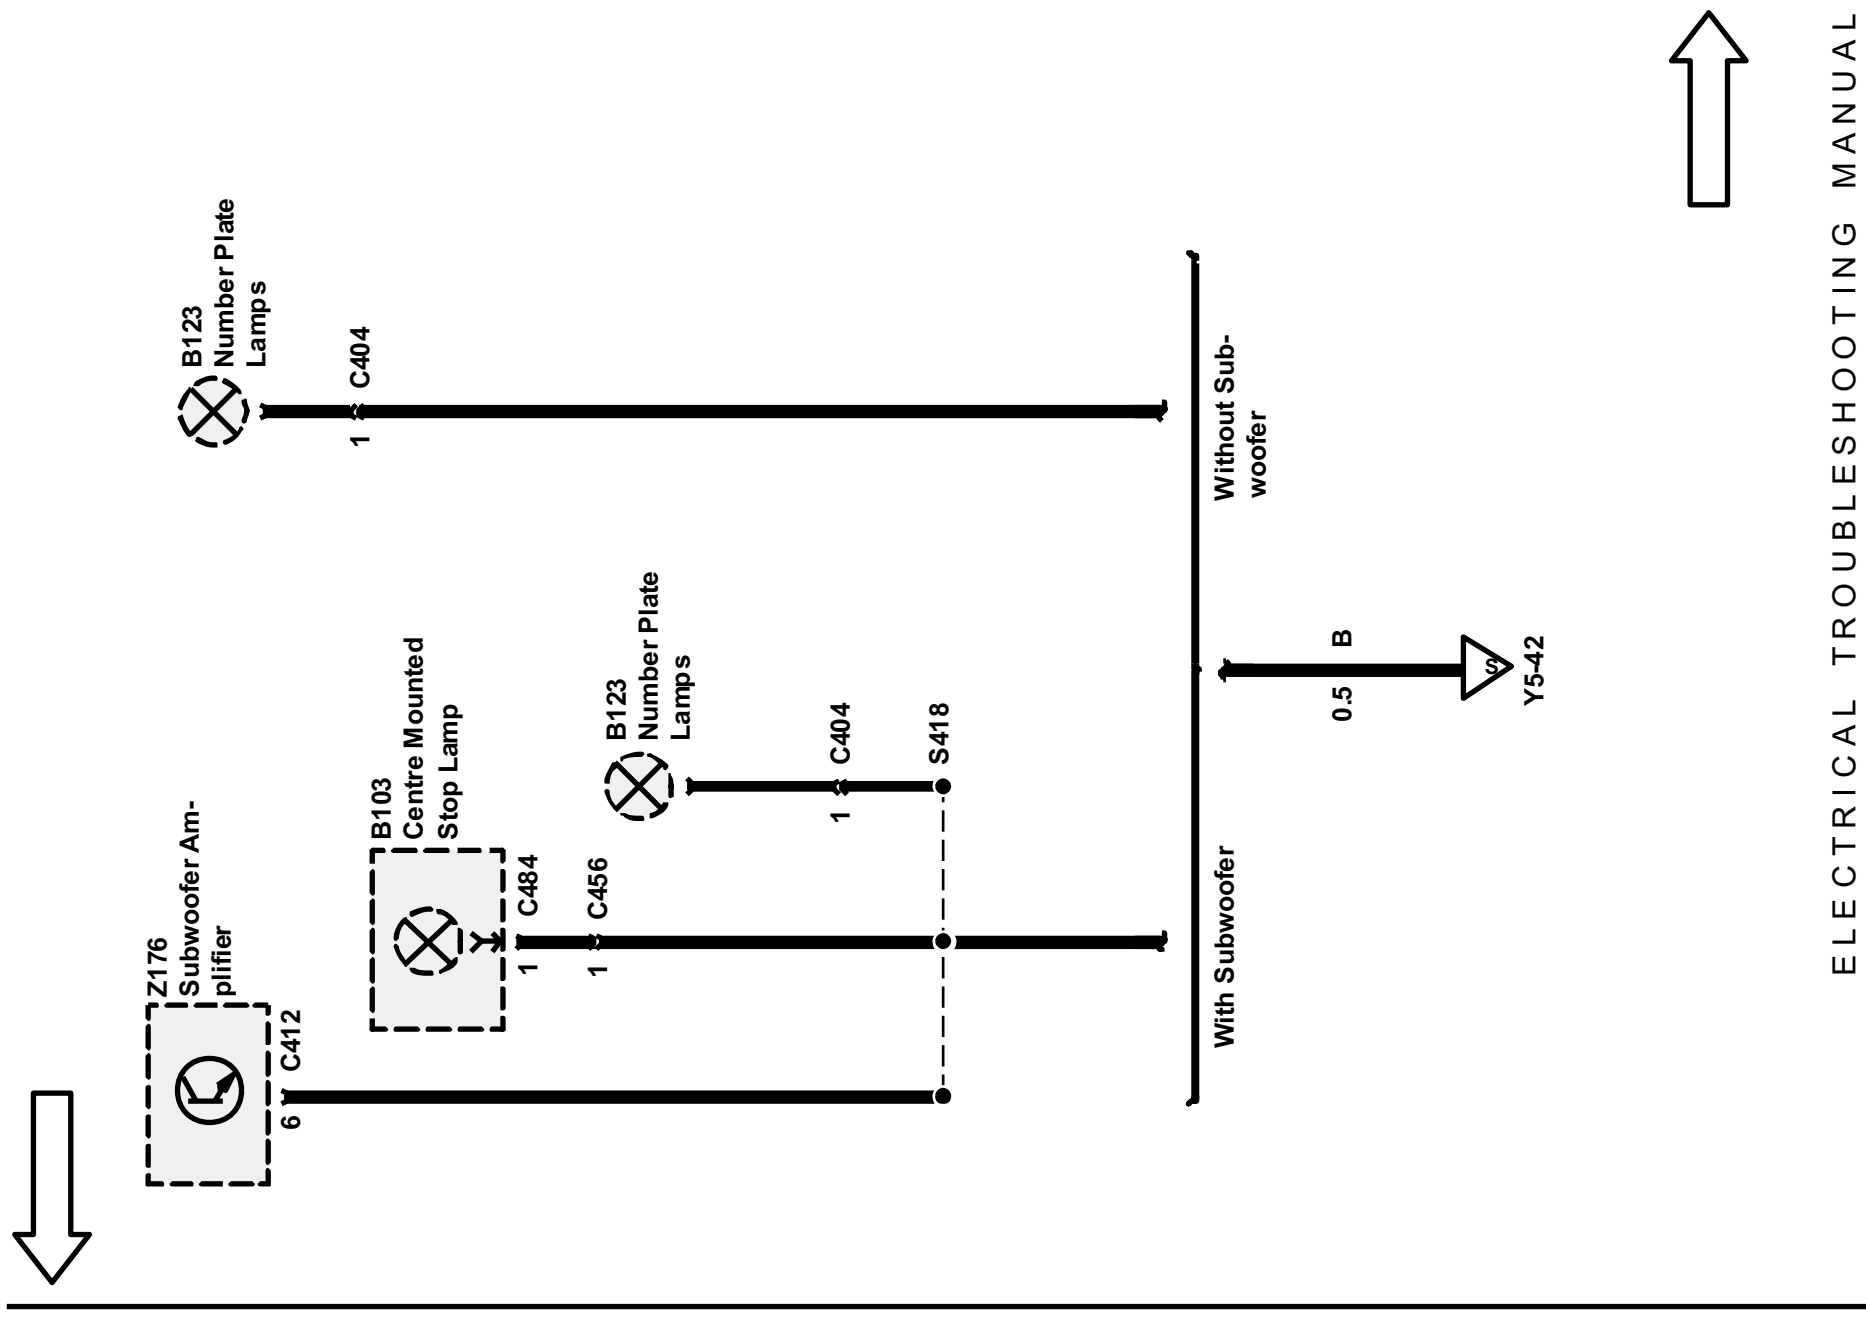

Y5 ETM

 DISCOVERY

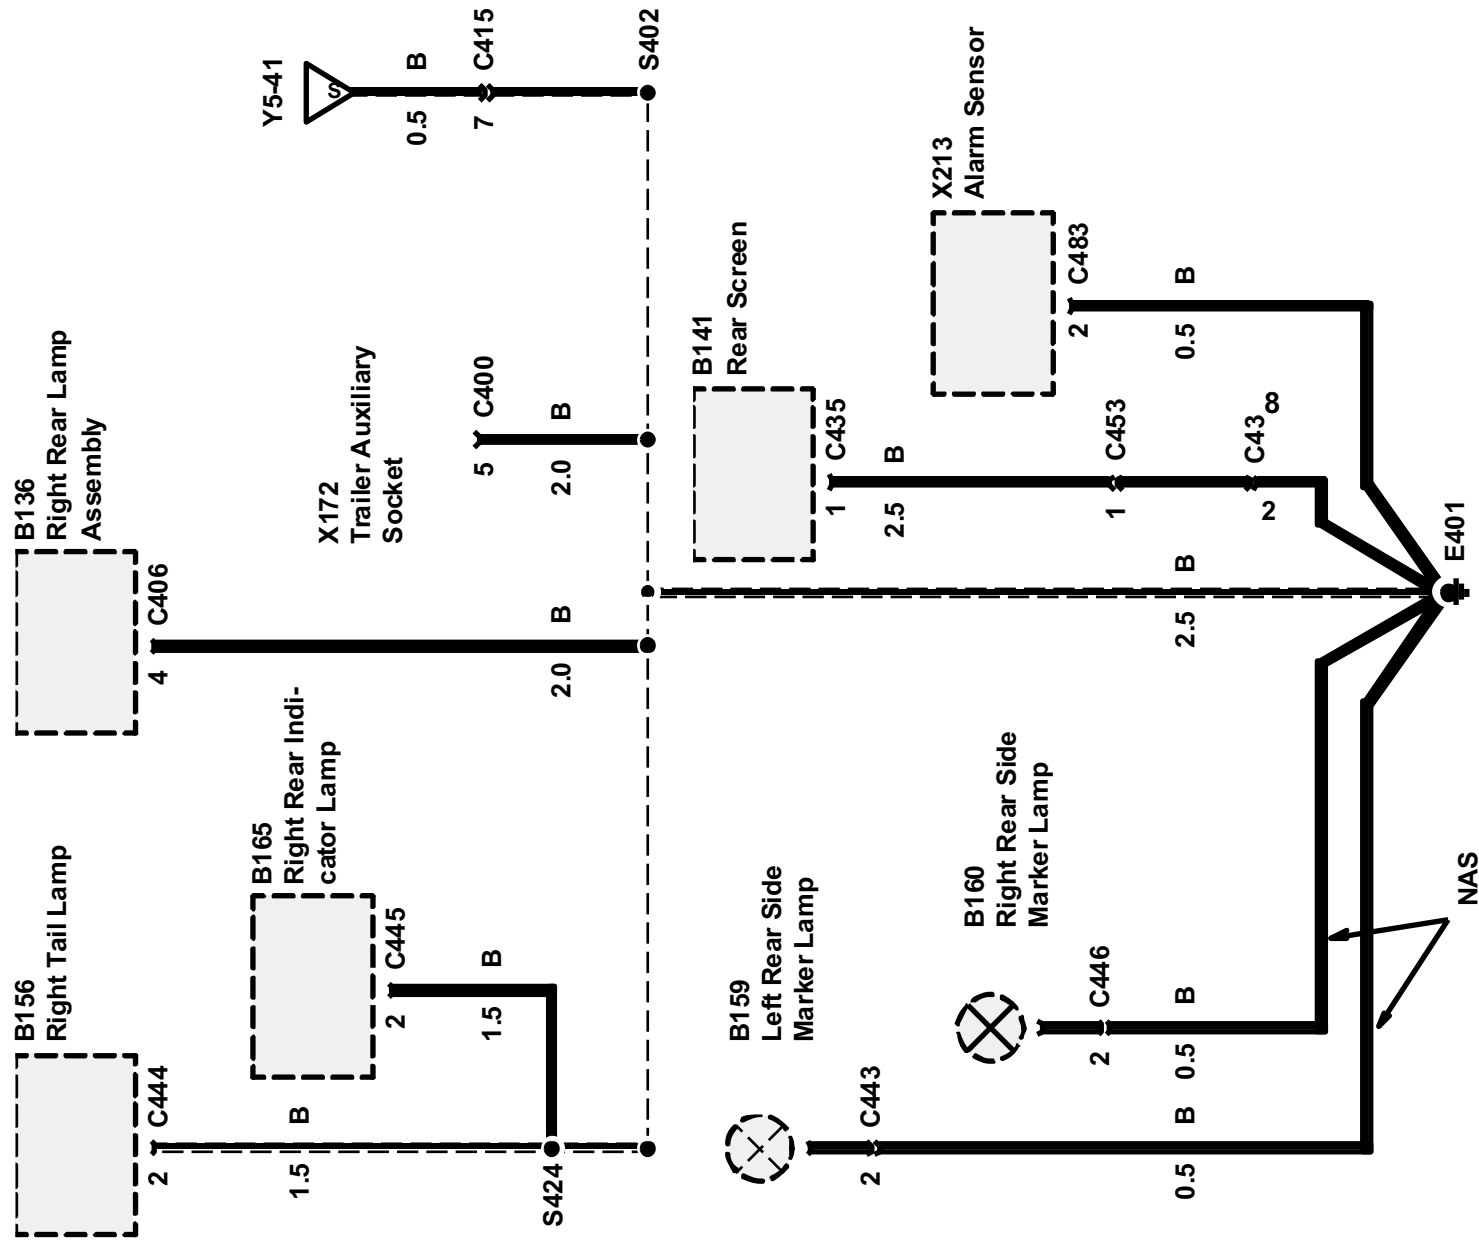

DISCOVERY**Component Location Table**

Component	Location	Manual	View
A.B.S. Booster Unit (Z103)	LH rear of engine compartment	70	3
A.B.S. Hydraulic Pump (M102)	LH rear of engine compartment	70	3
A.B.S. Load Relay (K101) (Except NAS)	behind RH side of fascia on bracket	70	195
A.B.S. Load Relay (K101) (NAS)	behind RH side of fascia on bracket	70	199
A.B.S. Pump Relay (K102) (Except NAS)	behind RH side of fascia on bracket	70	196
A.B.S. Pump Relay (K102) (NAS)	behind RH side of fascia on bracket	70	200
A.B.S. Warning Relay (K103) (Except NAS)	behind RH side of fascia on bracket	70	195
A.B.S. Warning Relay (K103) (NAS)	behind RH side of fascia on bracket	70	199
A/C Dual Pressure Switch (X102) (MFI-V8) (MFI-T16) (300Tdi)	RH rear of engine compartment	82	95
A/C Dual Pressure Switch (X102) (SFI-V8)	RH rear of engine compartment	82	98
A/C Logic Relay (K170)	behind RH footwell trim panel	82	209
Accessory Relay (K174)	behind LH footwell trim panel	86	121
Air Bag Diagnostic Control Module (Z151)	beneath centre console	76	166
Air Recirculation Solenoid (K123)	behind RH side of fascia right of heater evaporator unit	82	183
Air Recirculation Solenoid In-Line Fuse (P138)	behind RH side of fascia	82	179
Air Supply Selector Diode (Z208)	Heater Switch Wire Harness near C2067	82	152
Air Supply Selector Switch (X180)	centre of fascia	82	161
Alarm Bonnet Switch (X212)	LH side of engine compartment	86	262
Alarm Sensor (X213)	Top of LH B-Post	86	272
Alarm Sounder (Z171) (300Tdi)	RH front of engine compartment	86	51
Alarm Sounder (Z171) (MFI-V8) (MFI-T16)	RH front of engine compartment	86	49
Anti-Lock Brake System ECU (Z108)	behind RH side of fascia on bracket	70	184
Automatic Transmission Oil Temperature Switch (X108)	lower LH front of engine compartment	86	31
Battery Backed Up Alarm Sounder (Z272)	RH front of engine compartment	86	57
Boost Pressure Air	top rear of engine	19	27
Temperature Sensor (X254) Boost Pressure Sensor (X253)	LH rear of engine compartment	19	13
Brake Fluid Level Switch (X111)	LH rear of engine compartment top of brake fluid reservoir	70	2
Brake Switch Vent Valve (X112)	behind LH side of fascia on brake pedal support	19	149