



REAR BRAKE PADS


Service repair no - 70.40.03

Service tool:

LRT-70-500 - Piston clamp

Remove

1. Remove rear road wheels. *See WHEELS AND TYRES, Repair, Wheels*
2. Disconnect battery negative lead.
3. Clean exterior of calipers.
4. Remove pad retaining pins and springs.
5. Remove brake pads.

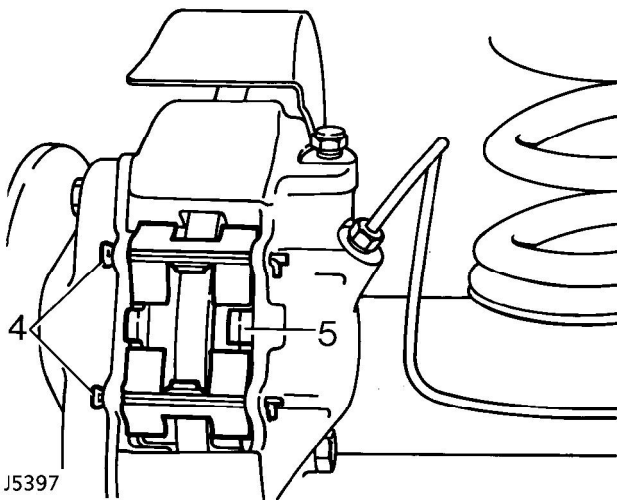

6. Clean exposed parts of pistons, using new brake fluid. Wipe away excess with a lint free cloth.
7. Using piston clamp LRT-70-500 press each piston back into its bore. Ensure that displaced brake fluid does not overflow from reservoir.

Refit

8. Insert brake pads.
9. Position pad retaining springs, fit new pins and spread ends.
10. Apply service brake pedal several times to locate pads.
11. Check fluid reservoir, top up if necessary, using correct grade of fluid. *See LUBRICANTS, FLUIDS AND CAPACITIES, Information, Recommended Lubricants and Fluids*