


SIDELIGHT BULB

Service repair no - 86.40.33

Remove

1. Remove headlight, **See Headlight**
2. Disengage bulb holder by twisting a quarter turn anti-clockwise.
3. Withdraw bulb from holder.

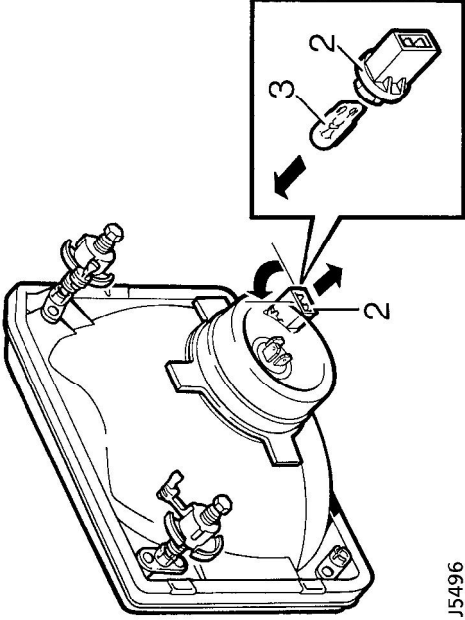

Refit


4. Reverse removal procedure.

FRONT DIRECTION INDICATORS

Service repair no - 86.40.41

Remove

1. Pull spring clips, release from location and lift out direction indicator unit.
2. Turn bulb holder anti-clockwise to release from indicator unit.
3. Push and twist the bulb to remove.

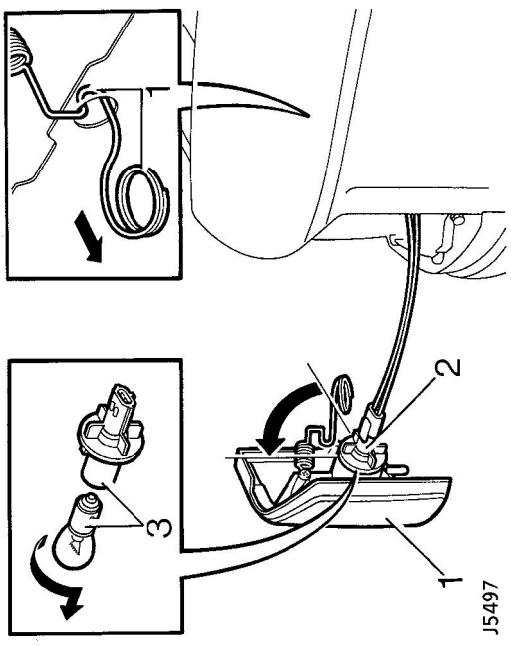

Refit

4. Reverse removal procedure. When replacing light unit, locate the two lugs at the bottom of the lens before re-engaging spring clips.