
WATER PUMP


Service repair no - 26.50.01

Remove



WARNING: Disconnect battery negative terminal to prevent engine being started before removing or adjusting drive belts.

1. Drain engine cooling system. *See Adjustment, Coolant*
2. Remove fan blades and pulley. *See Viscous Coupling, Fan Blades, Pulley and Fan Cowl*
3. Disconnect inlet hose from water pump.
4. Remove water pump bolts.
5. Remove water pump and joint washer.

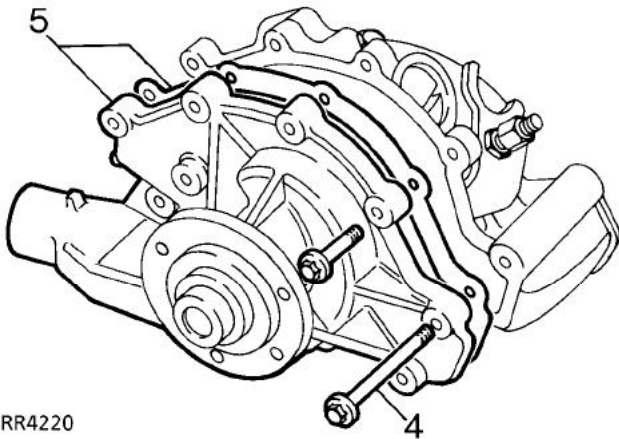

RR4220

Refit

6. Lightly grease new joint washer, position on timing cover.
7. Clean threads of all long bolts and coat with Loctite 572 thread lubricant-sealant.
8. Locate water pump in position. Tighten remaining water pump housing bolts evenly to **28 Nm**.
9. Reverse removal procedure. 1 to 3.
10. Check for coolant leaks around all hose connections and joint faces.