






AUTOMATIC GEARBOX - ZF4HP22 - 24

Lock-up solenoid valve (MV 3)

 44.15.35

Remove

1. Remove valve body assembly.
 **AUTOMATIC GEARBOX - ZF4HP22**
- 24, REPAIRS, Valve body assembly.

 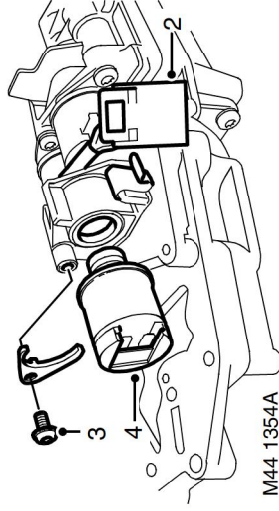


M44 1354A

2. Disconnect multiplug from lock-up solenoid valve and release harness from clip.
3. Remove Torx screw and retaining fork securing solenoid valve to valve body.
4. Remove solenoid valve from valve body.

Refit

1. Clean lock-up solenoid valve with lint free cloth.
2. Position solenoid valve in valve body.
3. Position retaining fork, fit and tighten Torx screw to 8 Nm (6 lbf.ft).
4. Connect multiplug to lock-up solenoid valve and secure harness in clip.
5. Fit valve body assembly.

 **AUTOMATIC GEARBOX - ZF4HP22**
- 24, REPAIRS, Valve body assembly.