



Vehicle Model	System	Year	System Name	Read DTCs	Clear DTCs	Live Data	ECM Data	Actuators	Programming	Maintenance	Cable / Adapter	Maintenance
Defender	Diesel EMS	1999 - 2007	TD5	x	x	x		x	x			
Defender	Petrol EMS	1994 - 2007	14CUX	x	x	x		x		x	14CUX (BA 5072)	Reset Adaptons
Defender	Petrol EMS	1994 - 1995	GEMS	x	x	x		x	x	x		
Defender	Petrol EMS	1997 - 1998	MEMS 1.9	x	x	x		x				
Defender	ABS	1999 - 2007	WABCO D ABS	x	x	x	x	x		x		Brake Bleed
Defender	Security	1996 - 2007	10AS			x			x		Green (BA 5076)	
Defender (L316)	Diesel EMS	2007 -	Diesel Engine Management System	x	x	x	x					
Defender (L316)	ABS	1999 - 2007	WABCO D ABS	x	x	x	x	x		x		Brake Bleed
Defender (L316)	Security	1996 - 2007	10AS			x			x			
Discovery I	Diesel EMS	1996 - 1998	Bosch EDC 1.3.1	x	x	x	x	x		x		Read Secutiry Code
Discovery I	Petrol EMS	1995 - 1998	14CUX	x	x	x		x		x	14CUX (BA 5072)	Reset Adaptons
Discovery I	Petrol EMS	1996 - 1998	GEMS	x	x	x		x	x			
Discovery I	Petrol EMS	1993 - 1998	MEMS 1.9	x	x	x		x				
Discovery I	ABS	1995 - 1996	WABCO C ABS	x	x	x		x				
Discovery I	Airbag	1996 - 1998	TRW SPS	x	x		x				Grey (BA 5077)	
Discovery I	Secutiry	1996 - 1998	10AS			x			x		Green (BA 5076)	
Discovery II	Diesel EMS	1998 - 2005	TD5	x	x	x		x	x			
Discovery II	Petrol EMS	1998 - 2005	Bosch M5.2.1	x	x	x	x	x		x		Reset Adaptons
Discovery II	Transmission	1998 - 2005	GS 8.87 .x	x	x	x	x		x	x		Reset Adaptons
Discovery II	ABS	1998 - 2005	WABCO D ABS/S LABS	x	x	x	x	x	x	x		Brake Bleed
Discovery II	Airbag	1998 - 2005	TRW Generation 4	x	x		x					
Discovery II	Security	1998 - 2005	Valeo BCU			x		x	x			
Discovery II	Chassis	1998 - 2005	ACE - Suspension	x	x	x	x	x	x			
Discovery II	Chassis	1998 - 2005	WABCO D ABS/S LABS - Suspension	x	x	x	x	x		x		Suspension Configuration
Discovery III (L319)	Diesel EMS	2005 - 2009	Diesel Engine Management System	x	x	x	x					
Discovery III (L319)	Petrol EMS	2005 - 2009	Petrol Engine Management System	x	x	x	x					
Discovery III (L319)	Transmission	2005 - 2009	Transmission	x	x	x	x					
Discovery III (L319)	ABS	2005 - 2009	Vehicle Dynamics Control Module	x	x	x	x					
Discovery III (L319)	Airbag	2005 - 2009	Restraints Control Module	x	x		x					
Discovery III (L319)	Climate Control	2005 - 2009	Heating, Ventilation & Air Con	x	x		x				Black (BA 5080)	
Discovery III (L319)	EPB	2005 - 2009	Park Brake Module	x	x	x	x	x				
Discovery III (L319)	Service Reset	2005 - 2009	Service Reset						x			
Discovery III (L319)	Steering Angle	2005 - 2009	Steering Angle	x	x		x			x		Reset Steering
Discovery III (L319)	Security	2005 - 2009	Body Controller	x	x	x	x				Black (BA 5080)	
Discovery III (L319)	Chassis	2005 - 2009	Ride Level Control Module	x	x	x	x	x				
Discovery III (L319)	Fuel Fired Heater	2005 - 2009	Fuel Fired Heater	x	x	x	x				Black (BA 5080)	
Discovery IV (L319)	Diesel EMS	2010	Diesel Engine Management System	x	x	x	x					
Discovery IV (L319)	Petrol EMS	2010	Petrol Engine Management System	x	x	x	x					
Discovery IV (L319)	Transmission	2010	ZF HP26	x	x	x	x					
Discovery IV (L319)	Transmission	2010	ZF HP28	x	x	x	x					



Vehicle Model	System	Year	System Name	Read DTCs	Clear DTCs	Live Data	ECM Data	Actuators	Programming	Maintenance	Cable / Adapter	Maintenance
Discovery IV (L319)	ABS	2010	Vehicle Dynamics Control Module	x	x	x	x					
Discovery IV (L319)	Airbag	2010	Restraints Control Module	x	x		x					
Discovery IV (L319)	Climate Control	2010	Heating, Ventilation & Air Con	x	x		x				Black (BA 5080)	
Discovery IV (L319)	EPB	2010	Park Brake Module	x	x	x	x	x				
Discovery IV (L319)	Body Electrics	2010	Body Electrics	x	x	x	x					
Discovery IV (L319)	Service Reset	2010	Service Reset						x			
Discovery IV (L319)	Immobiliser (Steering Lock)	2010	Vehicle Immobiliser Module	x	x		x					
Discovery IV (L319)	Chassis	2010	Ride Level Control Module	x	x	x	x					
Discovery IV (L319)	Fuel Fired Heater	2010	Fuel Fired Heater	x	x	x	x				Black (BA 5080)	
Freelander I	Diesel EMS	1998 - 2001	Bosch EDC 1.3.1	x	x	x	x	x		x		Read Security Code
Freelander I	Diesel EMS	2001 - 2006	Bosch DDE4	x	x	x		x				
Freelander I	Petrol EMS	1998 - 2001	MEMS 1.9	x	x	x		x				
Freelander I	Petrol EMS	2001 - 2006	MEMS 3	x	x	x	x	x				
Freelander I	Petrol EMS	2001 - 2006	Siemens EMS2000	x	x	x	x	x				
Freelander I	Petrol EMS	2001 - 2006	Siemens EMS2000	x	x	x	x	x				
Freelander I	Transmission	1998 - 2006	Jatco	x	x	x						
Freelander I	ABS	1998 - 2001	WABCO D ABS	x	x	x	x	x		x		Brake Bleed
Freelander I	ABS	2000 - 2001	TEVES MK20	x	x	x						
Freelander I	ABS	2002 - 2006	TEVES MK25	x	x	x					Grey (BA 5077)	
Freelander I	Airbag	1998 - 2002	Autoliv ACU 4	x	x		x					
Freelander I	Airbag	2003 - 2006	Siemens SRE Smart	x	x		x					
Freelander I	Security	1998 - 2001	27VT - CCU			x		x	x			
Freelander I	Security	2000 - 2002	EWS 3D	x	x	x		x	x		Grey (BA 5077)	
Freelander II (L359)	Diesel EMS	2007	Diesel Engine Management System	x	x	x	x					
Freelander II (L359)	Petrol EMS	2007	Petrol Engine Management System	x	x	x	x					
Freelander II (L359)	Transmission	2007	Transmission	x	x	x	x					
Freelander II (L359)	ABS	2007	Vehicle Dynamics Control Module	x	x	x	x					
Freelander II (L359)	Airbag	2007	Restraints Control Module	x	x		x			x		Crash Reset
Freelander II (L359)	Service Reset	2007	Service Reset						x		Black (BA 5080)	
Freelander II (L359)	Security	2007	Body Controller	x	x	x	x			x		Crash Reset
Freelander II (L359)	Fuel Fired Heater	2007	Fuel Fired Heater	x	x	x	x				Black (BA 5080)	
Range Rover Classic	Petrol EMS	1990 - 1995	14CUX	x	x	x		x			14CUX (BA 5072)	
Range Rover (P38)	Diesel EMS	1995 - 2002	Bosch EDC 1.3.1	x	x	x	x	x		x		Read Secutiry Code
Range Rover (P38)	Petrol EMS	1999 - 2002	Bosch M5.2.1	x	x	x	x	x		x		Reset Adaptons
Range Rover (P38)	Petrol EMS	1995 - 1999	GEMS	x	x	x		x	x	x		Reset Adaptons
Range Rover (P38)	Transmission	1998 - 2002	GS 2.38	x	x	x	x					
Range Rover (P38)	Transmission	1998 - 2002	GS 8.87.x	x	x	x	x		x	x		Reset Adaptons
Range Rover (P38)	ABS	1995 - 1999	WABCO C ABS	x	x	x		x				
Range Rover (P38)	ABS	1999 - 2002	WABCO D ABS	x	x	x	x	x				
Range Rover (P38)	Airbag	1998 - 2002	TRW SPS	x	x		x				Grey (BA 5077)	



Vehicle Model	System	Year	System Name	Read DTCs	Clear DTCs	Live Data	ECM Data	Actuators	Programming	Maintenance	Cable / Adapter	Maintenance
Range Rover (P38)	Climate Control	1998 - 2002	H VAC	x	x							
Range Rover (P38)	Air Suspension	1995 - 2002	Air Suspension	x	x	x		x	x	Airsus (BA 2073)		
Range Rover (P38)	Body Electrics	1995 - 2002	BeCM	x	x	x		x	x	x		Security & Programming
Range Rover (L322)	Diesel EMS	2002 - 2005	Bosch DDE4	x	x	x		x				
Range Rover (L322)	Petrol EMS	2002 - 2005	Bosch ME7.2	x	x	x	x	x				
Range Rover (L322)	Transmission	2002 - 2005	GM5 / EGS 20	x	x	x	x	x				
Range Rover (L322)	Transmission	2002 - 2005	ZF / EGS 8602	x	x	x	x	x				
Range Rover (L322)	ABS	2002 - 2005	Bosch 5.7	x	x						Red (BA 5078)	
Range Rover (L322)	Climate Control	2002 - 2005	H VAC	x	x						Red (BA 5078)	
Range Rover (L322)	Body Electrics	2002 - 2005	GM3	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Service Reset	2002 - 2005	Service Reset						x		Red (BA 5078)	
Range Rover (L322)	Steering Angle	2002 - 2005	Steering Angle	x	x					x	Red (BA 5078)	Reset Steering
Range Rover (L322)	Security	2002 - 2005	EWS 3	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Air Suspension	2002 - 2005	EHC2	x	x	x	x	x	x		Red (BA 5078)	
Range Rover (L322)	Fuel Fired Heater	2002 - 2005	Fuel Fired Heater	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Diesel EMS	2006	Bosch DDE4	x	x	x		x				
Range Rover (L322)	Petrol EMS	2006	Denso PAN PAG	x	x	x	x					
Range Rover (L322)	Transmission	2006	GM5 / EGS 20	x	x	x	x	x				
Range Rover (L322)	Transmission	2006	Transmission	x	x	x	x					
Range Rover (L322)	ABS	2006	Bosch 5.7	x	x						Red (BA 5078)	
Range Rover (L322)	A	2006	Bosch 8	x	x	x	x					
Range Rover (L322)	Airbag	2006	MRS 4	x	x		x				Red (BA 5078)	
Range Rover (L322)	Climate Control	2006	HVAC	x	x						Red (BA 5078)	
Range Rover (L322)	Service Reset	2006	Service Reset						x			
Range Rover (L322)	Body Electrics	2006	GM3	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Security	2006	Body Controller	x	x		x				Black (BA 5080)	
Range Rover (L322)	Air Suspension	2006	Ride Level Control Module	x	x	x	x	x				
Range Rover (L322)	Fuel Fired Heater	2006	Fuel Fired Heater	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Diesel EMS	2007 - 2009	Siemens SID 203	x	x	x	x			x		Oil Change
Range Rover (L322)	Petrol EMS	2007 - 2009	Denso PAN PAG	x	x	x	x					
Range Rover (L322)	Transmission	2007 - 2009	Transmission	x	x	x	x					
Range Rover (L322)	ABS	2007 - 2009	Bosch 8	x	x	x	x					
Range Rover (L322)	Airbag	2007 - 2009	Restraints Control Module	x	x		x					
Range Rover (L322)	Climate Control	2007 - 2009	HVAC	x	x						Red (BA 5078)	
Range Rover (L322)	EPB	2007 - 2009	Park Brake Module	x	x	x	x	x				
Range Rover (L322)	Service Reset	2007 - 2009	Service Reset						x			
Range Rover (L322)	Steering Angle	2007 - 2009	Steering Angle	x	x				x			Reset Steering
Range Rover (L322)	Body Electrics	2007 - 2009	GM3	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Security	2007 - 2009	Vehicle Immobiliser Module	x	x		x				Black (BA 5080)	
Range Rover (L322)	Chassis	2007 - 2009	Ride Level Control Module	x	x	x	x	x				



Vehicle Model	System	Year	System Name	Read DTCs	Clear DTCs	Live Data	ECM Data	Actuators	Programming	Maintenance	Cable / Adapter	Maintenance
Range Rover (L322)	Fuel Fired Heater	2007 - 2009	Fuel Fired Heater	x	x	x	x				Red (BA 5078)	
Range Rover (L322)	Diesel EMS	2010	Diesel Engine Management System	x	x	x	x					
Range Rover (L322)	Petrol EMS	2010	Petrol Engine Management System	x	x	x	x					
Range Rover (L322)	Transmission	2010	Transmission	x	x	x	x					
Range Rover (L322)	ABS	2010	Vehicle Dynamics Control Module	x	x	x	x					
Range Rover (L322)	Airbag	2010	Restraints Control Module	x	x		x					
Range Rover (L322)	Climate Control	2010	Heating, Ventilation & Air Con	x	x		x				Black (BA 5080)	
Range Rover (L322)	EPB	2010	Park Brake Module	x	x	x	x	x				
Range Rover (L322)	Steering Angle	2010	Steering Angle	x	x		x					
Range Rover (L322)	Body Electrics	2010	Body Electrics	x	x	x	x					
Range Rover (L322)	Chassis	2010	Ride Level Control Module	x	x	x	x					
Range Rover (L322)	Fuel Fired Heater	2010	Fuel Fired Heater	x	x	x	x				Black (BA 5080)	
Range Rover (L322)	Immobiliser (Steering Lock)	2010	Vehicle Immobiliser Module	x	x		x					
Range Rover (L322)	Diesel EMS	2006 - 2009	Diesel Engine Management System	x	x	x	x					
Range Rover (L322)	Petrol EMS	2006 - 2009	Petrol Engine Management System	x	x	x	x					
Range Rover (L322)	Transmission	2006 - 2009	Transmission	x	x	x	x					
Range Rover (L322)	ABS	2006 - 2009	Vehicle Dynamics Control Module	x	x	x	x					
Range Rover (L322)	Airbag	2006 - 2009	Restraints Control Module	x	x		x					
Range Rover (L322)	Climate Control	2006 - 2009	Heating, Ventilation & Air Con	x	x		x				Black (BA 5080)	
Range Rover (L322)	EPB	2006 - 2009	Park Brake Module	x	x	x	x	x				
Range Rover (L322)	Service Reset	2006 - 2009	Service Reset						x			
Range Rover (L322)	Steering Angle	2006 - 2009	Steering Angle	x	x		x		x			Reset Steering
Range Rover (L322)	Security	2006 - 2009	Body Controller	x	x	x	x				Black (BA 5080)	
Range Rover (L322)	Chassis	2006 - 2009	Ride Level Control Module	x	x	x	x	x				
Range Rover (L322)	Fuel Fired Heater	2006 - 2009	Fuel Fired Heater	x	x	x	x				Black (BA 5080)	
Range Rover (L322)	Diesel EMS	2010	Diesel Engine Management System	x	x	x	x					
Range Rover (L322)	Petrol EMS	2010	Petrol Engine Management System	x	x	x	x					
Range Rover (L322)	Transmission	2010	Transmission	x	x	x	x					
Range Rover (L322)	ABS	2010	Vehicle Dynamics Control Module	x	x	x	x					
Range Rover (L322)	Airbag	2010	Restraints Control Module	x	x		x					
Range Rover (L322)	Climate Control	2010	Heating, Ventilation & Air Con	x	x		x				Black (BA 5080)	
Range Rover (L322)	EPB	2010	Park Brake Module	x	x	x	x	x				
Range Rover (L322)	Body Electrics	2010	Body Electrics	x	x	x	x					
Range Rover (L322)	Service Reset	2010	Service Reset						x			
Range Rover (L322)	Immobiliser (Steering Lock)	2010	Vehicle Immobiliser Module	x	x		x					
Range Rover (L322)	Chassis	2010	Ride Level Control Module	x	x	x	x					
Range Rover (L322)	Fuel Fired Heater	2010	Fuel Fired Heater	x	x	x	x				Black (BA 5080)	