



STEERING


Power steering box - V8

 57.10.01




Remove

1. Raise front of vehicle.
WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

2. Remove front road wheel.

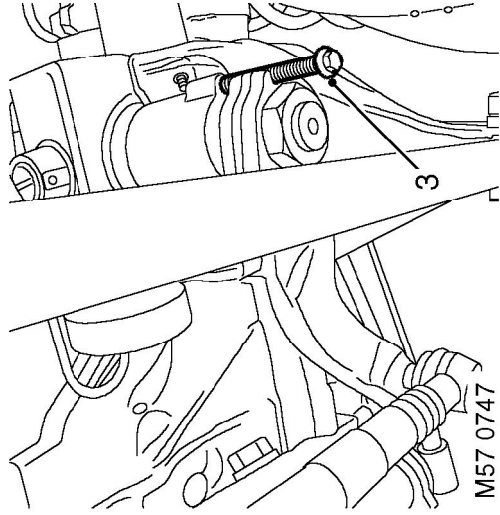

3. Ensure steering wheel is centralised and fit centralising bolt to steering box. Remove key from steering lock and engage column lock.

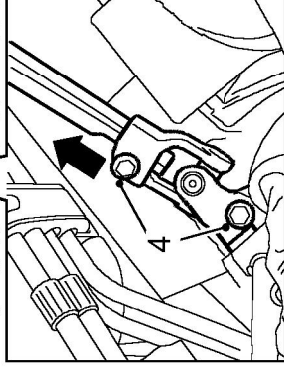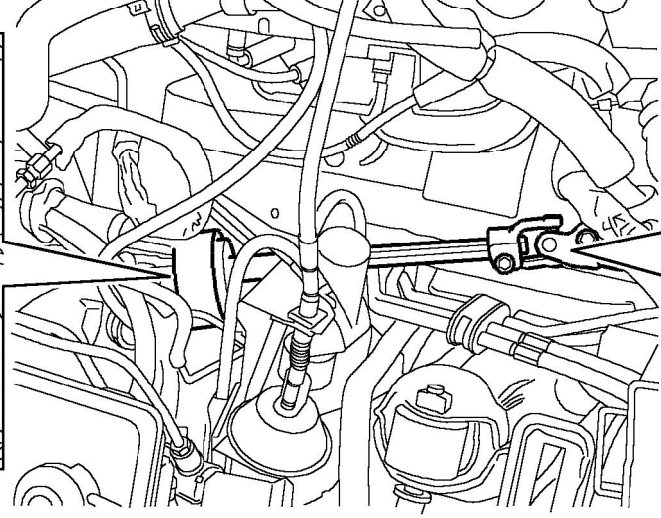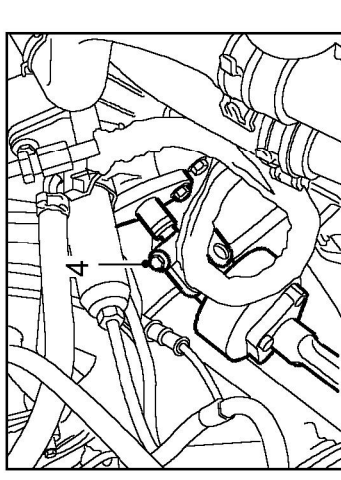

M57 0748

4. Remove 3 bolts securing intermediate shaft and universal joint.
5. Push intermediate shaft upwards, release and remove universal joint.
CAUTION: Do not turn the steering wheel with the intermediate shaft or universal joint disconnected as damage to the rotary coupler and the steering wheel switches may occur.
6. Position container to catch oil spillage.