





Sensor - neutral

🔑 41.20.64

Remove

1. Raise vehicle on ramp.

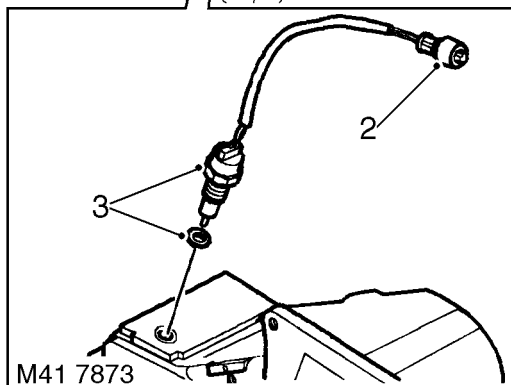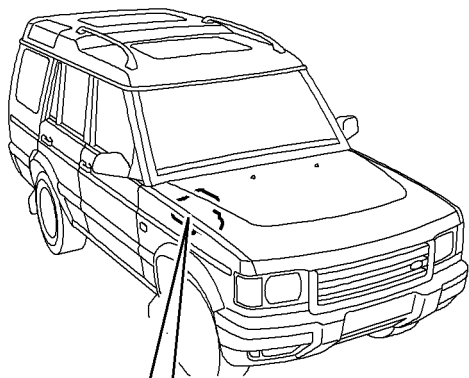

2. Disconnect multiplug from neutral sensor.
3. Remove sensor and discard sealing washer.

Refit


1. Clean sensor threads.
2. Fit new washer and apply sealant, Part No. STC 50552 to threads of sensor.
3. Fit and tighten sensor to 25 Nm (18 lbf.ft).
4. Lower vehicle on ramp.

Sensor - oil temperature - If fitted

🔑 41.20.80

Remove

1. Lower vehicle.

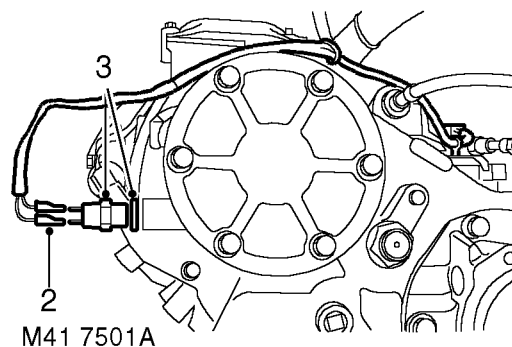

2. Disconnect 2 Lucar connectors from oil temperature sensor.
3. Remove oil temperature sensor and discard sealing washer.

Refit


1. Clean sensor and mating face on transfer box.
2. Fit new sealing washer, position oil temperature sensor and tighten to 25 Nm (18 lbf.ft).
3. Connect Lucar connectors to oil temperature sensor.
4. Lower vehicle.

Switch - high low - warning

🔑 41.30.05

Remove

1. Raise vehicle on a ramp.

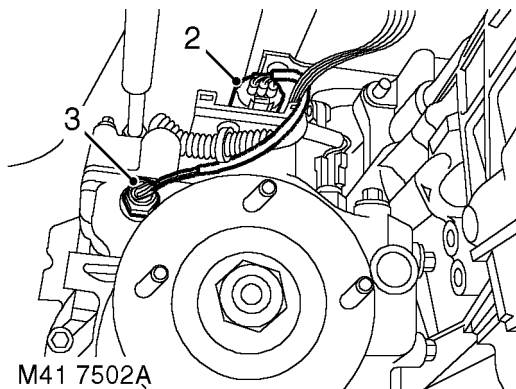

2. Release switch multiplug from bracket on transfer box and disconnect from harness.
3. Remove switch from transfer box and discard sealing washer.

Refit


1. Ensure sealing washer, switch thread and mating face on transfer box is clean.
2. Fit sealing washer to switch, fit and tighten switch to transfer box to 25 Nm (18 lbf.ft) .
3. Connect multiplug to harness and fit multiplug to bracket on transfer box.
4. Lower vehicle.

Switch(es) - differential lock warning From 03 MY

🔑 41.30.06

Remove

1. Remove front propeller shaft.
👉 **PROPELLER SHAFTS, REPAIRS,
Propeller shaft - front.**

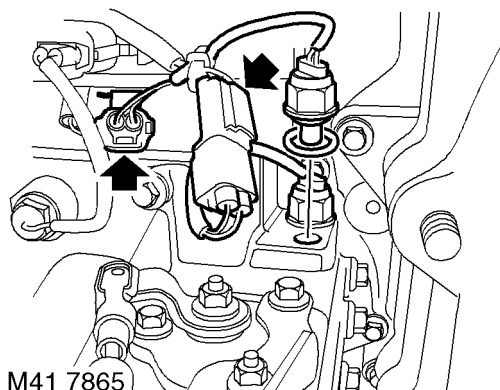

2. Release and disconnect both differential lock warning switch multiplugs.
3. Remove differential lock front warning switch, remove and discard sealing washer.
4. Remove differential lock rear warning switch, remove and discard sealing washer.

Refit

1. Clean switches and mating face on transfer gearbox.
2. Apply sealant, STC 50552 to switch threads.
3. Use new sealing washers, fit and tighten differential lock warning switches to 26 Nm (19 lbf.ft)
4. Connect and secure both switch multiplugs.
5. Fit front propeller shaft.
👉 **PROPELLER SHAFTS, REPAIRS,
Propeller shaft - front.**