


Electronic control unit - automatic transmission


44.15.46

Remove


1. Release fixings and remove battery cover.
2. Disconnect battery earth lead.

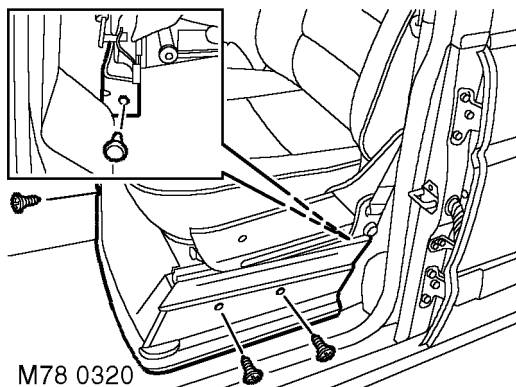

3. Remove 3 screws and trim clip securing lower trim casing to LH front seat.

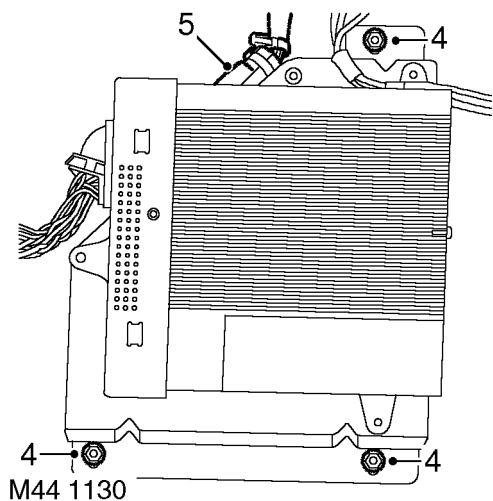

4. Remove 3 nuts securing speaker power amplifier bracket to the body.
5. Disconnect multiplug from automatic transmission ECU located on underside of amplifier mounting bracket.

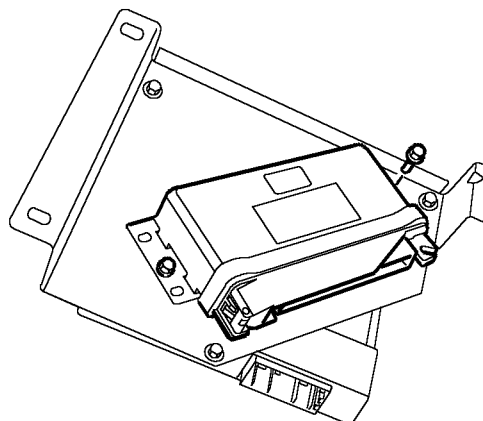

6. Remove 2 nuts securing ECU to mounting bracket and remove ECU.

Refit

1. Position ECU to mounting bracket and secure with nuts.
2. Connect multiplug to ECU.
3. Position speaker power amplifier mounting bracket to body and secure with nuts.
4. Position lower trim casing to seat and secure with screws and trim clip.
5. Connect battery earth lead.
6. Fit battery cover and secure fixings.