


# HARNESSES

## Harness - engine - V8


86.70.17

### Remove


1. Remove upper inlet manifold.  
MANIFOLDS AND EXHAUST SYSTEMS - V8, REPAIRS, Gasket - inlet manifold - upper - Without Secondary Air Injection.

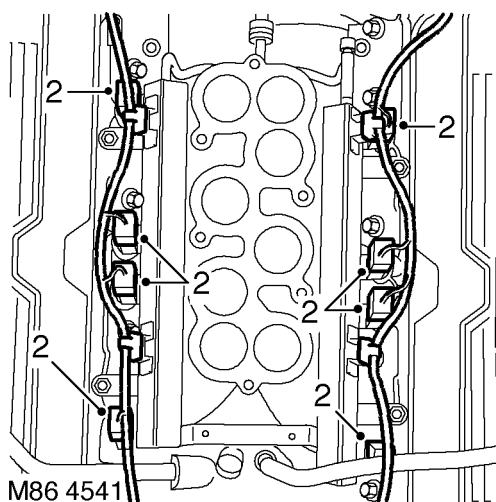


2. Disconnect injector multiplugs, release harness from fuel rail.

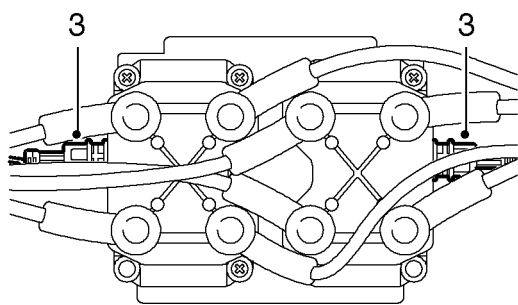

3. Disconnect ignition coil multiplugs.

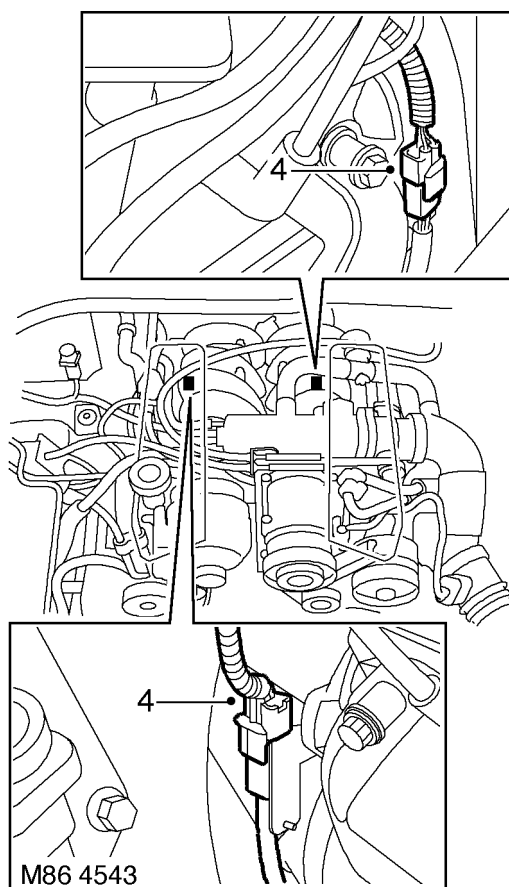

4. Release and disconnect both HS<sub>2</sub>O sensor multiplugs.

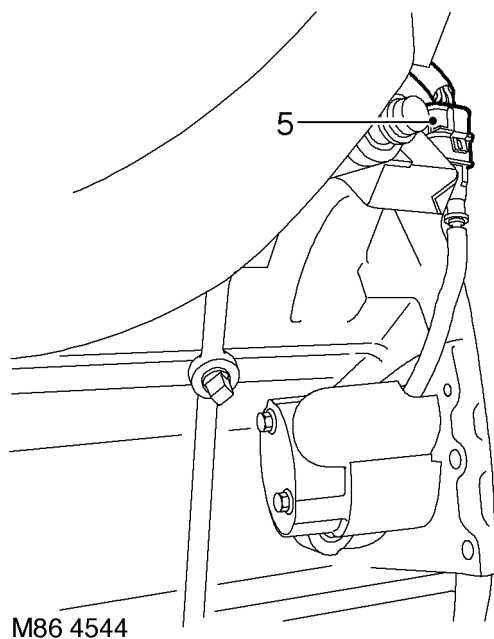

5. Disconnect CKP sensor multiplug.