

# Sound Controls



## SOUND CONTROLS

### 1. On/off and volume control

Press to switch on (display shows 'LAND ROVER', followed briefly by 'CODE'). Press again to switch off.

Rotate steadily to right or left to adjust the volume.

**NOTE:** The volume can also be adjusted using the remote switches on the steering wheel (see 'Owner's handbook').

**NOTE:** If you have a car telephone with a mute signal output connected to the stereo system, radio, tape or CD play automatically mutes when the telephone is in use.

### IMPORTANT

This unit is equipped with a 20 minute time-out function. This enables the unit to be switched on and then used for up to 20 minutes after the vehicle starter switch has been turned to position '0', even if the key is removed. This means that if a passenger is to be left in the vehicle, music can be listened to, without the security risk of leaving the keys in the starter switch. At the end of the 20 minutes, the unit will switch off automatically.

### 2. Audio selection button

Press one or more times to select bass, treble, balance, fader or spatial (display confirms selection).

#### Bass:

Press once, then rotate the volume control to left or right to reduce or increase bass response. Display shows:

'BASS - 9' = minimum bass

'BASS 0' = normal bass

'BASS + 9' = maximum bass

#### Treble:

Press twice, then rotate volume control to left or right to reduce or increase treble response. Display shows:

'TREB - 9' = minimum treble

'TREB 0' = normal treble

'TREB + 9' = maximum treble