

## EARTH POINTS AND HEADER JOINTS

---

### General

The following illustration indicates the general position of each earth point and earth header on the vehicle.

Refer to the Connector Details for locations of earth points and headers.

Refer to the Circuit Diagrams for details of electrical components and their associated earth headers.

