


FUSE DETAILS

ENGINE COMPARTMENT FUSE BOX

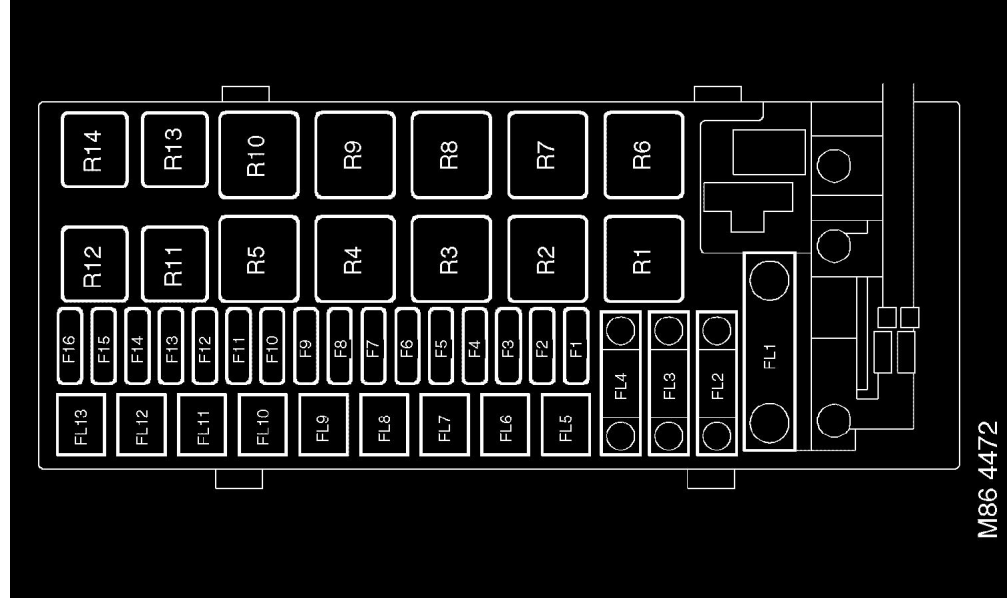

FUSE DETAILS

Relays (R)

1. Fuel pump
2. Starter
3. Headlamp powerwash
4. Cooling fan
5. Self Levelling/ABS (SLABS)
6. Glowplugs - Diesel only
7. Auxiliary circuits
8. Heated Front Screen (HFS)
9. Main relay
10. Anti-lock Braking System (ABS)
11. Compressor clutch (A/C only)
12. Front fog lamps
13. Horns
14. Active Cornering Enhancement (ACE)


Link	Rating	Vehicle	Function
FL1	150 A	ALL	Fusible links 4, 5, 6 and 7, fuses 3, 4, 5, and 6 of the engine compartment fuse box, and the HFS relay.
FL2	100 A	Td5	Glow plug relay.
FL3	50 A	ALL	Fuses 1, 2, 20 and 21 of the passenger compartment fuse box.
FL4	100 A	ALL	Fuses 6 and 7 of the passenger compartment fuse box.
FL5	50 A	ALL	RH seat relay, LH seat relay, and fuse 34 of the passenger compartment fuse box.
FL6	50 A	ALL	Fuses 8, 12 and 13 of the passenger compartment fuse box.
FL7	30 A	ALL	Auxiliary relay and fuse 17 of the passenger compartment fuse box.
FL8	50 A	ALL	Ignition switch and the ignition relay.
FL9	30 A	ALL	SLABS relay.
FL10	40 A	ALL	Lighting switch, fuses 4 and 5 of the passenger compartment fuse box.
FL11	30 A	ALL	ABS return pump relay.
FL12	30 A	ALL	Starter relay.
FL13	30 A	ALL	Lighting switch.

FUSE DETAILS

Fuse	Rating	Vehicle	Function
F1	30 A	Td5	ECM
F1	30 A	V8	ECM, fuel injectors, IACV, idle suppressor solenoid.
F2	15 A	Td5	EGR modulator, EGR throttle, MAF sensor, RH front HO2S, RH rear HO2S, LH front HO2S, LH rear HO2S.
F2	15 A	V8	Purge control valve, CMP sensor, MAF sensor, RH front HO2S, RH rear HO2S, LH front HO2S, LH rear HO2S.
F3	15 A	All	Front fog lamp relay.
F4	20 A	All	Headlamp power wash relay.
F5	40 A	All	Cooling fan relay.
F6	10 A	All	A/C compressor clutch relay.
F7	40 A	All	LH HFS element.
F8	40 A	All	RH HFS element.
F9	30 A	Td5	FBH
F10	30 A	All	Fuel pump relay.
F11	30 A	All	SLABS ECU
F12	20 A	Td5	EAT ECU.
F12	20 A	V8	EAT ECU, ECM.
F13	10 A	All	Inertia switch, BCU, IDM, instrument pack.
F14	15 A	All	IDM
F15	15 A	All	ACE relay.
F16	10 A	All	Horn relay.

FUSE DETAILS

PASSENGER COMPARTMENT FUSE BOX

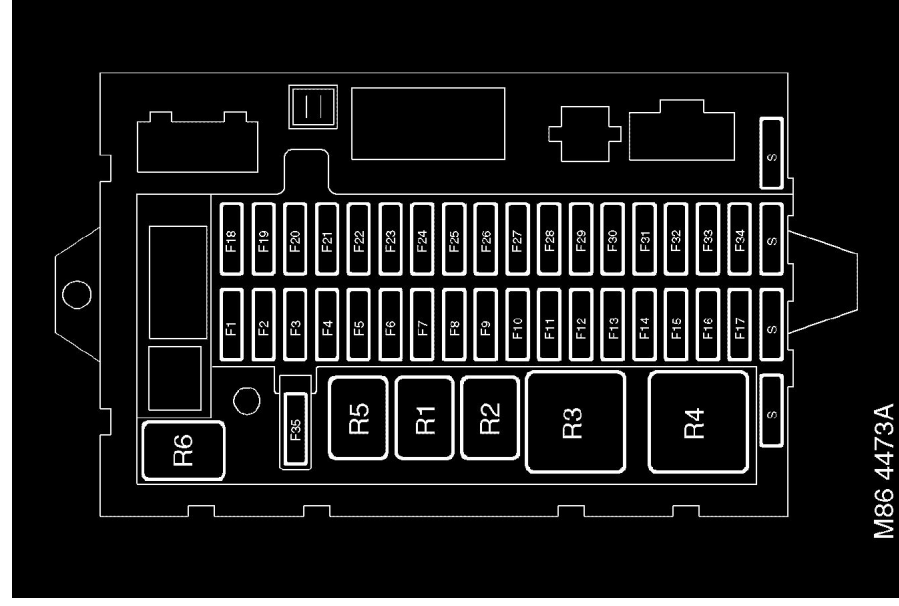

Relays (R)

1. LH indicators
2. RH indicators
3. Rear window lift
4. Ignition coils - V8 only
5. Daylight running lamps - if fitted
6. Daylight running lamps - if fitted

FUSE DETAILS

Fuse	Rating	Vehicle	Function
F1	25 A	All	RH front door lock motor, LH front door lock motor, RH rear door lock motor, LH rear door lock motor, tail door lock motor.
F2	10 A	All	Fuel flap release switch.
F3	10 A	All	LH headlamp main beam bulb.
F4	10 A	All	Rear fog lamp switch, trailer socket, header 295.
F5	15 A	All	Daylight running lamp relay.
F6	25 A	All	Rear blower motor relay.
F7	30 A	All	Blower motor relay.
F8	30 A	All	HRW element, drivers door mirror, passenger door mirror.
F9	10 A	All	LH headlamp dipped beam bulb.
F10	10 A	All	RH headlamp dipped beam bulb.
F11	10 A	All	Header 286.
F12	30 A	All	Sunroof ECU.
F13	30 A	All	Rear window lift relay.
F14	20 A	V8	Ignition coils
F15	20 A	All	IDM, header 291, header 761.
F16	15 A	All	Radio/cassette player, aerial, PDC ECU.
F17	15 A	All	Audio system power amplifier.
F18	15 A	All	Rear screen wiper motor.
F19	15 A	All	Header 292, windscreen wash/wipe switch.
F20	15 A	All	Transponder coil, header 294, header 725.
F21	15 A	All	Header 292, header 293.
F22	10 A	All	RH headlamp main beam bulb.
F23	10 A	All	BCU, starter relay.
F24	10 A	Td5	EAT ECU, header 287.
F24	10 A	V8	Ignition relay, EAT ECU, ECM.
F25	15 A	All	Brake pedal switch.
F26	10 A	All	Auxiliary relay.
F27	10 A	All	Header 760.
F28	10 A	All	SLABS ECU.
F29	10 A	All	BCU, ACE ECU, IDM.
F30	20 A	Td5	Mirror switch.
F30	20 A	V8	Cruise control switch, mirror switch.
F31	10 A	All	Header 289, ATC ECU, fresh/recirculated air switch.
F32	25 A	All	Accessory socket.

2.6


DISCOVERY SERIES II

FUSE DETAILS

Fuse	Rating	Vehicle	Function
F33	10 A	All	Header 290, header 759.
F34	30 A	All	BCU
F35	10 A	All	Instrument pack, SRS DCU.

FUSE DETAILS

LH/RH SATELLITE FUSE BLOCKS (SEATS)

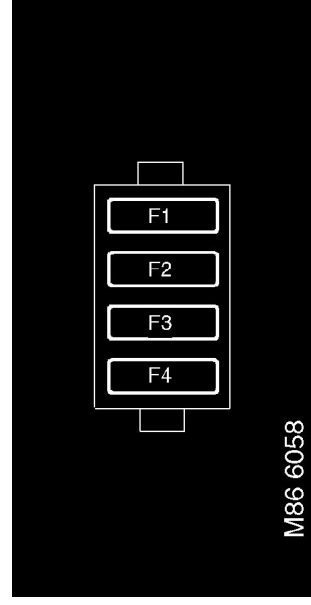

Fuse	Rating	Vehicle	Function
F1	n/a	All	Not used.
F2	40 A	All	Seat electrical supply.
F3	3 A	All	Lumber pump (inflate).
F4	3 A	All	Lumbar solenoid (deflate).


EARTH POINTS AND HEADER JOINTS

General

The following illustration indicates the general position of each earth point and earth header on the vehicle.

Refer to the Connector Details for locations of earth points and headers.

Refer to the Circuit Diagrams for details of electrical components and their associated earth headers.

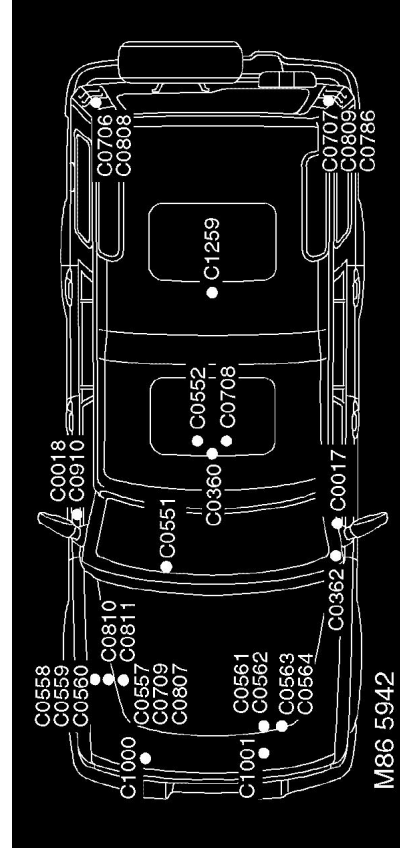

EARTH POINTS AND HEADER JOINTS

3.2

DISCOVERY SERIES II