

Air conditioning

In Defrost and Economy modes:

- Press the control briefly (*display shows recirculation symbol*):
Air recirculation operates for a pre-timed period of 4-6 minutes only.
- Press and hold for 2 seconds (*two beeps will sound, display shows recirculation symbol*):
Air recirculation operates until the control is pressed a second time to switch off.

NOTE: Prolonged recirculation may cause the windows to mist.

Temperature conversion (° F - ° C)

The temperature displays can be converted to or from Fahrenheit and Centigrade, as follows:

1. Press and hold the air recirculation button (9).
2. At the same time, press and hold the on/off button (5) for 3 seconds.
3. A 'bleep' will sound to indicate that the conversion has taken place.

General notes

- For optimum operating efficiency, ensure all the air vents (including those in the rear of the vehicle) are open.
- For the automatic temperature control system to function efficiently, all windows (and the sunroof) should be closed, and the air intake vents free from ice, snow, leaves or other debris.
- In very humid conditions, slight screen misting may be experienced when the air conditioning system is turned on. This is a natural occurrence on most automotive air conditioning systems. It is not a fault and misting will clear after a few seconds once the air conditioning system is operating.
- The air conditioning compressor will not function unless the engine is running.
- Surplus water produced by the dehumidifying process is expelled from the system via drain tubes beneath the vehicle. This may result in a small pool of water forming on the road when the vehicle is stationary and is not a cause for concern.
- If desired, the system's audible information chimes can be deactivated, as follows:
 - 1) Press 'Auto' button and hold.
 - 2) Press 'On/off' button and hold pressed for 3 seconds, then release.
 - 3) Press 'On/off' button again for a further 3 seconds, and release.
 - 4) Release 'Auto' button.