
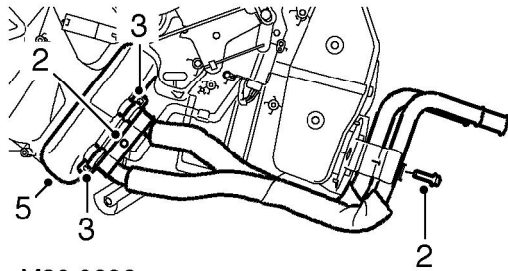


Heater matrix

🔑 80.20.29

Remove


1. Remove heater assembly.
 **HEATING AND VENTILATION, REPAIRS, Heater assembly - models with air conditioning.**



M80 0293

2. Remove 2 screws securing coolant pipe saddles and remove saddles.
3. Loosen screws securing coolant pipes to matrix, release clamps and remove coolant pipes.
4. Remove and discard 'O' rings.
5. Remove heater matrix.


Refit


1. Position heater matrix, using new 'O' rings fit coolant pipes and align clamps.
2. Fit saddle clamps and secure with screws
3. Tighten coolant pipe clamp screws.
4. Fit heater assembly.
 **HEATING AND VENTILATION, REPAIRS, Heater assembly - models with air conditioning.**

Pipe - Heater - Feed

🔑 80.25.07

Remove

 
1. Remove heater return pipe.
 **HEATING AND VENTILATION, REPAIRS, Pipe - Heater - Return.**

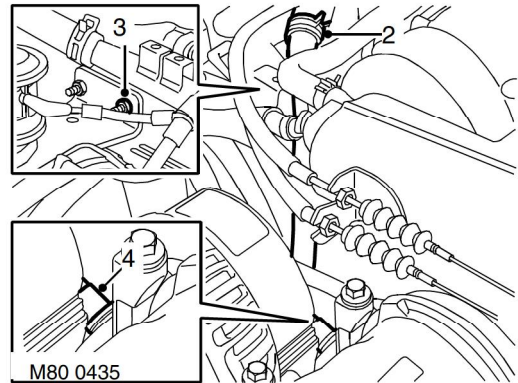

M80 0435

2. Release clip securing heater feed hose to heater feed pipe and disconnect hose from pipe.
3. Remove nut securing heater feed pipe to plenum chamber.
4. Press quick release connector and release heater feed pipe from plenum chamber.
5. Remove and discard 'O' ring from pipe.

Refit

1. Fit new 'O' ring to heater feed pipe and lubricate with castor oil.
2. Secure heater feed pipe to plenum chamber.
3. Fit and tighten nut securing heater feed pipe to plenum chamber.
4. Connect heater feed hose to heater feed pipe and secure with clip.
5. Fit heater return pipe.
 **HEATING AND VENTILATION, REPAIRS, Pipe - Heater - Return.**