





6. **RH drive models:** Remove brake servo heat shield.

 **MANIFOLDS AND EXHAUST SYSTEMS - V8, REPAIRS, Heat shield - brake servo - Without Secondary Air Injection.**

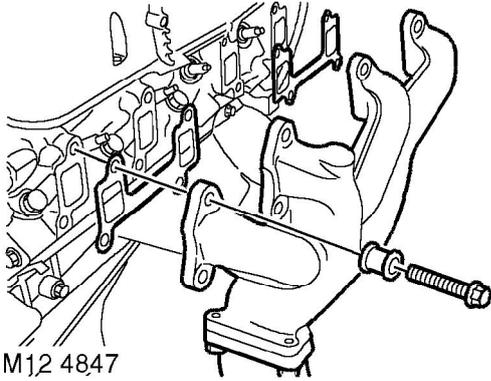


M12 4847

7. Remove 8 bolts securing exhaust manifold to cylinder head, release manifold and collect 2 gaskets.

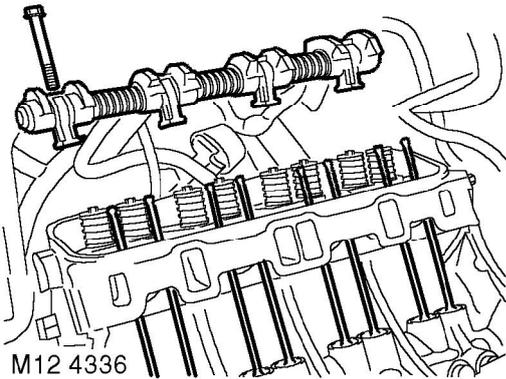

M12 4336

8. Progressively remove 4 bolts securing the rocker shaft and remove rocker shaft.
9. Remove push rods. **Store push rods in their fitted order.**

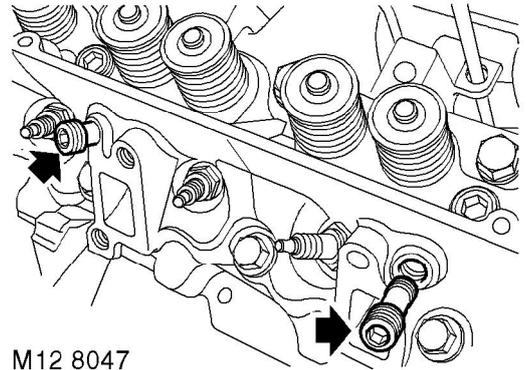


M12 8047

10. **Models with SAI:** Using a 9 mm hexagonal drive bit, remove 2 air injection adapters from cylinder head; discard adapters.

Note: To release the adapter thread locking agent and prevent damage to the cylinder head, remove the adapters by alternately loosening then tightening slightly. Repeat this procedure until adapters are removed.

CAUTION: Do not use air tools to remove adapters.

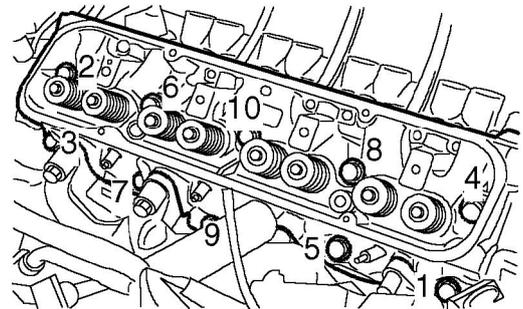

M12 4337

11. In the sequence shown, remove 10 bolts securing the cylinder head to block. Discard the bolts.
12. Remove cylinder head.

CAUTION: Support both ends of cylinder head on blocks of wood.