





Auxiliary drive belt

Check

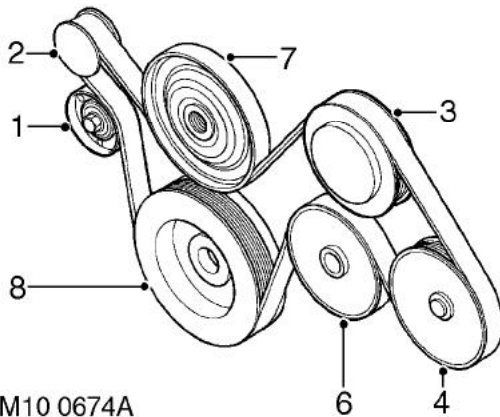

M10 0674A

TD5 auxiliary belt

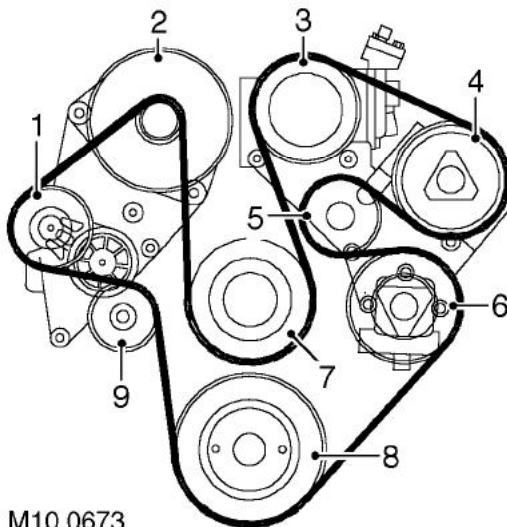

M10 0673

V8 auxiliary belt

- 1 Tensioner pulley
- 2 Alternator
- 3 A/C compressor
- 4 ACE pump
- 5 Idler pulley - V8 only
- 6 PAS pump
- 7 Viscous fan pulley
- 8 Crankshaft pulley
- 9 Idler pulley - V8 only

1. Check auxiliary drive belt for signs of splits, fraying, oil contamination and wear.

Auxiliary drive belt - V8 engine

1. Replace auxiliary drive belt.

CHARGING AND STARTING, REPAIRS, Belt - auxiliary drive.

Auxiliary drive belt - diesel engine

Replace

1. Replace auxiliary drive belt.

CHARGING AND STARTING, REPAIRS, Belt - auxiliary drive.