



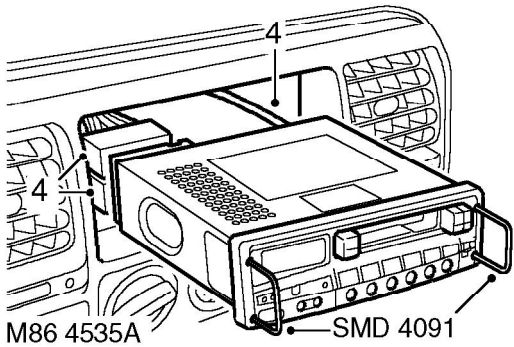


Radio

86.50.03

Remove

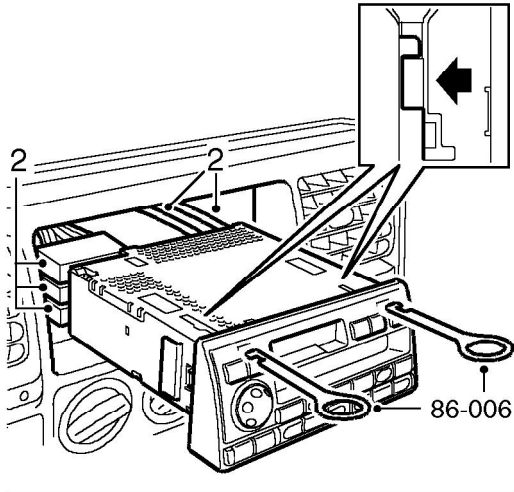

1. **High line models only** : Fit tool 86-006 with cutouts facing outwards into slots at top of radio, ensure that cutouts locate correctly with retaining clips (arrowed) and pull radio cassette player from fascia.
2. Disconnect 3 multiplugs and 2 coax cables and remove radio cassette player.
3. **Mid line models only** : Fit tool **SMD 4091** to release retaining clips and pull radio cassette player from fascia.
4. Disconnect 3 multiplugs and 2 coax cables and remove radio cassette player.

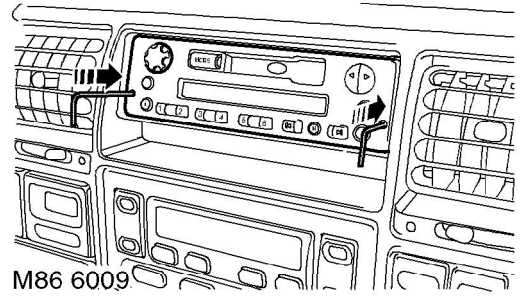

5. **Low line models only** : Using 2.5 mm Allen key, loosen bolts and release radio cassette player from fascia.
6. Disconnect multiplug and aerial and remove radio cassette player.

Refit

1. Position radio cassette player to fascia aperture and connect multiplugs and coax cable(s).
2. Slide radio into fascia until retaining clips engage.
3. **Low line models only** : Tighten Allen bolts.
4. Enter security code and check radio cassette player for correct operation.