

# Audible Warnings

---

## AUDIBLE WARNINGS

### Lights on reminder

If the lights are left on after the starter switch is turned off, a warning chime will sound when the driver's door is opened. The chime will cease as soon as the lights are switched off or when the driver's door is closed.

### Transfer gearbox in neutral reminder

A warning will chime continuously while the transfer gearbox is in neutral.

### Self-levelling suspension warning

- A single warning will chime whenever the off-road switch is operated to raise the vehicle to off-road height, or to return it to standard ride height.
- A warning will chime continuously while the remote handset is used to lower the vehicle from standard ride height, and also while returning the vehicle to standard ride height.
- A warning chime will sound 3 times if changes to or from off-road height are requested but not permitted.

### ABS warning

If a fault with the anti-lock braking system is detected, a warning will chime three times and the warning light will be illuminated. You may continue driving, but should understand that full ABS control may not be available. Consult your retailer at the earliest opportunity.

Three warnings may also be heard during engine start-up as part of the ABS system self-checks. This is normal unless the ABS warning light stays illuminated after the engine is running.

### ACE warning

A single warning will chime if a fault with the active cornering enhancement system is detected. The chime will coincide with the ACE warning light flashing RED.

### HDC warnings

- A warning will chime continuously in conjunction with the HDC warning light flashing green, whenever HDC has been selected but the system's operating criteria have not been met.
- A warning will chime continuously and the HDC failure warning light will illuminate (amber), whenever a fault is detected with the HDC system.
- A single warning will chime when HDC is deselected.

### Starter key reminder

If the key is left in the starter switch while the driver's door is open, a warning will chime continuously. The chime stops as soon as the door is closed or the key is removed from the starter switch.

### Seat belt reminder

If the driver's seat belt has not been fastened when the starter switch is turned on, a warning chime will sound (one second frequency). The chime operates in conjunction with the seat belt warning light and sounds for 6 seconds, or until the seat belt is fastened (whichever occurs first).

### Differential lock

Three warning chimes will be heard when differential lock is engaged or disengaged.