


# Warning Lights

## INSTRUMENT PANEL

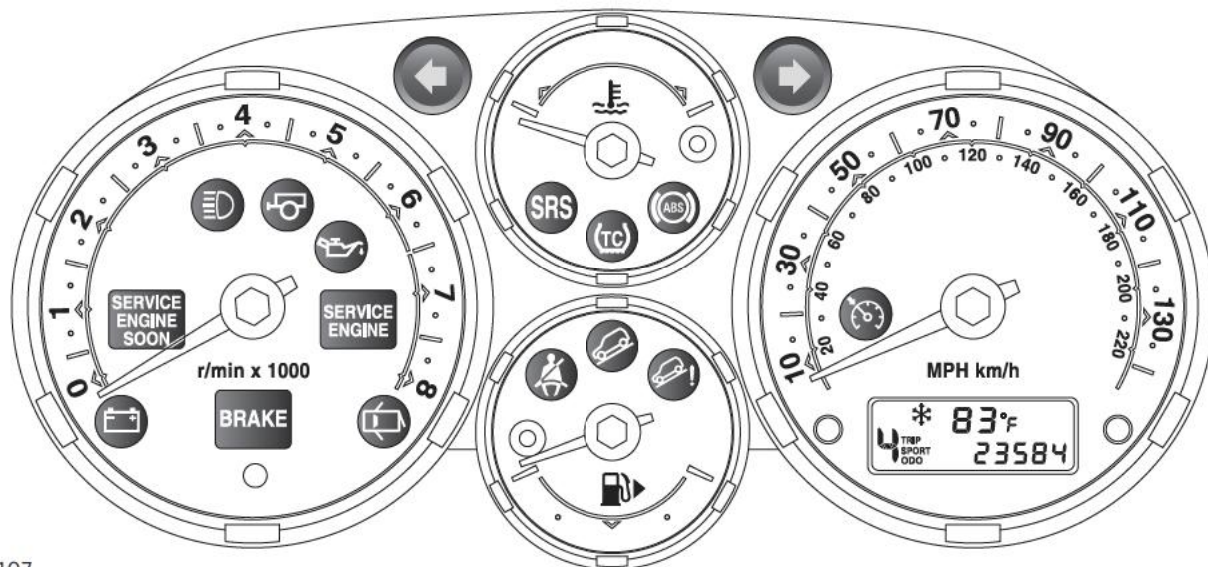

H5107

The location and specification of the warning lights may vary according to model and market requirements.

### Direction indicators - GREEN



The left or right warning light flashes in time with the relevant direction indicator when they are operated. If either warning light fails to flash or flashes rapidly, the selected direction indicator light is not operating.

**NOTE:** If the hazard warning lights are operated, both direction indicator warning lights will flash together.

### Headlight high beam - BLUE



Illuminates when the headlights are switched to high beam.

### Cruise control - AMBER



Illuminates when the cruise control master switch is turned on and cruise control is active, and extinguishes when the switch is turned off or if cruise control is deactivated.

### Service engine soon - AMBER



Illuminates as a bulb check when the ignition switch is turned to position 'II' and extinguishes when the engine is started. If the light illuminates while the engine is running, this indicates the detection of an emissions fault by the engine management system.

*If the light illuminates and the vehicle drives normally:*

- Arrange a service appointment at your earliest convenience - you may still drive the vehicle.

*If the light flashes and/or the vehicle does not drive normally:*

- Avoid high speeds and seek qualified assistance urgently.

### Service engine - AMBER



Illuminates as a bulb check when the ignition switch is turned to position 'II' and extinguishes when the engine is started. If the light illuminates, this indicates an engine service by a retailer is required.



# Warning Lights

## Parking brake & brake system - RED



The light illuminates when the Parking brake is applied and extinguishes when it is fully released. If the light illuminates while the Parking brake is released, a fault with the braking system is indicated, check the brake fluid level (see '*BRAKE FLUID*', page 187). If the light continues to illuminate, seek qualified assistance urgently.

## Door open - RED



Illuminates when any of the doors (including the taildoor and bonnet) are not fully closed. DO NOT drive the vehicle with the light illuminated.

## Traction control - AMBER



Illuminates as a bulb and system check when the ignition switch is turned to position 'II' and extinguishes after approximately 4 seconds. The light illuminates for a minimum of 2 seconds, whenever traction control is operating.

If the light illuminates continuously while traction control is NOT operating, a fault with the system is indicated; seek qualified assistance.

The light also has an overheat function: if traction control is required, but the brakes are too hot, the light will flash for the period when traction control is required and traction has been lost.

## ABS - AMBER



Illuminates for approximately 1 second as a bulb and system check when the ignition switch is turned to position 'II', and then extinguishes. The light may blink during this time.

If the light remains on or subsequently illuminates while driving, a fault has been detected by the self-monitoring system. This means that full ABS control may not be available and you should seek qualified assistance urgently.

## Hill descent control (HDC) 'failure' - AMBER



The light illuminates briefly as a bulb check when the ignition switch is turned to position 'II'. The light will flash if the brakes become in danger of overheating and continue flashing until the brakes have cooled sufficiently to enable HDC to operate again (see also '*HDC fade-out*', page 121).

If the light illuminates at any other time, a fault in the system is indicated. If this occurs, deselect HDC and consult your Land Rover Retailer.

## Hill descent control (HDC) 'information' - GREEN



Illuminates briefly as a bulb check when the ignition switch is turned to position 'II' and will illuminate when HDC is selected.

If HDC is selected when either of the operating gears is engaged (1st or reverse), the light will illuminate continuously.

When HDC is selected and a non-operating gear is engaged, the light will flash to inform the driver that HDC is selected, but not operating (see also '*HDC fade-out*', page 121).



# Warning Lights

---

## Low oil pressure - RED



Illuminates as a bulb check when the ignition switch is turned to position 'II' and extinguishes when the engine is started. If the light remains on, flashes on and off or illuminates continuously when driving, serious engine damage could occur; stop the vehicle as soon as safety permits and SWITCH OFF THE ENGINE IMMEDIATELY. Seek qualified assistance before driving.

When a trailer is not fitted, the warning light will flash once each time the direction indicator switch is operated.

**NOTE:** *The trailer direction indicator light will also flash when the hazard warning lights are activated, whether a trailer is attached or not.*

## Seat belt - RED\*



The light illuminates when the ignition switch is turned to position 'II' as a reminder to the driver to ensure that the seat belts of all occupied seats are securely fastened. The light extinguishes after approximately five seconds, or when the driver's seat belt is fastened.

## Airbag SRS - RED



The light illuminates when the ignition switch is turned to position 'II' and extinguishes after about five seconds. If the light illuminates at any other time, seek qualified assistance urgently.

## Battery charging - RED



The light illuminates as a bulb check when the ignition switch is turned to position 'II' and extinguishes as soon as the engine is running. If it remains on, or illuminates when driving, a fault with the battery charging system is indicated. Seek qualified assistance urgently.

## Trailer direction indicators - GREEN



Illuminates in conjunction with the vehicle direction indicator lights to show that all trailer indicator lights are functioning correctly. In the event of a bulb failure on the trailer, the warning light flashes once and then remains off.