

---


**Resistor unit - fan motor**


---

🔑 80.20.17

**Remove**

1. **LHD models only:** Disconnect air inlet connector hose from heater and evaporator.

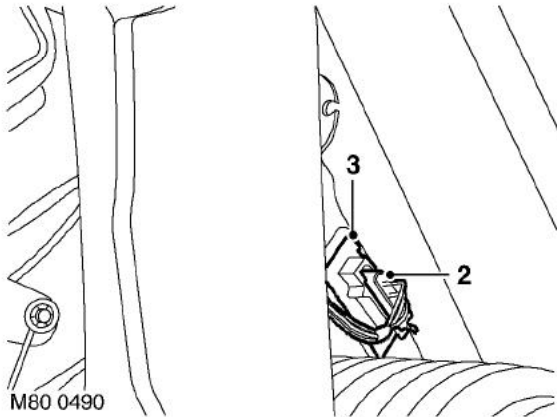

2. Disconnect multiplug from resistor.
3. Release clip and remove resistor from heater.

**Refit**

1. Fit resistor to heater.
2. Connect multiplug to resistor.
3. **LHD models only:** Connect air inlet connector hose.

 
---


**Matrix - heater**


---

🔑 80.20.29


**Remove**

1. Remove heater assembly.  
 **HEATING AND VENTILATION, REPAIRS, Heater unit.**

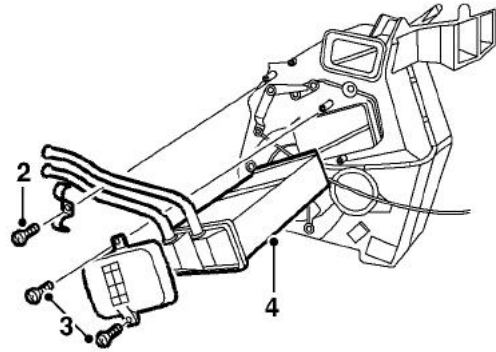

2. Remove screw securing pipe clamp to heater casing and remove clamp.
3. Remove 2 screws from matrix cover and remove cover.
4. Remove heater matrix.

**Refit**

1. Fit heater matrix to heater assembly.
2. Fit matrix cover and secure with screws.
3. Fit pipe clamp and secure with screw.
4. Fit heater assembly.  
 **HEATING AND VENTILATION, REPAIRS, Heater unit.**