


LIGHTING

Lamp assembly - tail

🔑 86.40.70


Remove

1. Open upper and lower tailgates.

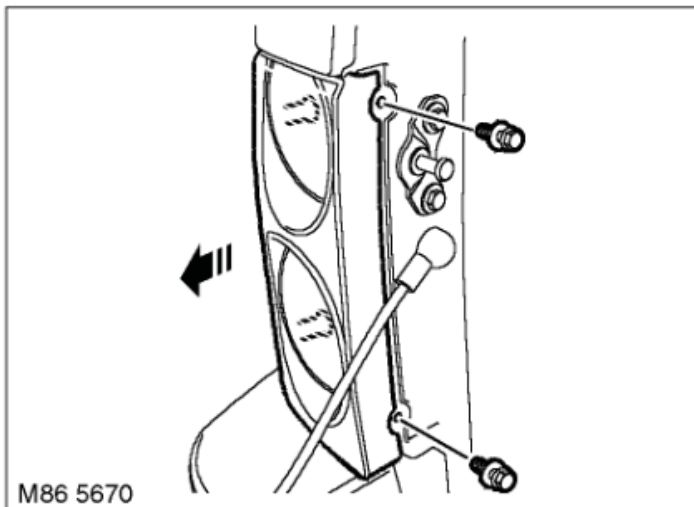

2. Remove 2 screws securing lamp to body.
3. Release lamp from mountings and withdraw horizontally. Disconnect multiplug and remove lamp.

CAUTION: Always protect paintwork and glass when removing trim finishers.

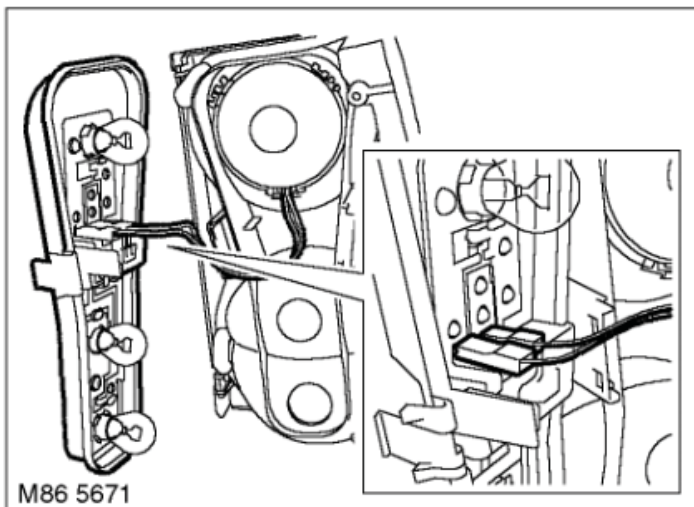

4. Depress clips and remove bulb holder from lamp assembly.
5. Remove bulb from bulb holder.
NOTE: Do not carry out further dismantling if component is removed for access only.
6. Remove remaining bulbs from holder.
7. Disconnect LED Lucar connections from bulb holder assembly.

Refit

1. Connect Lucars to bulb holder.
2. Fit bulbs to holders.
3. Fit bulb and secure bulb holder to lamp.
4. Connect multiplug to lamp.
5. Fit and secure lamp assembly.