




EXTERIOR FITTINGS

Mirror glass - exterior

🔧 76.11.08

Remove


- Using fingers, gently press lower edge of mirror glass inboard to maximum rotation.

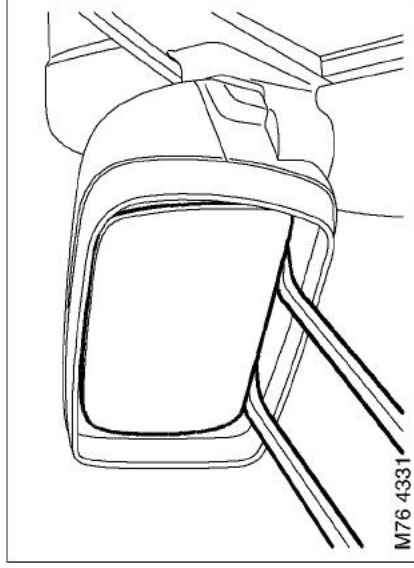

- Position 2 levers to lower edge of mirror glass surround, apply vertical leverage.

WARNING: Wear suitable eye protection when removing and refitting glass.

- Continue to apply an even but constant pressure, until glass releases from mounting.

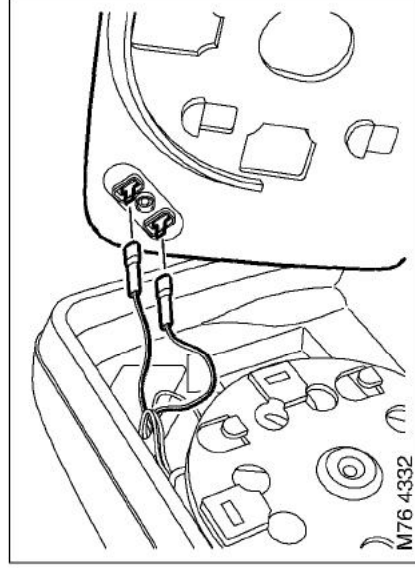

- Disconnect 2 Lucar connections from Mirror glass and remove.

Refit

- Connect Lucars to mirror glass.
- Position mirror glass to mounting, align 4 location pins to motor and secure clips.
- Check operation of mirror.

Motor - exterior mirror

🔧 76.11.09


Remove

- Remove exterior mirror glass.

⚠️ EXTERIOR FITTINGS, REPAIRS, Mirror glass - exterior.

- Remove exterior mirror.

⚠️ EXTERIOR FITTINGS, REPAIRS, Mirror - exterior.

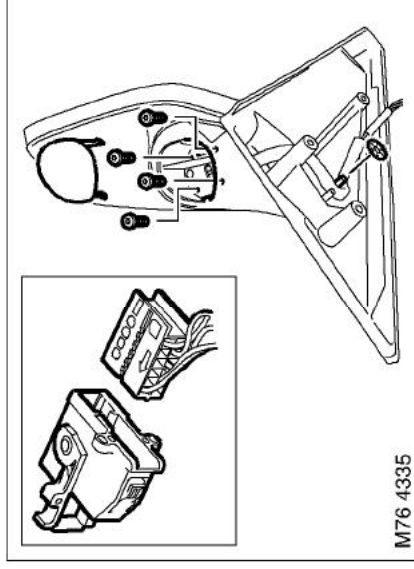

- Remove access cover from mirror.
- Remove 4 Torx screws securing mirror assembly to cheater casting.
- Remove star washer securing mirror harness to cheater plate.
- Remove locking body from multiplug.



- Remove 4 screws securing mirror motor to assembly, withdraw harness and remove motor.


EXTERIOR FITTINGS

Refit

1. Fit harness, position motor and secure with screws.
2. Feed harness through cheater casting, fit Torx screws and tighten to 14 Nm (10 lbf.ft).
3. Fit and secure access cover.
4. Align harness and secure with star washer.
5. Fit locking body to multiplug.
6. Fit exterior mirror.

 **EXTERIOR FITTINGS, REPAIRS, Mirror - exterior.**

 7. Fit exterior mirror glass.


 **EXTERIOR FITTINGS, REPAIRS, Mirror - exterior.**

Mirror - exterior


 **76.11.10**

Remove

1. Remove front door trim casing.
 **DOORS, REPAIRS, Trim casing - front door.**

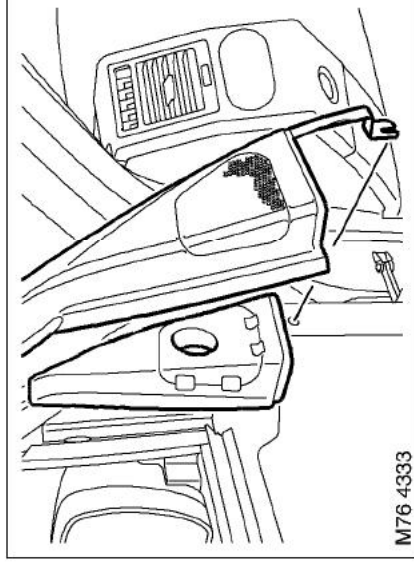

2. Release lower edge of door trim finisher from clip, move aside. Remove foam moulding and release harness.

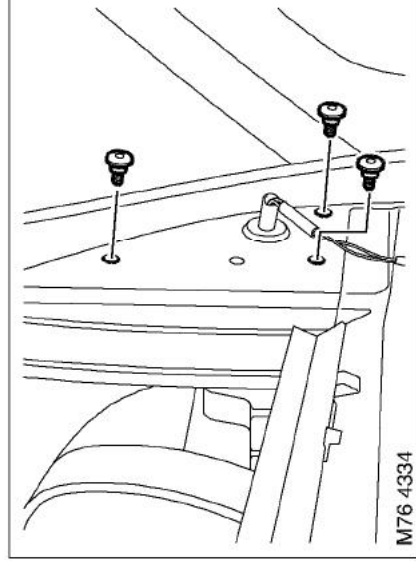

3. Remove 3 Torx screws securing exterior mirror to door, withdraw harness and remove mirror assembly.
4. Remove foam pad from cheater panel.



EXTERIOR FITTINGS

Refit


1. Fit foam pad to cheater panel.
2. Feed mirror harness through panel, position mirror, fit and tighten Torx screws to 10 Nm (7 lbf.ft).
3. Fit and secure upper door trim finisher.
4. Fit front door trim casing.
DOORS, REPAIRS, Trim casing - front door.

Tow bar


76.11.41

Remove

1. Remove bumper armature.
EXTERIOR FITTINGS, REPAIRS, Bumper armature - rear.

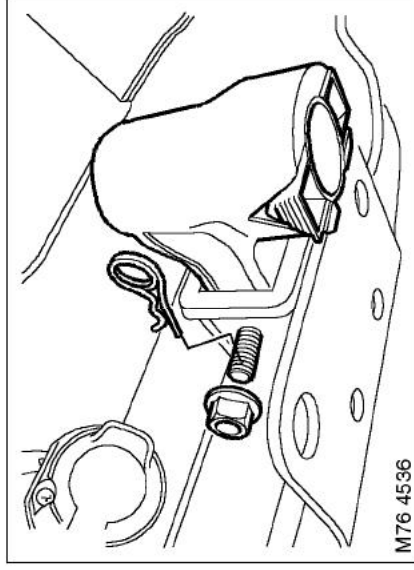

2. Remove tow ball locking pin.
3. Remove nut and bolt securing tow ball to tow bar. Remove the tow ball.

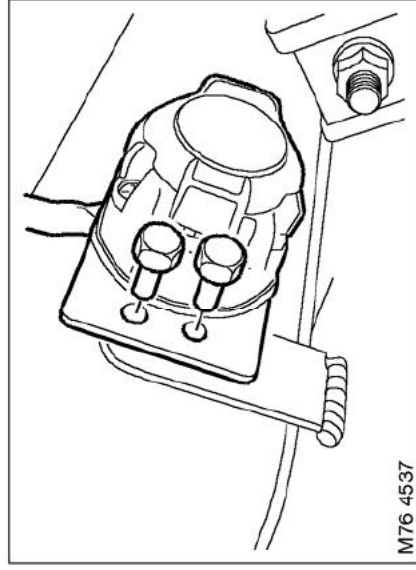

4. Remove 2 bolts securing socket to tow bar and position the socket aside.