Pollen Filter Page 1 of 1

Published: Apr 30, 2004




Pollen Filter (80.15.42)


Removal

1. Open the glove compartment to the service condition.

Release the glove compartment latch stops.

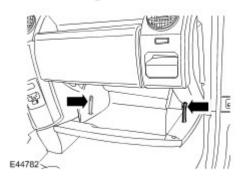

2. Remove the pollen filter housing cover.

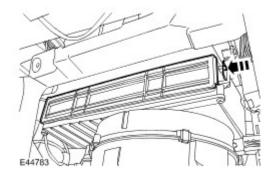

3 . Remove the pollen filter.

Installation

1. To install, reverse the removal procedure.

Clean the component mating faces.