

Alarm

ARMING THE ALARM



The engine is automatically immobilised when the remote control is removed from the starter control unit. The alarm system is automatically armed when the remote lock button is pressed. The hazard lamps will flash to indicate that the alarm is armed.

To set the alarm, briefly press the lock button once. The hazard warning lamps will flash once to confirm the alarm state.

Once armed the alarm will sound if the hood, taildoor, or a door are opened.

Alarm indicator



The alarm status is displayed by the indicator.

- Indicator off - alarm disarmed.
- Indicator flashes once per second - alarm is armed and engine immobilised.
- Indicator flashes rapidly - the alarm has been triggered.

Note: The alarm status indicator will flash rapidly when the alarm has been disarmed, but the remote has not been docked and the ignition switched on.

DISARMING THE ALARM



When the vehicle is unlocked using the remote control, the alarm is automatically disabled. The hazard lamps will flash twice to indicate that the alarm is disabled.

Disarming when the unlock button fails to work

If when pressed the unlock button fails to operate, the vehicle can still be unlocked and the alarm disabled. To unlock the vehicle :-

1. Unlock the driver's door using the key blade.
2. Dock the remote control.

Note: When the driver's door is unlocked using the key, the alarm will sound until the remote is docked.

Deactivating the alarm when triggered

If the alarm has been triggered it can be deactivated by pressing the remote unlock button, or by docking the remote control.