



Navigation System Antenna (86.53.61)

Removal

1. Remove the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the high mounted stoplamp. For additional information, refer to [High Mounted Stoplamp \(86.41.32\)](#) (Section 417-01)
3. Remove the liftgate trim panel.
 - ▶ Release the 4 clips.

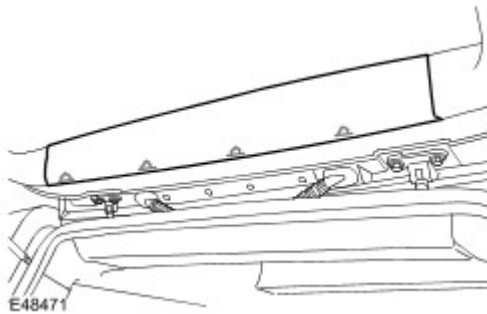

4. Remove the navigation system antenna.
 - ▶ Remove the screw.
 - ▶ Release and disconnect the electrical connector.
 - ▶ Cut through the adhesive retaining pad.

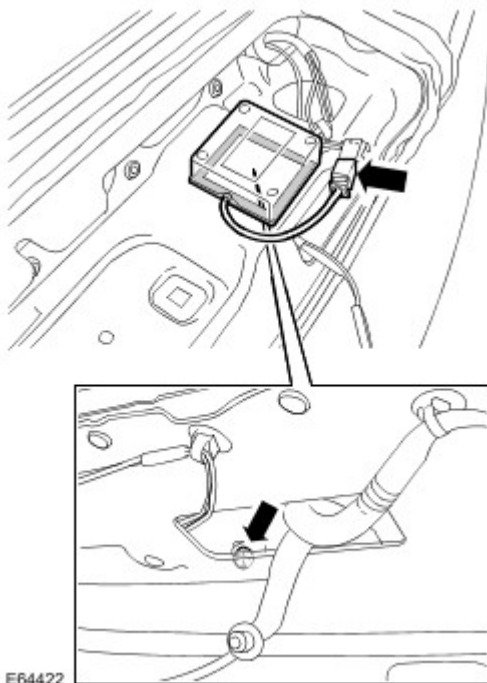

Installation

1. Clean the adhesive contact area.
2. Install the antenna.
 - ▶ Connect and secure the electrical connector.
 - ▶ Tighten the screw.
3. Install the liftgate upper trim panel.
 - ▶ Secure the clips.
4. Install the high mounted stoplamp. For additional information, refer to [High Mounted Stoplamp \(86.41.32\)](#) (Section 417-01)
5. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)