


Navigation System Display Module (86.53.20)

Removal

1.  **CAUTION: After switching of the ignition, wait for 2 minutes before disconnecting the battery. Failure to wait for 2 minutes will damage the navigation computer.**


Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)

2. Remove the instrument panel console. For additional information, refer to [Instrument Panel Console \(76.25.03\)](#) (Section 501-12)

3.  **CAUTION: Cover fibre optic cable connectors to minimise dust ingress and avoid bending the cables in a radius of less than 30 mm.**

Remove the navigation system display module.

- ▶ Remove the 4 Torx screws.
- ▶ Disconnect the fibre optic connector.
- ▶ Disconnect the 2 electrical connectors.

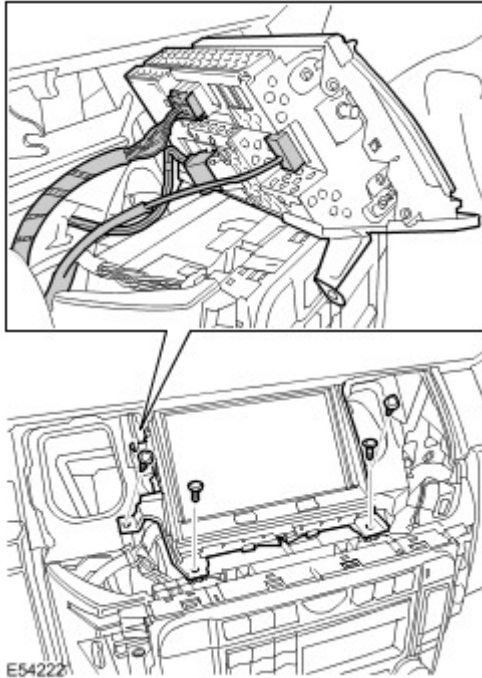

Installation

1. Install the navigation system display module.
 - ▶ Connect the electrical connectors.

- ▶ Connect the fibre optic connector.
- ▶ Tighten the Torx screws.

- 2 . Install the instrument panel console. For additional information, refer to [Instrument Panel Console \(76.25.03\)](#) (Section 501-12)
- 3 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)