




Rear Window Wiper Motor (84.35.12)

Removal

1. Remove the liftgate trim panel. For additional information, refer to [Liftgate Trim Panel \(76.34.11\)](#) (Section 501-05)
2. Remove the rear window wiper arm. For additional information, refer to [Rear Wiper Pivot Arm \(84.35.01\)](#) (Section 501-16)
3. Remove the rear window wiper motor.
 - ▶ Disconnect the electrical connector.
 - ▶ Release the clip.
 - ▶ Remove the 3 nuts.

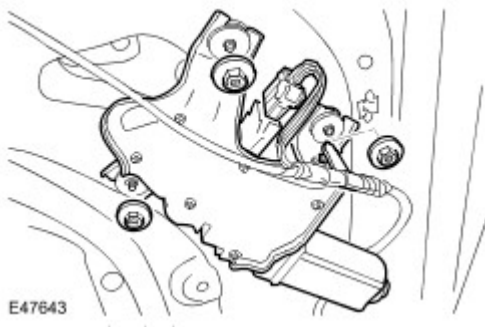

4. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the 3 rubber insulators.
 - ▶ Remove the metal inserts.



Installation

1. To install, reverse the removal procedure.
 - ▶ Tighten the nuts to 10 Nm (7 lb.ft).