




Sensor - neutral

➤ 41.20.64

Remove

1. Raise vehicle on ramp.

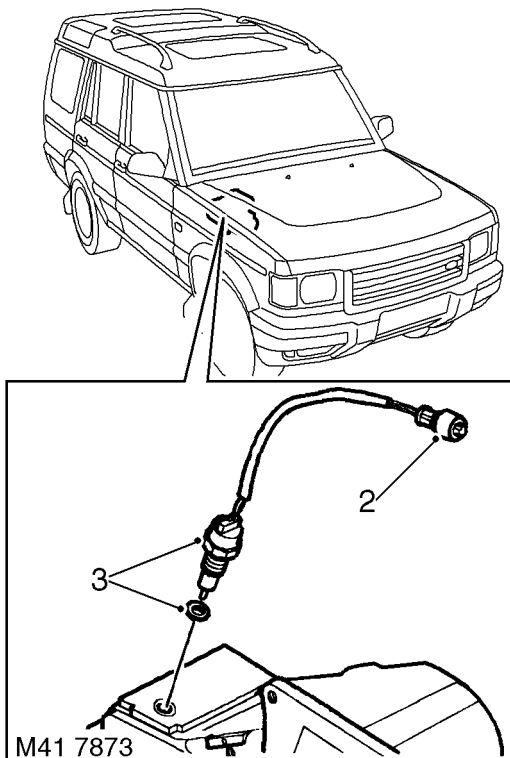

2. Disconnect multiplug from neutral sensor.
3. Remove sensor and discard sealing washer.

Refit


1. Clean sensor threads.
2. Fit new washer and apply sealant, Part No. STC 50552 to threads of sensor.
3. Fit and tighten sensor to 25 Nm (18 lbf.ft).
4. Lower vehicle on ramp.

Sensor - oil temperature - If fitted

➤ 41.20.80

Remove

1. Lower vehicle.

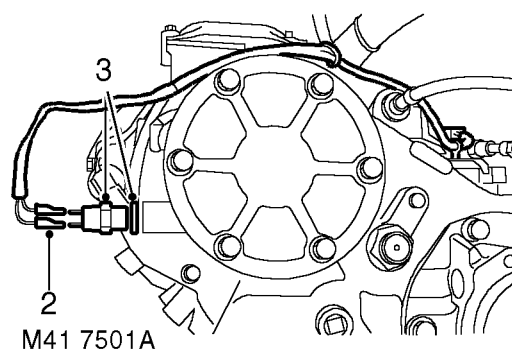

2. Disconnect 2 Lucar connectors from oil temperature sensor.
3. Remove oil temperature sensor and discard sealing washer.

Refit

1. Clean sensor and mating face on transfer box.
2. Fit new sealing washer, position oil temperature sensor and tighten to 25 Nm (18 lbf.ft).
3. Connect Lucar connectors to oil temperature sensor.
4. Lower vehicle.