


Warning Lights

INSTRUMENT PANEL

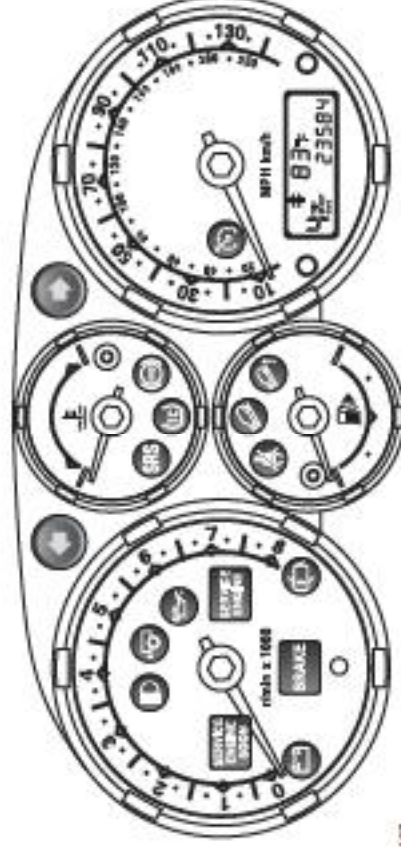

H6 107

The location and specification of the warning lights may vary according to model and market requirements.

Direction indicators - GREEN



The left or right warning light flashes in time with the relevant direction indicator when they are operated. If either warning light fails to flash or flashes rapidly, the selected direction indicator light is not operating.

NOTE: If the hazard warning lights are operated, both direction indicator warning lights will flash together.

Headlight high beam - BLUE



Illuminates when the headlights are switched to high beam.

Cruise control - AMBER



Illuminates when the cruise control master switch is turned on and cruise control is active, and extinguishes when the switch is turned off or if cruise control is deactivated.

Service engine soon - AMBER



Illuminates as a bulb check when the ignition switch is turned to position 'II' and extinguishes when the engine is started. If the light illuminates while the engine is running, this indicates the detection of an emissions fault by the engine management system.

If the light illuminates and the vehicle drives normally.

- Arrange a service appointment at your earliest convenience - you may still drive the vehicle.

If the light flashes and/or the vehicle does not drive normally.

- Avoid high speeds and seek qualified assistance urgently.

Service engine - AMBER



Illuminates as a bulb check when the ignition switch is turned to position 'II' and extinguishes when the engine is started. If the light illuminates, this indicates an engine service by a retailer is required.