



RR4149

## Power steering box components

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1. Housing complete with sector shaft bearings</li> <li>2. Cover plate complete with bearing</li> <li>3. Sector shaft</li> <li>4. Hydraulic piston/rack</li> <li>5. Worm/valve and torsion bar assembly</li> <li>6. Shims for centralizing worm/valve</li> <li>7. Ball race (2)</li> <li>8. 'Teflon' seals for valve sleeve (3)</li> <li>9. Bearing adjuster, locknut and seal</li> <li>10. Worm shaft pressure seal, circlip and dirt excluder</li> </ol> | <ol style="list-style-type: none"> <li>11. 'Teflon' and rubber seal for piston</li> <li>12. End cover seal and snap ring</li> <li>13. Adjustment components for piston/rack</li> <li>14. Hydraulic pipe</li> <li>15. Bleed screw</li> <li>16. Sector shaft adjustment lock nut with seal</li> <li>17. Cover plate bolts (4)</li> <li>18. Cover plate seal</li> <li>19. Seal, washer and backup seal</li> <li>20. Circlip and dust cover</li> </ol> |
|---|--|