




17. top LH front of engine (MFI-T16)  
 X114 Engine Coolant Temperature Gauge Sensor  
 X126 Engine Coolant Temperature Sensor  
 C152 (2-N)

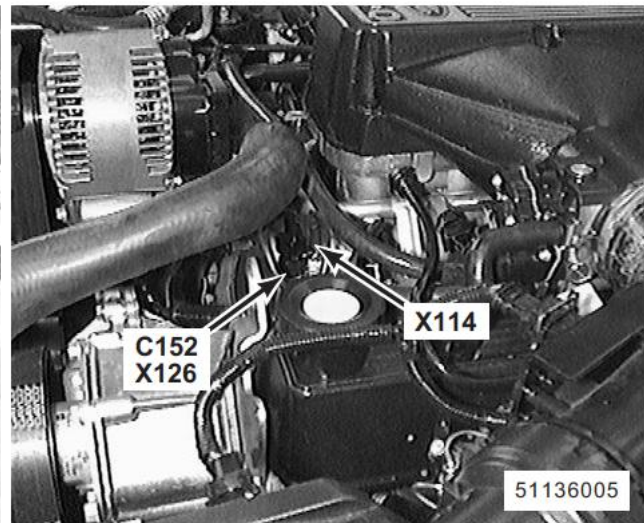

18. top LH front of engine (SFI-V8)  
 X114 Engine Coolant Temperature Gauge Sensor  
 X126 Engine Coolant Temperature Sensor  
 C152 (2-N)

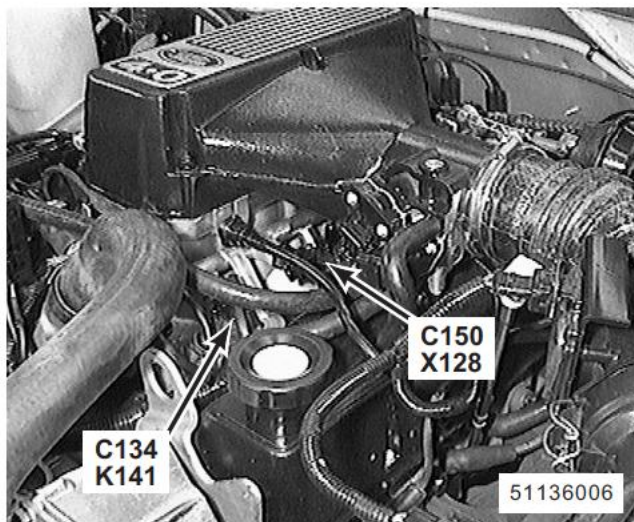

19. top LH front of engine (SFI-V8)  
 K141 Fuel Injectors  
 X128 Engine Fuel Temperature Sensor  
 C134 (2-B)  
 C150 (2-S)

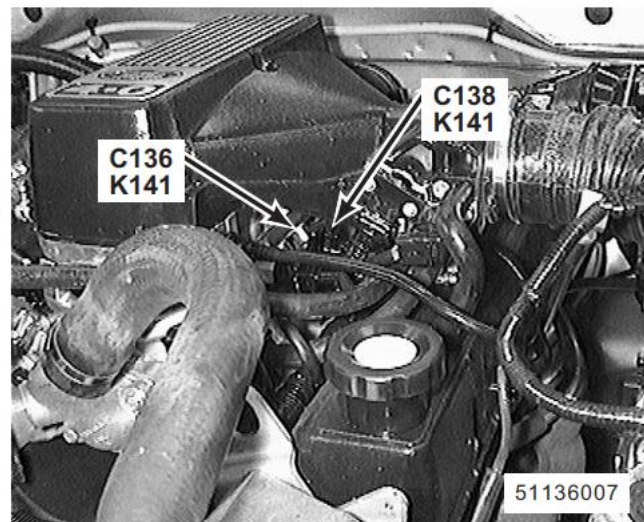

20. top LH front of engine (SFI-V8)  
 K141 Fuel Injectors  
 C136 (2-B)  
 C138 (2-B)