




105. lower RH side of engine (SFI-V8)
X296 Right Knock Sensor
C1023 (2-B)

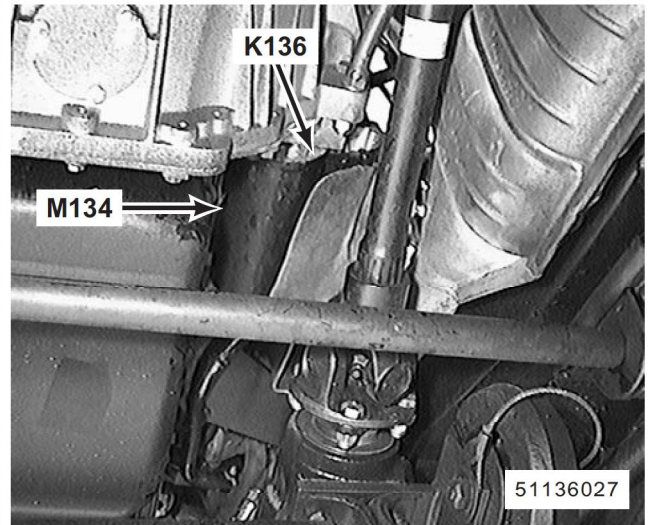

106. lower RH rear of engine (SFI-V8)
K136 Starter Solenoid
M134 Starter

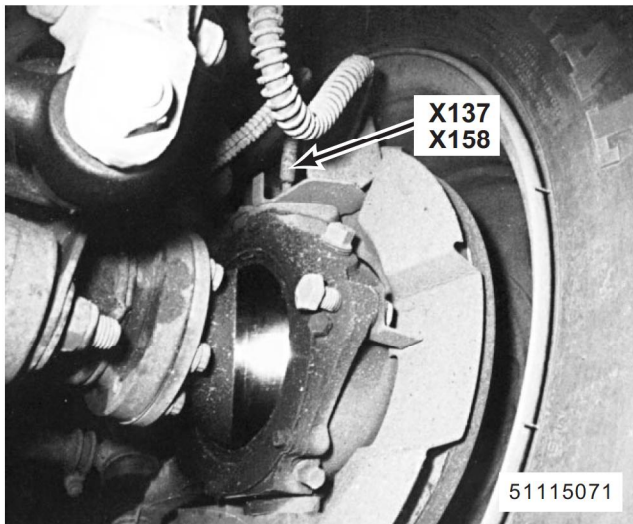

107. behind LH front wheel (RH front wheel similar)
X137 Left Front Wheel Speed Sensor
X158 Right Front Wheel Speed Sensor

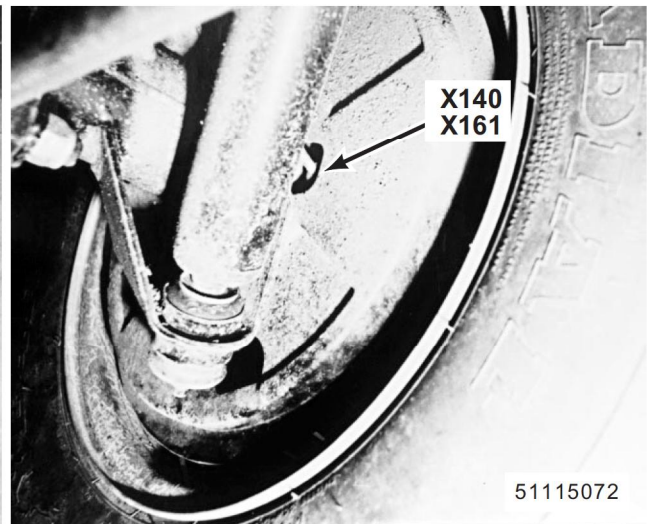

108. behind LH rear wheel (RH rear wheel similar)
X140 Left Rear Wheel Speed Sensor
X161 Right Rear Wheel Speed Sensor