




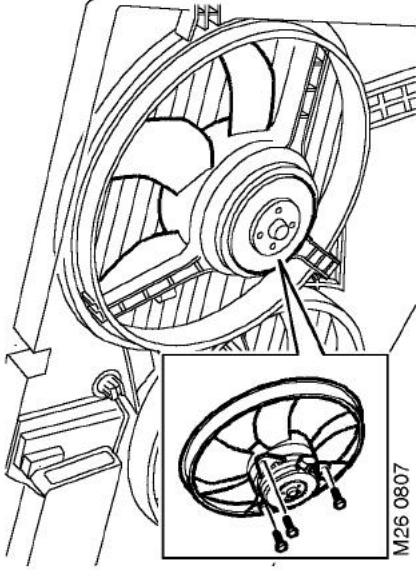
## COOLING SYSTEM - K SERIES KV6

### Cooling fan and motor

26.25.22

#### Remove


1. Remove radiator.  
 **COOLING SYSTEM - K SERIES KV6, REPAIRS, Radiator assembly.**



2. Remove 3 bolts securing LH cooling fan and motor assembly to fan cowl. Remove fan and motor assembly.

#### Refit

1. Position fan and motor assembly to fan cowl, fit and tighten bolts to 5 Nm (4 lbf.ft).
2. Fit radiator.


 **COOLING SYSTEM - K SERIES KV6, REPAIRS, Radiator assembly.**

### Control unit - radiator cooling fan - 2002 MY On

26.25.43

#### Remove

1. Disconnect battery earth lead.

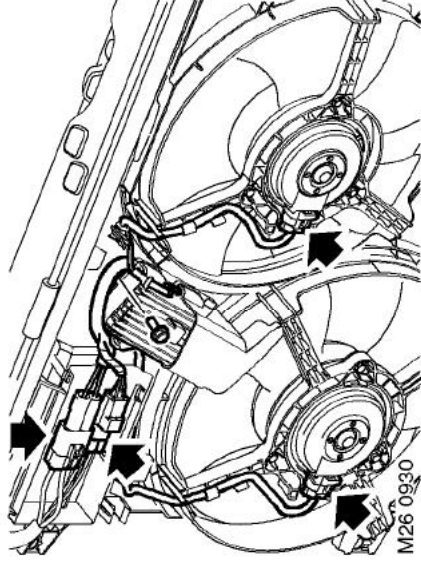

2. Release multiplugs from clips and disconnect 2 body harness multiplugs.
3. Disconnect multiplugs from cooling fan motors and release harness from clips on cooling fan cowl.
4. Remove screw securing control unit.
5. Release control unit from fan cowl.

#### Refit

1. Carefully position control unit in cowl and secure with screw.
2. Connect body harness multiplugs and secure to cowl.
3. Secure LH and RH harness to retaining clips and connect multiplugs.
4. Connect battery earth lead.