 



Checking Resistance of Fuel Senders

L359 Petrol Senders

6 5 4 3 2 1 Pin numbers tank connector



1. Remote Pump sender -ve
2. Pump sender ve
3. Pump ve
4. Pump ve
5. Filter Earth
6. Remote Sender ve

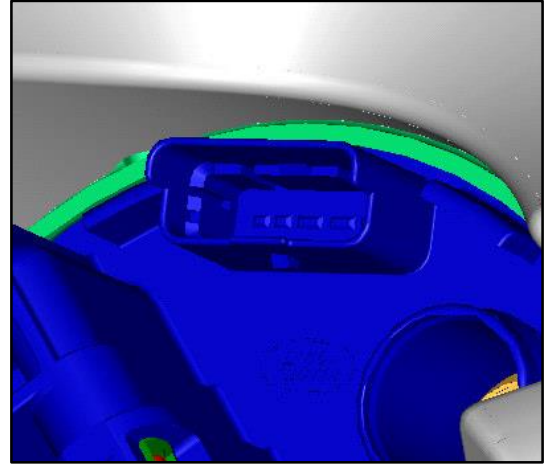

L359 Diesel Senders

1. Pump sender -ve
2. Pump sender ve
3. Pump ve
4. Pump ve
5. Remote Sender -ve
6. Remote Sender ve

Petrol

Test the remote sender by measuring resistance between pins 1 and 6.

Test pump side sender by measuring resistance between pins 1 and 2.

Diesel

Test the remote sender by measuring resistance between pins 5 and 6.

Test pump side sender by measuring resistance between pins 1 and 2.

If measured resistances are between 50-1020 Ohms, the senders are within range. If not, remove the pump top flange & check the wiring inside the tank.