


Climate Control - Evaporator Temperature Sensor

Removal and Installation



Removal

1.

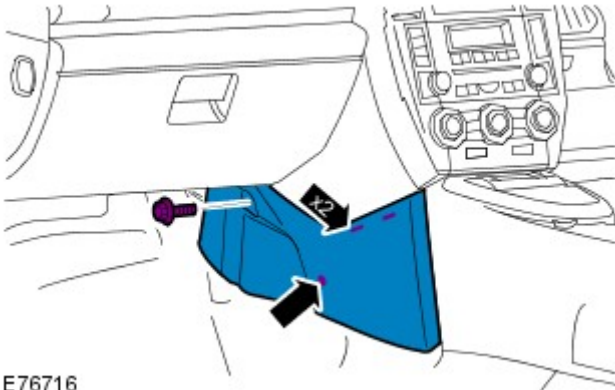

E76716

2.

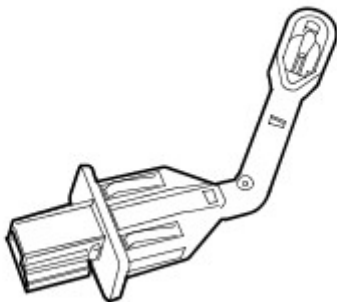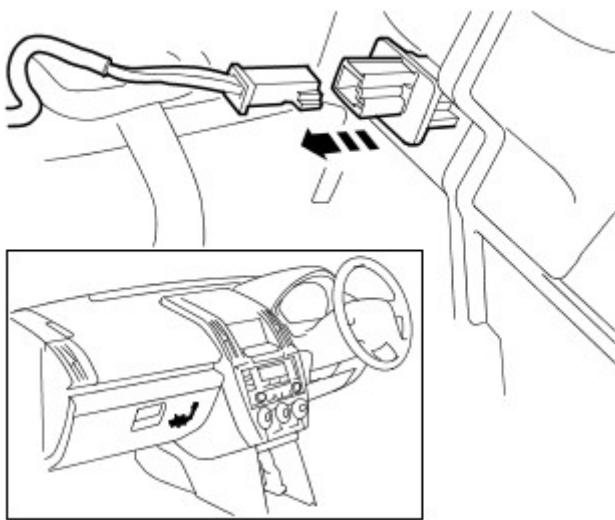

E 76715

Installation

1. To install, reverse the removal procedure.