





Camshaft Drive Cassette LH (12.65.36)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the cylinder head LH assembly. For additional information, refer to [Cylinder Head LH \(12.29.04\)](#) (Section 303-01)
3. Remove the timing drive components. For additional information, refer to [Timing Drive Components \(12.65.13\)](#) (Section 303-01)
4. Remove the camshaft drive cassette assembly.
 - ▶ Remove the bolt retaining the chain guide.

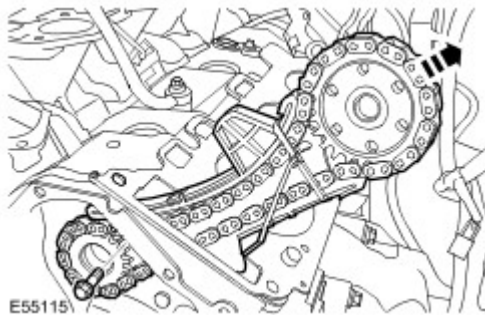

5. **NOTE :**
 - Do not disassemble further if the component is removed for access only. Disassemble the cassette assembly.
 - ▶ Release the cable tie.
 - ▶ Remove the sprockets and the chain.
 - ▶ Clean and inspect the components for deterioration.

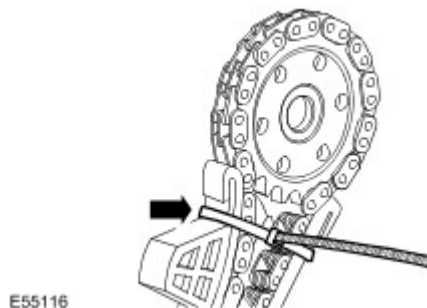

Installation

1. Assemble the cassette assembly.
 - ▶ Install the chain and the sprockets.

- ▶ Secure with a cable tie.
- 2 . Install the camshaft drive cassette assembly.
 - ▶ Tighten the bolt to 25 Nm (18 lb.ft).
- 3 . Install the timing drive components. For additional information, refer to [Timing Drive Components \(12.65.13\)](#) (Section 303-01)
- 4 . Install the cylinder head LH assembly. For additional information, refer to [Cylinder Head LH \(12.29.04\)](#) (Section 303-01)
- 5 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)