



Hydraulic Timing Chain Tensioner LH (12.65.65)

Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the intake manifold. For additional information, refer to [Intake Manifold \(30.15.02\)](#) (Section 303-01)

3.



CAUTION: Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

Remove the LH hydraulic timing chain tensioner.

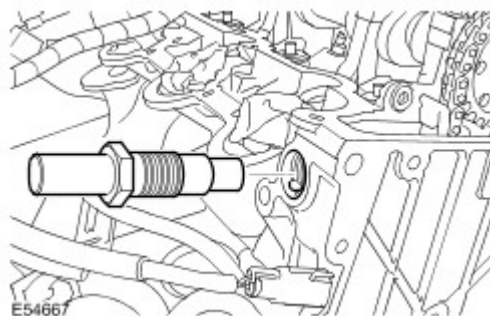

Installation

1. Install the LH hydraulic timing chain tensioner.
 - ▶ Clean the component mating faces.
 - ▶ Tighten the tensioner to 45 Nm (33 lb.ft).
2. Install the intake manifold. For additional information, refer to [Intake Manifold \(30.15.02\)](#) (Section 303-01)
3. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)