




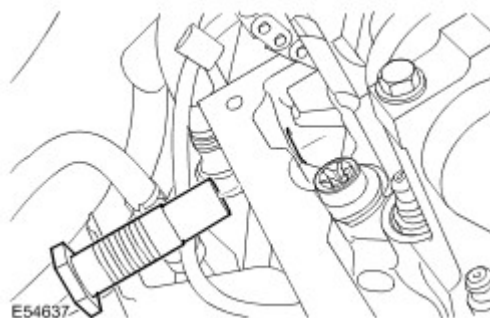
Hydraulic Timing Chain Tensioner RH (12.65.66)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the engine cover. For additional information, refer to [Engine Cover - 4.0L \(12.30.50\)](#) (Section 501-05)

3.  **CAUTION: Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.**

Remove the RH hydraulic timing chain tensioner.



Installation

1. Install the RH hydraulic timing chain tensioner.
 - ▶ Clean the component mating faces.
 - ▶ Tighten the tensioner to 45 Nm (33 lb.ft).
2. Install the engine cover. For additional information, refer to [Engine Cover - 4.0L \(12.30.50\)](#) (Section 501-05)
3. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)